

WIRING DIAGRAM

For 95% Single Stage Ultra Low NOx Furnaces

Refer to the Installation Instructions provided with the furnace for the proper heating and cooling speeds for your application.

120 Volt / 1 Ph. / 60 Hz.

Refer to the Installation Instructions for control error codes.

If any of the original wire supplied with the furnace must be replaced, it must be replaced with wiring material having a temperature of at least 105° C. Use copper conductors only.

