

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS 35% MANUAL FRESH AIR 547832

FORM# 594A-0298

The 0-35% manual outside air system is designed to replace the unit duct cover. No drilling on the unit or field assembly is required. The amount of outside air is controlled by simply adjusting the slide damper. The panel is fully insulated.

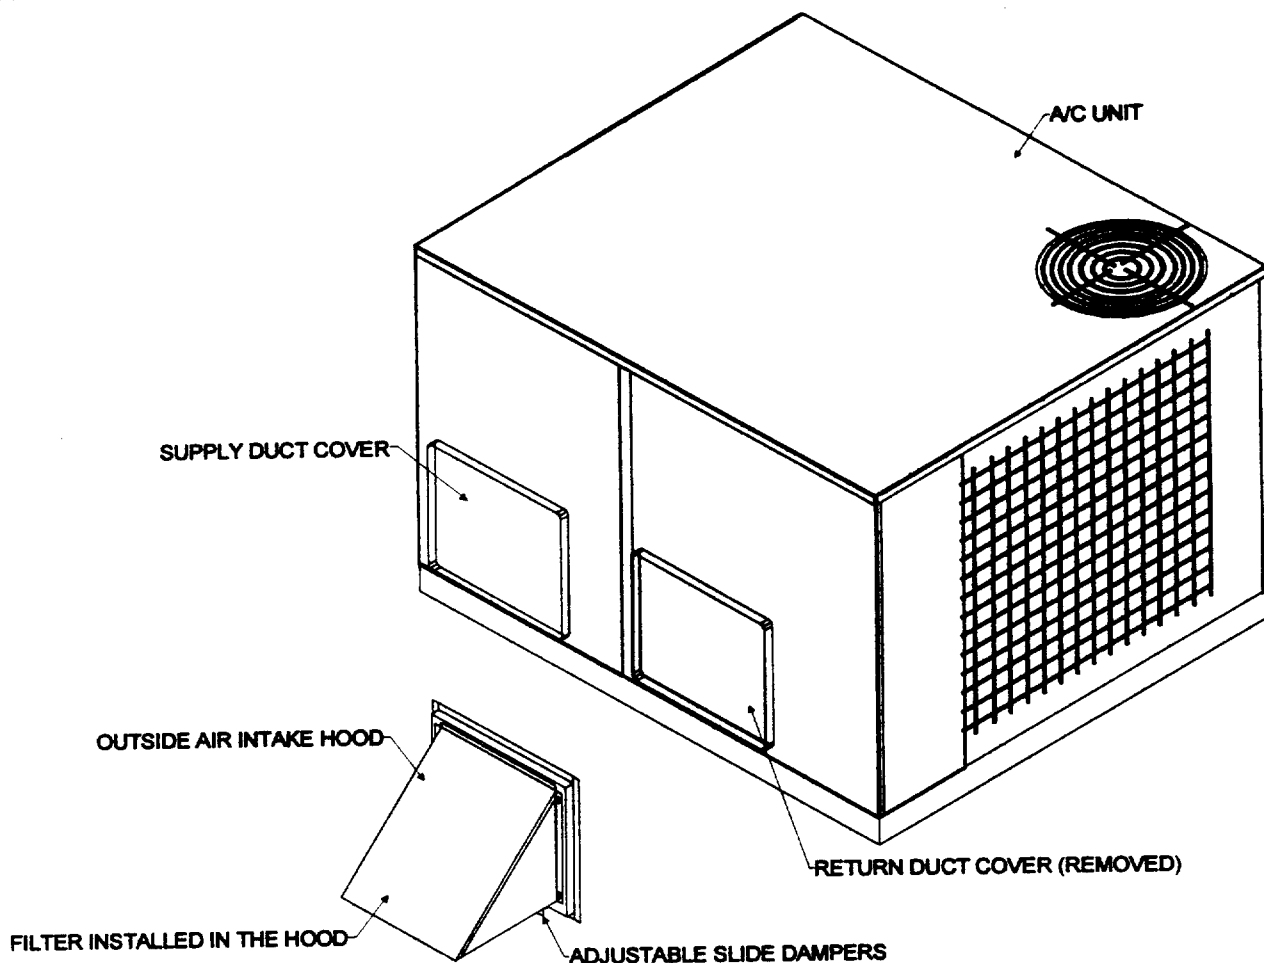


Figure 1

STEP 1:

Check for correct number of parts. See list below:

1 ea. - Outside Air Intake panel assembly with hood and slide dampers.

STEP 2:

Remove return air duct cover from unit, and save the screws.

STEP 3:

Install outside air assembly as shown in Figure 1 over duct opening with the screws removed in Step 2.

STEP 4:

Adjust the slide damper to the desired position.

NOTE: It will be necessary to remove intake hood, so the second slide damper can be removed, if the full amount of outside air is required.