


Gas Furnaces


Installation Instructions

***TA Full Size Series High Efficiency (Upflow/Horizontal) Two-Stage Furnace with Fixed Speed Blower**

***TK Full Size Series High Efficiency (Downflow) Two-Stage Furnace with Fixed Speed Blower**

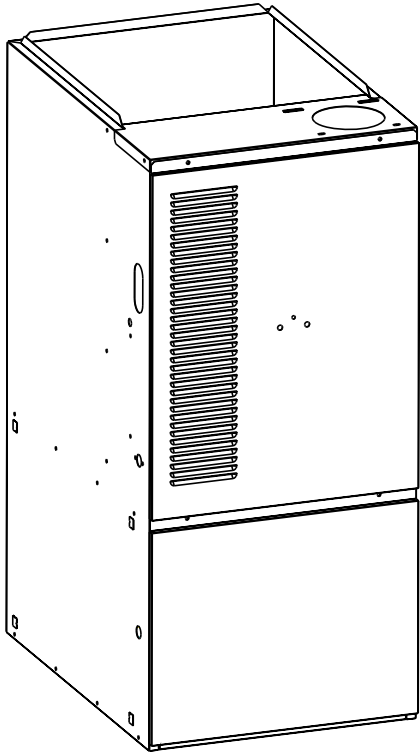

***TA 80+ Upflow/Horizontal**

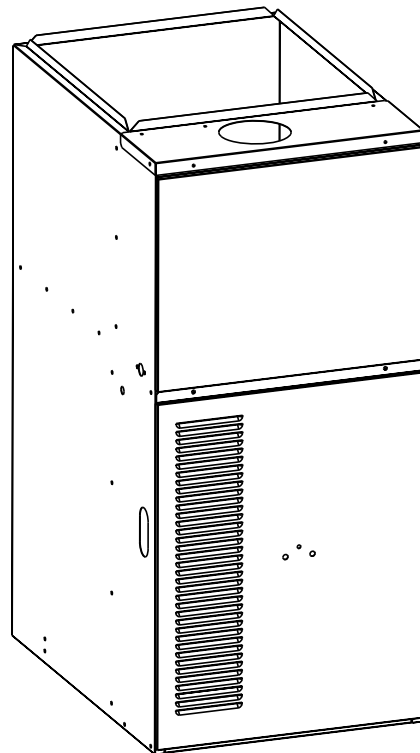

***TK 80+ Downflow**

WARNING:

Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information consult a qualified installer, service agency, or the gas supplier.

FOR YOUR SAFETY:

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
 - Extinguish any open flame.
-

These instructions are primarily intended to assist qualified individuals experienced in the proper installation of this appliance. Some local codes require licensed installation/service personnel for this type of equipment. Read all instructions carefully before starting the installation.

Table of Contents

Furnace Specifications	4-5
Upflow/Horizontal Models	4
Downflow Models	5
Capacities-Furnace Airflow Data	7
Safety Information	8
Installation Requirements	6-8
Supply Air Plenum Installation	8-10
Installation on a Concrete Slab	10
Installation on a Combustible Floor	10
Venting and Combustion Air Requirements	12
General	12
Installation in an Unconfined Space	12
Installation in a Confined Space	13
Horizontal Furnace Installation	13
Air From Inside	14
Outdoor Air Using Vertical Ducts	14
Air Directly Through an Exterior Wall	15
Outdoor Air Using A Crawl Space and Ventilated Attic	15
Outdoor Air Through Horizontal Ducts	15
Venting Requirements	15
General	15
Category I - Common Venting	16
Category III - Horizontal Venting	17
Horizontal Venting for *TK Models	18
Horizontal Power Venting	19
Vent Termination Clearance	20
Location of Outdoor Terminations	20
Horizontal Installation	20
Flexible Vent Systems	21
Circulating Air Supply	21
General	21
Return Air	21
Gas Supply and Piping	23
General	23
Leak Check	23
High-Altitude Application	24
Conversion	25
Natural Gas High Altitude Conversion	25
LP/Propane Gas Sea Level and High Altitude Conversion	25
Electrical Wiring	26
General	26
Line Voltage Wiring	27
Low Voltage Wiring	28
Start-up & Adjustments	29
General	29
Start-Up Procedures	29
Verifying and Adjusting Firing Rate	29
Verifying and Adjusting Temperature Rise	29-30
Verifying Burner Operation	31
Verifying Operation of Supply Air Limit Switch	32
Wiring Diagram	34
Description of Components	34
Maintenance	35
Vent System	36
Air Filter(s)	36
Lubrication	37
Blower Compartment	37
Heat Exchanger and Burner Maintenance	37
Cleaning of Flue Passages	37
Cleaning of Burners	38
System Operation Information	38
General	38
Sequence of Operation	38
Heating Mode	38
Cooling Mode	38
Fan Mode	39
Furnace Fails to Operate	39
Installation/Performance Checklist	40

FURNACE SPECIFICATIONS - Upflow/Horizontal Models

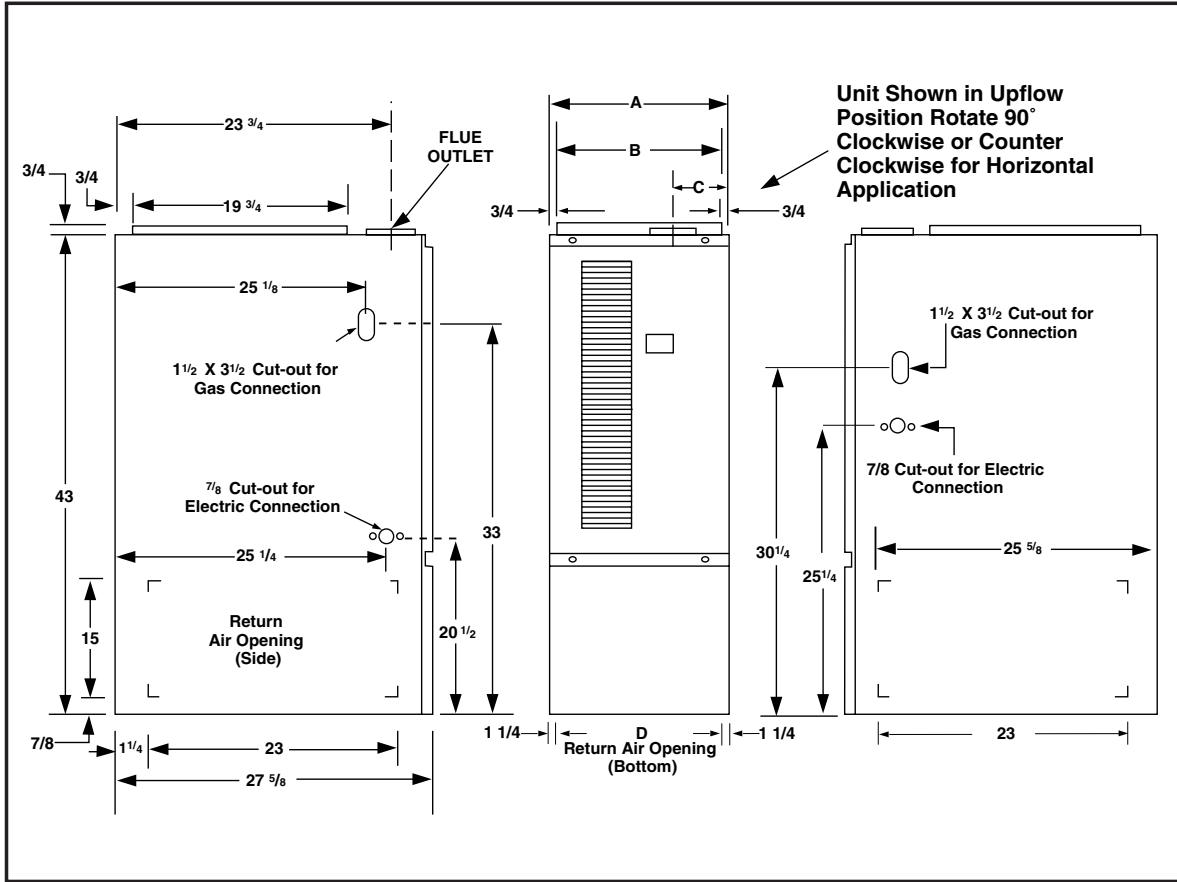


Figure 1A. Upflow Unit Dimensions

FURNACE DIMENSIONS AND SHIPPING WEIGHTS								
Model *TA	High Input (Btuh)	Low Input (Btuh)	Dimensions				Shipping Weight (lbs)	D (IN.)
			A (in.)	B (in.)	C (in.)	Flue Outlet (in.)		
060(*)-08A	60,000	42,000	14 1/4	12 3/4	3 1/4	4	120	11 3/4
060(*)-12A	60,000	42,000	14 1/4	12 3/4	3 1/4	4	132	11 3/4
072(*)-12	72,000	50,400	19 3/4	18 1/4	3 3/4	4	135	11 3/4
072(*)-16	72,000	50,400	19 3/4	18 1/4	3 3/4	4	152	11 3/4
096(*)-12	96,000	67,000	19 3/4	18 1/4	3 3/4	4	135	11 3/4
096(*)-16	96,000	67,000	19 3/4	18 1/4	3 3/4	4	152	11 3/4
096(*)-20	96,000	67,000	19 3/4	18 1/4	3 3/4	4	174	11 3/4
120(*)-16C	120,000	84,000	22 1/2	21	3 3/4	4	174	20
120(*)-20C	120,000	84,000	22 1/2	21	3 3/4	4	182	20

Note: (*) Can be C or N

Table 1A. Upflow Furnace Dimensions and Shipping Weights

FURNACE SPECIFICATIONS - Downflow Models

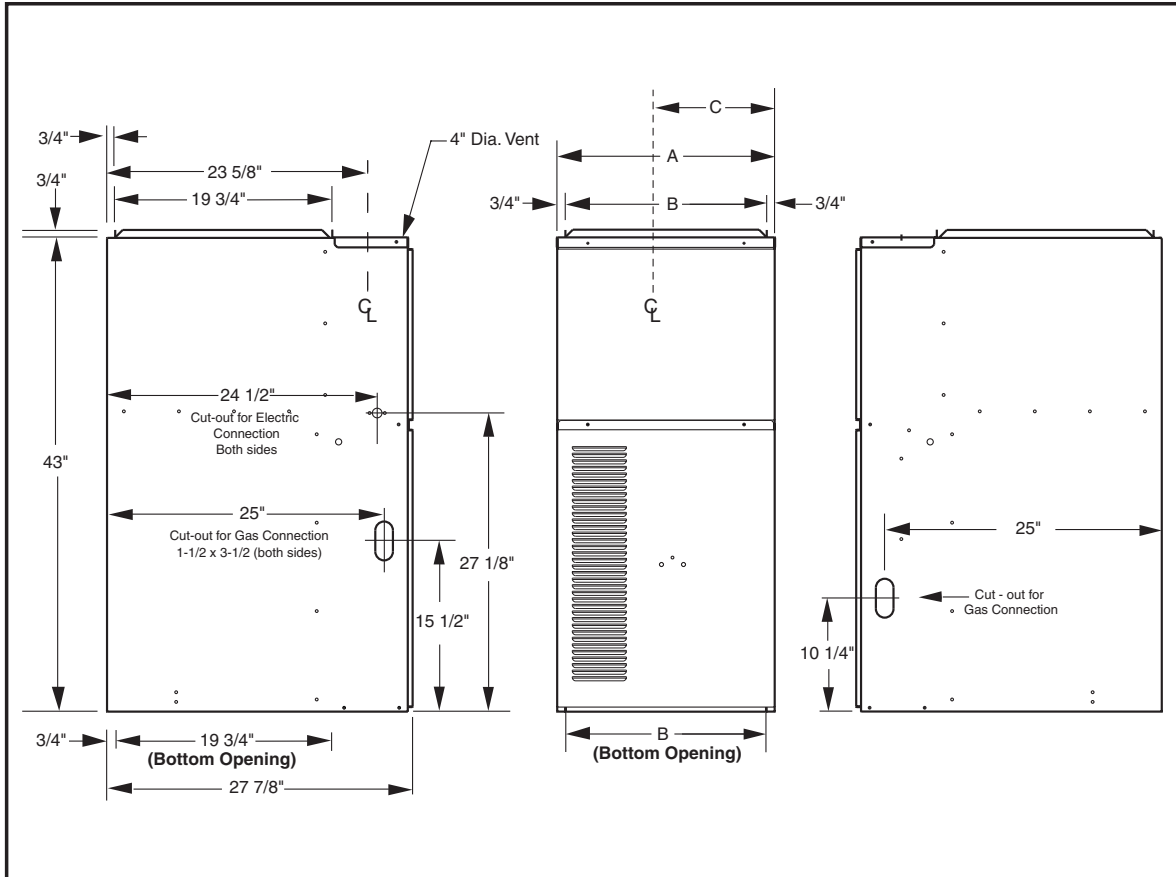


Figure 1B. Downflow Unit Dimensions

DOWNFLOW FURNACE MODELS FURNACE DIMENSIONS AND SHIPPING WEIGHTS

Model Number *TK	High Input (Btuh)	Low Input (Btuh)	Dimensions			Shipping Weights (lbs)
			A inches	B inches	C inches	
060(*)-08	60,000	42,000	14 1/4	12 3/4	5 1/2	134
060(*)-12	60,000	42,000	14 1/4	12 3/4	5 1/2	134
072(*)-12	72,000	50,400	19 3/4	18 1/4	11	135
072(*)-16	72,000	50,400	19 3/4	18 1/4	11	147
096(*)-12	96,000	67,000	19 3/4	18 1/4	11	180
096(*)-16	96,000	67,000	19 3/4	18 1/4	11	180
096(*)-20	96,000	67,000	19 3/4	18 1/4	11	182
120(*)-16	120,000	84,000	19 3/4	18 1/4	11	180
120(*)-20	120,000	84,000	19 3/4	18 1/4	11	182

Note: (*) Can be C or N

Table 1B. Downflow Furnace Dimensions and Shipping Weights

CAPACITIES—Furnace Airflow Data

80+ UPFLOW/HORIZONTAL FURNACE MODELS

Model Number *TA	Heating Input (Btuh)	Motor Speed	Motor HP	External Static Pressure (Inches Water Column)																							
				0.1		0.2		0.3		0.4		0.5		0.6		0.7		0.8									
				CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise						
060-08A	60,000	High†	1/3	1360	34/21	1345	33/22	1310	32/22	1260	35/23	1205	37/24	1155	39/25	1095	40/27	1030	43/28								
		Med*		1165	37/24	1155	38/25	1135	39/26	1095	40/27	1045	43/28	1010	44/29	955	46/31	880	51/33								
		Low**		790	55/37	785	56/38	760	58/39	750	59/40	720	61/41	685	65/43	655	68/45	610	73/48								
060-12A	60,000	High†	1/3	1360	34/21	1345	33/22	1310	32/22	1260	35/23	1205	37/24	1155	39/25	1095	40/27	1030	43/28								
		Med*		1165	37/24	1155	38/25	1135	39/26	1095	40/27	1045	43/28	1010	44/29	955	46/31	880	51/33								
		Low**		790	55/37	785	56/38	760	58/39	750	59/40	720	61/41	685	65/43	655	68/45	610	73/48								
072-12B	72,000	High†	1/3	1645	32/21	1575	34/22	1490	36/24	1395	40/23	1305	41/27	1230	43/30	1030	52/35	815	64/43								
		Med*		1410	38/25	1350	39/26	1280	42/28	1215	44/29	1130	47/32	1010	53/35	845	63/42	680	78/52								
		Low**		1140	47/31	1105	48/32	1055	51/34	980	54/36	910	58/40	795	67/44	640	83/55	525	-/68								
072-16B	72,000	High†	1/2	1870	28/18	1845	29/19	1790	30/20	1735	31/20	1665	32/21	1580	33/22	1500	35/23	1400	38/25								
		Med-High		1480	36/24	1450	37/24	1420	38/25	1380	39/26	1325	40/27	1265	42/28	1190	45/30	1075	50/33								
		Med-Low*		1030	52/34	1010	53/35	990	54/36	950	56/37	915	58/39	865	61/41	775	69/46	690	77/51								
096-12B	96,000	High†	1/3	815	65/43	765	69/46	720	72/50	670	79/53	620	86/57	560	95/63	515	-/69	440	-/81								
		Med*		1495	50/30	1430	52/31	1360	55/32	1275	58/35	1210	61/37	1090	68/40	925	80/48	740	-/60								
		Low**		1345	55/33	1300	57/34	1240	60/36	1185	63/38	1115	66/40	975	76/45	880	84/67	675	-/65								
096-16B	96,000	High†	1/2	970	76/46	940	78/47	920	80/48	860	86/51	780	95/57	690	-/65	575	-/77	455	-/81								
		Med-High		1935	38/23	1895	39/24	1835	40/24	1775	42/25	1715	43/26	1640	45/28	1555	47/30	1440	51/31								
		Med-Low*		1660	44/27	1635	45/27	1600	46/28	1565	47/28	1525	49/29	1465	50/30	1400	53/32	1335	55/33								
096-20B	96,000	High†	3/4	1390	53/32	1375	54/32	1330	55/33	1320	56/33	1290	56/34	1245	57/35	1200	59/37	1110	66/40								
		Med-High		1180	63/37	1165	64/38	1140	65/39	1120	66/40	1095	67/41	1060	69/42	1015	73/44	970	76/46								
		Med-Low*		2310	31/18	2255	32/19	2205	33/20	2155	34/20	2070	35/21	2015	35/22	1920	36/23	1840	40/24								
120-16C	120,000	High†	1/2	2040	36/21	2010	37/22	1960	38/23	1900	39/24	1875	40/25	1815	41/25	1755	42/26	1650	45/27								
		Med-High		1760	42/25	1735	43/25	1710	43/26	1665	44/27	1620	45/27	1565	47/28	1495	49/30	1410	52/31								
		Med-Low*		1285	57/35	1275	58/36	1250	59/37	1225	60/38	1180	63/38	1135	65/39	1085	68/40	1065	69/42								
120-20C	120,000	High†	3/4	1980	45/27	1945	45/28	1910	46/28	1860	48/29	1795	50/30	1720	52/31	1640	54/33	1545	58/35								
		Med-High		1675	52/31	1665	53/32	1640	54/32	1610	55/33	1565	57/34	1515	59/35	1460	61/37	1375	64/39								
		Med-Low*		1410	63/37	1395	64/38	1380	65/39	1360	66/40	1340	67/41	1310	68/42	1260	70/43	1185	75/45								
120-20C	120,000	High†	3/4	1205	-/44	1190	-/45	1175	-/45	1160	-/46	1140	-/47	1115	-/48	1085	-/49	1050	-/51								
		Med-High		2400	37/22	2360	37/23	2310	38/24	2255	40/24	2200	41/24	2140	42/25	2070	43/26	1990	45/27								
		Med-Low*		2105	41/25	2095	42/25	2075	43/25	2060	43/26	2015	44/27	1960	45/27	1910	46/28	1845	49/29								
120-20C	120,000	High†	3/4	1750	51/31	1745	51/31	1740	52/31	1720	52/31	1710	52/31	1680	53/32	1645	54/32	1600	56/33								
		Med-High		1520	59/33	1515	59/33	1510	60/34	1500	60/35	1490	61/36	1475	61/37	1450	61/37	1425	62/38								
		Med-Low*																									

- † = FACTORY SET COOLING
 * = FACTORY SET HIGH FIRE
 ** = FACTORY SET LOW FIRE
- NOTES: 1. AIRFLOW RATES OF 1800 CFM OR MORE REQUIRE TWO RETURN AIR CONNECTIONS. DATA IS FOR OPERATION WITH FILTERS(S)
 2. TEMPERATURE RISES IN THE TABLE ARE APPROXIMATE. ACTUAL TEMPERATURE RISES MAY VARY
 3. TEMPERATURE RISES AND AIRFLOWS FOR EXTERNAL STATIC PRESSURES GREATER THAN 0.5 ARE FOR REFERENCE ONLY. THESE CONDITIONS ARE NOT RECOMMENDED.
 4. TEMPERATURE RISES ARE DISPLAYED AS HIGH FIRE / LOW FIRE

Table 2A. Furnace Airflow Data

CAPACITIES —Furnace Airflow Data (Continued)

80+ DOWNFLOW FURNACE MODELS

Model Number *TK	Heating Input (Btu/h)	Motor Speed	Motor HP	External Static Pressure (Inches Water Column)																							
				0.1		0.2		0.3		0.4		0.5		0.6		0.7		0.8									
				CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise	CFM	Rise						
060-08A	60,000	High†	1/3	1420	31/20	1380	32/21	1340	33/22	1300	34/23	1235	36/24	1185	37/25	1110	40/26	1045	42/28								
		Med*		1215	36/23	1195	37/24	1175	38/25	1145	39/26	1105	40/27	1050	42/28	995	45/29	960	46/31								
		Low**		820	54/36	815	54/36	810	55/37	800	55/37	800	55/37	770	57/38	745	59/40	715	62/41	665	67/45						
060-12A	60,000	High†	1/3	1420	31/20	1380	32/21	1340	33/22	1300	34/23	1235	36/24	1185	37/25	1110	40/26	1045	42/28								
		Med*		1215	36/23	1195	37/24	1175	38/25	1145	39/26	1105	40/27	1050	42/28	995	45/29	960	46/31								
		Low**		820	54/36	815	54/36	810	55/37	800	55/37	800	55/37	770	57/38	745	59/40	715	62/41	665	67/45						
072-12B	72,000	High†	1/3	1655	32/21	1580	34/22	1500	35/24	1440	37/24	1355	40/26	1260	42/28	1155	46/31	980	54/36								
		Med*		1440	37/25	1400	38/25	1355	39/26	1285	42/28	1225	44/29	1145	46/31	1010	53/35	855	62/41								
		Low**		1015	52/35	1000	53/36	965	55/37	920	58/38	865	61/41	790	67/45	680	78/52	540	99/66								
072-16B	72,000	High†	1/2	1985	27/18	1945	27/18	1900	28/18	1850	29/19	1780	30/20	1715	31/21	1640	33/22	1545	35/23								
		Med-High		1680	32/21	1650	32/21	1625	33/22	1600	33/22	1560	34/23	1505	35/23	1420	37/25	1330	40/27								
		Med-Low*		1450	36/24	1410	37/25	1390	38/26	1370	39/26	1345	40/27	1305	41/28	1245	43/29	1160	46/31								
100-12B	100,000	High†	1/2	1950	38/33	1885	39/23	1815	40/24	1765	42/25	1685	44/26	1600	46/27	1535	48/29	1425	52/31								
		Med-High		1700	43/25	1665	44/26	1630	45/27	1580	47/28	1540	48/27	1475	50/30	1410	52/32	1330	55/33								
		Med-Low*		1430	51/30	1425	51/31	1395	52/32	1380	53/32	1335	55/33	1295	57/34	1230	60/36	1150	64/38								
100-16B	100,000	High†	1/2	2300	60/36	2225	60/36	2155	61/36	2110	62/37	2035	63/38	1930	65/39	1840	66/40	1710	69/42								
		Med-High		1950	38/33	1885	39/23	1815	40/24	1765	42/25	1685	44/26	1600	46/27	1535	48/29	1425	52/31								
		Med-Low**		1430	51/30	1425	51/31	1395	52/32	1380	53/32	1335	55/33	1295	57/34	1230	60/36	1150	64/38								
100-20B	100,000	High†	3/4	2100	35/20	2070	36/21	2010	37/22	1945	38/23	1905	39/23	1840	40/24	1790	41/25	1710	43/26								
		Med-High		1830	40/23	1805	41/24	1760	42/25	1725	43/26	1680	44/27	1635	45/28	1555	47/29	1480	50/30								
		Med-Low*		1580	47/27	1550	48/28	1520	49/29	1490	50/30	1455	51/31	1395	53/32	1355	55/33	1280	57/35								
120-16B	120,000	High†	1/2	1175	63/37	1155	64/38	1120	65/39	1100	67/40	1070	69/41	1035	71/42	990	73/43	930	75/44								
		Med-High		1950	46/27	1885	47/28	1815	48/29	1765	50/30	1685	53/31	1600	55/33	1535	58/35	1425	62/38								
		Med-Low*		1700	53/31	1665	53/32	1630	55/33	1580	56/34	1540	57/34	1475	60/36	1410	63/38	1330	67/40								
120-20B	120,000	High†	3/4	1430	63/37	1425	62/38	1395	64/39	1380	65/40	1335	66/41	1295	68/42	1230	72/43	1150	77/46								
		Med-High		2100	42/25	2070	43/26	2010	44/26	1945	46/27	1905	47/28	1840	48/29	1790	49/30	1710	52/31								
		Med-Low*		1580	48/28	1550	49/29	1520	50/30	1490	51/31	1455	51/31	1395	53/32	1355	55/33	1280	57/35								
		Low**		1175	75/45	1155	77/46	1120	79/47	1100	80/48	1070	83/50	1035	85/51	990	90/54	930	95/57								

- † = FACTORY SET COOLING
 * = FACTORY SET HIGH FIRE
 ** = FACTORY SET LOW FIRE
- NOTES: 1. AIRFLOW RATES OF 1800 CFM OR MORE REQUIRE TWO RETURN AIR CONNECTIONS. DATA IS FOR OPERATION WITH FILTERS(S)
 2. TEMPERATURE RISES IN THE TABLE ARE APPROXIMATE. ACTUAL TEMPERATURE RISES MAY VARY
 3. TEMPERATURE RISES AND AIRFLOWS FOR EXTERNAL STATIC PRESSURES GREATER THAN 0.5 ARE FOR REFERENCE ONLY. THESE CONDITIONS ARE NOT RECOMMENDED.
 4. TEMPERATURE RISES ARE DISPLAYED AS HIGH FIRE / LOW FIRE

Table 2B. Furnace Airflow Data

SAFETY INFORMATION

1. Use only with type of gas approved for this furnace. Refer to the furnace rating plate.
2. Install this furnace only in a location and position as specified on Table 3 of these instructions.
3. Provide adequate combustion and ventilation air to the furnace space as specified on Pages 12 through 17.
4. Combustion products must be discharged outdoors. Connect this furnace to an approved vent system only, as specified on Pages 14 through 20.
5. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections, as specified on Page 23 of these instructions.
6. Always install furnace to operate within the furnace's intended temperature-rise range with a duct system which has an external static pressure within the allowable range, as specified on Table 2 of these instructions. See furnace rating plate.
7. When a furnace is installed so that supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.
8. A gas-fired furnace for installation in a residential garage must be installed as specified on Page 11 of these instructions.
9. The furnace is not to be used for temporary heating of buildings or structures under construction.

INSTALLATION REQUIREMENTS

Requirements and Codes

This furnace must be installed in accordance with these instructions, all applicable local building codes, current revision of the National Fuel Gas Code (ANSI-Z223.1), and in Canada with the CAN/CGA - B149 installation code. The current revision of the National Fuel Gas Code is available from:

American National Standards Institute, Inc.
1430 Broadway
New York, New York 10018

Additional helpful publications are:
NFPA-90A - Installation of
Air Conditioning and Ventilating Systems

NFPA-90B - Warm Air Heating
and Air Conditioning Systems

These publications are available from:
National Fire Protection Association, Inc.
Batterymarch Park
Quincy, Massachusetts 02269

IMPORTANT NOTE

The Commonwealth of Massachusetts requires compliance with regulation 248 CMR 4.00 and 5.00 for installation of through – wall vented gas appliances as follows:

(a) For direct-vent appliances, mechanical-vent heating appliances or domestic hot water equipment, where the bottom of the vent terminal and the air intake is installed below four feet above grade the following requirements must be satisfied:

1. If there is not one already present, on each floor level where there are bedroom(s), a carbon monoxide detector and alarm shall be placed in the living area outside the bedroom(s). The carbon monoxide detector shall comply with NFPA 720 (2005 Edition).
2. A carbon monoxide detector shall be located in the room that houses the appliance or equipment and shall:
 - a. Be powered by the same electrical circuit as the appliance or equipment such that only one service switch services both the appliance and the carbon monoxide detector;
 - b. Have battery back-up power;
 - c. Meet ANSI/UL 2034 Standards and comply with NFPA 720 (2005 Edition); and
 - d. Have been approved and listed by a Nationally Recognized Testing Laboratory as recognized under 527 CMR.
3. A Product-approved vent terminal must be used, and if applicable, a Product-approved air intake must be used. Installation shall be in strict compliance with the manufacturer's instructions. A copy of the installation instructions shall remain with the appliance or equipment at the completion of the installation.
4. A metal or plastic identification plate shall be mounted at the exterior of the building, four feet directly above the

location of vent terminal. The plate shall be of sufficient size to be easily read from a distance of eight feet away, and read "Gas Vent Directly Below".

(b) For direct-vent appliances, mechanical-vent heating appliances or domestic hot water equipment where the bottom of the vent terminal and the air intake is installed above four feet above grade the following requirements must be satisfied:

1. If there is not one already present, on each floor level where there are bedroom(s), a carbon monoxide detector and alarm shall be placed in the living area outside the bedroom(s). The carbon monoxide detector shall comply with NFPA 720 (2005 Edition).
2. A carbon monoxide detector shall:
 - a. Be located in the room that houses the appliance or equipment;
 - b. Be either hard-wired or battery powered or both; and
 - c. Shall comply with NFPA 720 (2005 Edition).
3. A Product-approved vent terminal must be used, and if applicable, a Product-approved air intake must be used. Installation shall be in strict compliance with the manufacturer's instructions. A copy of the installation instructions shall remain with the appliance or equipment at the completion of the installation.

 **WARNING:**

This furnace is not approved for installation in mobile homes. Installation in a mobile home could cause fire, property damage, and/or personal injury.

Location

Upflow gas furnaces are shipped ready for installation in the upflow or horizontal right or left positions. The *TK gas furnace is for downflow operation only. The furnace must be installed on a level surface, located as close to the vent (or chimney) and as close to the center of the air distribution system as possible. See Table 1 for overall dimensions to determine the required clearances in hallways, doorways, stairs, etc. to allow the furnace to be moved to the installation point. The furnace must be installed so

that all electrical components are protected from water. The furnace must be installed upstream from a refrigeration system. This furnace is not to be used for temporary heating of buildings or structures under construction.

Clearances to Combustibles

This furnace is Design Certified by CSA International for the minimum clearances to combustible material listed in Table 3. Refer to the furnace rating plate, located inside of the furnace cabinet, for the specific model number and clearance information.

Access for positioning and servicing the unit must be considered when locating unit. Twenty four inches is the minimum required clearance from the front of the unit for servicing it. Thirty inches is the minimum required clearance from the front of the unit for positioning it. **Thirty Six inches is the recommended clearance from the front of the unit.** Please note that a panel or door can be located such that the minimum clearance on the rating plate is satisfied, but that panel or door must be removable and allow the appropriate clearance for your installation.

This furnace is certified for use on wood flooring. This furnace must not be installed directly on carpeting, tile, or any combustible material other than wood flooring.

Downflow Warning (*TK Models):


The design of the downflow furnace is certified for natural or propane gas and for installation on non-combustible flooring. A special combustible floor sub-base is required when installing on a combustible floor. Failure to install the sub-base may result in fire, property damage and personal injury. The special downflow sub-bases are factory supplied accessories, part numbers 902974, 902677, 904108 and 904165. 904165 is an adjustable sub-base kit and it can be used in all cabinet sizes. When the furnace is installed on a factory or site-built cased air conditioning coil, the sub-base is not necessary. However, the plenum attached to the coil casing must be installed such that its surfaces are at least 1" from combustible construction.

 **CAUTION:**


The downflow sub-base must not be installed directly on carpeting, tile, or any combustible material other than wood flooring.

Upflow Furnace Models

UPFLOW APPLICATION

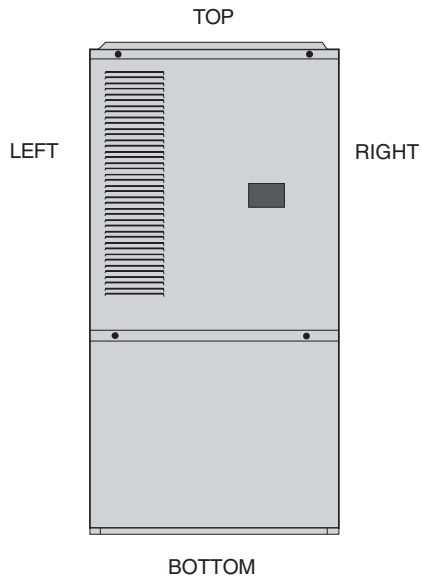

HORIZONTAL APPLICATION

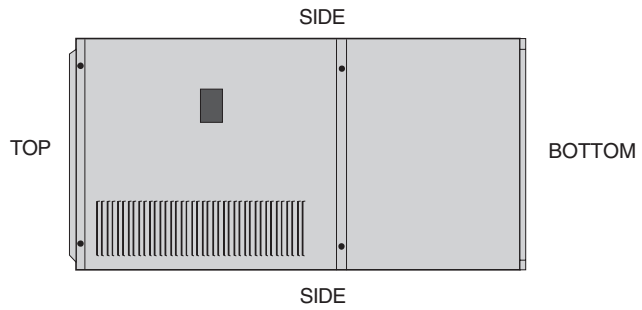

Downflow Furnace Models

INSTALLATION CLEARANCES

Vent Connector Type	Standard Single Wall Metal Vent	Type B-1 Double Wall Metal Vent
LEFT SIDE	0"	0"
RIGHT SIDE	0"	0"
VENT	6"	1"
BACK	0"	0"
BOTTOM	0 ^{***}	0 ^{***}
TOP	1"	1"
FRONT	4 ^{****}	4 ^{****}

** For Downflow furnace installations **only**, furnace must be installed on non-combustible flooring.

*** Allow 24" minimum clearance for servicing. The recommended clearance is 36".

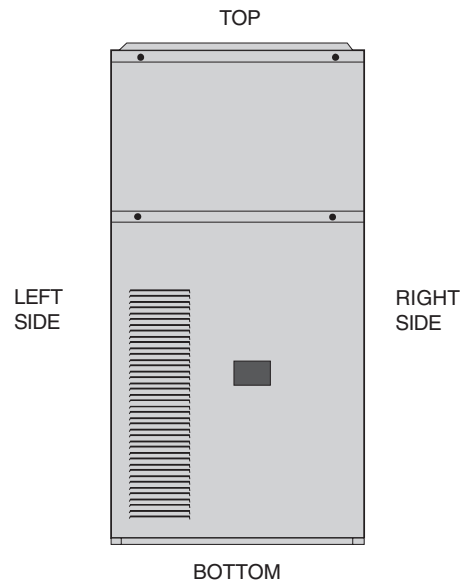


Table 3. Minimum Clearances to Combustible Material

A gas-fired furnace installed in a residential garage must be installed so the burners and the igniter are located not less than 18 inches (457 mm) above the floor, and the furnace must be located or protected to avoid physical damage by vehicles.

! WARNING:

Do not place combustible material on or against the furnace cabinet or within 6 inches of the vent pipe. Do not place combustible materials, including gasoline and any other flammable vapors and liquids, in the vicinity of the furnace.

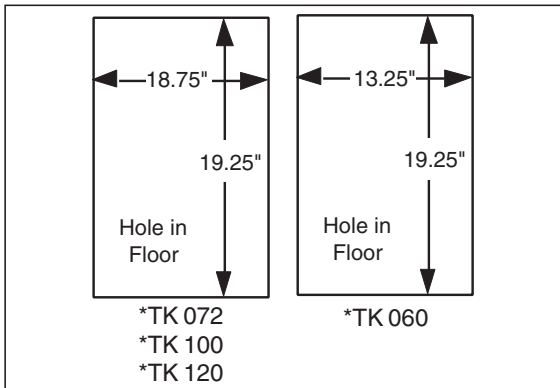


Figure 2. Opening for Concrete Slab

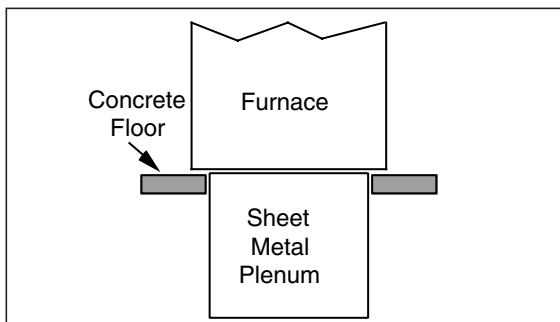


Figure 3. Furnace on a Concrete Slab

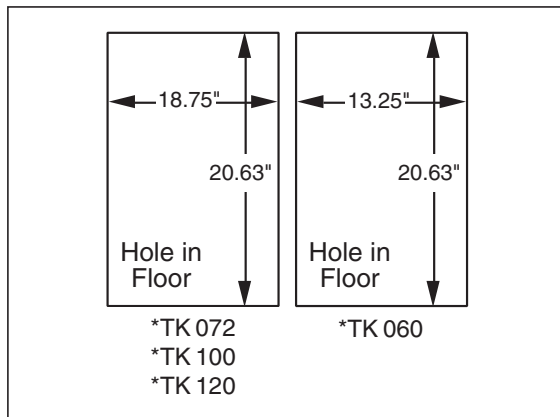


Figure 4. Opening in Wood Floor

Supply Air Plenum Installation

A. Installation on a concrete slab. - *TK

1. Construct a hole in the floor per the dimension in Figure 2.
2. Place the plenum and the furnace as shown in Figure 3.

B. Installation on a combustible floor. - *TK

For downflow furnace installation, this furnace is approved for use on combustible flooring when NORDYNE combustible floor sub-base kit #904165 is used.

1. Cut hole and frame the hole per the dimensions in Figure 4.
2. Install the sub-base according to the installation instructions. (See Figure 5)

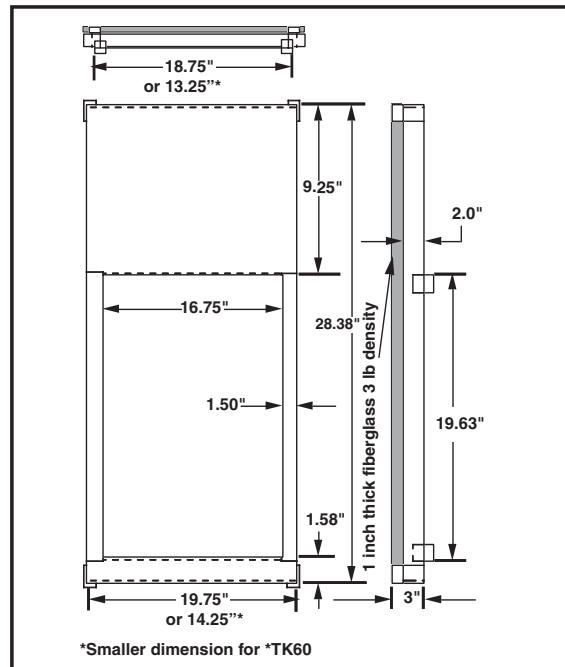


Figure 5. Downflow Sub-Base Dimensions

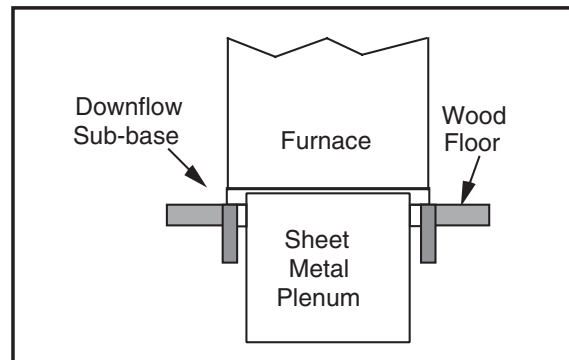


Figure 6. Furnace with Coil Assembly on a Wood Floor

3. When the furnace is installed on a factory or site-built cased air conditioning coil, the sub-base is not necessary. However, the plenum attached to the coil casing must be installed such that its surface is at least 1" from combustible material in Figure 6.

VENTING AND COMBUSTION AIR REQUIREMENTS

General

Provisions must be made in the installation of this furnace to provide an adequate supply of air for combustion. Detailed instructions for determining the adequacy of an installation can be found in the current revision of the National Fuel Gas Code (ANSI Z223.1 / NFPA54) or in applicable local building codes. **Consult local codes for special requirements.** For Canadian installations consult Canadian Installations Codes and (CAN/CGA B149.1 or .2).

If the furnace is operated with inadequate air for combustion one of the flame roll-out switches located in the burner compartment or the vent switch will open, turning off the gas supply to the burners. These safety devices are manually reset switches. DO NOT install jumper wires across these switches to defeat their function. DO NOT reset a switch without identifying and correcting the fault condition. If a switch must be replaced, use only the correct part specified in the Replacement Parts List.

Air openings in the furnace door, warm air registers, and return air grilles must not be restricted.

When determining combustion air space, the full rate input of this two-stage furnace must be used.

Combustion Air Quality

To maximize heat exchanger life, the combustion air must be free of chemicals which form corrosive acidic compounds in the combustion gases. The recommended source of combustion air is to use the outdoor air supply. However, the use of indoor air in most applications is acceptable except as follows:

1. If the furnace is installed in a confined space it is recommended that the necessary combustion air come from the outdoors by way of attic, crawl space, air duct, or direct opening.
2. If outdoor combustion air is used, there must be

no exposure to the installations or substances listed in Item 3 below.

3. The following types of installation may require **Outdoor Air** for combustion, due to chemical exposures:

- Commercial buildings
- Buildings with indoor pools
- Furnaces installed in laundry rooms
- Furnaces installed in hobby or craft rooms
- Furnaces installed near chemical storage areas

Exposure to the following substances in the combustion air supply may also require **Outdoor Air** for combustion:

- Permanent wave solutions
- Chlorinated waxes and cleaners
- Chlorine based swimming pool chemicals
- Water softening chemicals
- De-icing salts or chemicals
- Carbon tetrachloride
- Halogen type refrigerants
- Cleaning solvents (such as perchloroethylene)
- Printing inks, paint removers, varnishes, etc.
- Hydrochloric acid
- Cements and glues
- Antistatic fabric softeners for clothes dryers
- Masonry acid washing materials



CAUTION:

Combustion air must not be drawn from a corrosive atmosphere.



WARNING:

Furnace installation using methods other than those described in the following sections must comply with the National Fuel Gas Code and all applicable local codes to provide sufficient combustion air for the furnace.

Installation In An Unconfined Space

An unconfined space is an area including all rooms not separated by doors with a volume greater than 50 cubic feet per 1,000 Btuh of the combined input rates of all appliances which draw combustion air from that space. For example, a space including a water heater rated at 45,000 Btuh input and a furnace rated at 75,000 Btuh requires a volume of 6,000 cubic feet [50 x (45 + 75) = 6,000] to be considered

unconfined. If the space has an 8 foot ceiling, the floor area of the space must be 750 square feet ($6,000 / 8 = 750$). In general, a furnace installed in an unconfined space will not require outside air for combustion. However, in "tight" buildings (with weather stripping and caulk to reduce infiltration), it may be necessary to provide outside air to ensure adequate combustion and venting, even though the furnace is located in an unconfined space.

Installation In A Confined Space

A confined space is an area with volume less than 50 cubic feet per 1,000 Btuh of the combined input rates of all appliances drawing combustion air from that space. Furnace closets, small equipment rooms and garages are confined spaces. Furnaces installed in a confined space which supply heated air to areas outside the space must draw return air from outside the space and must have the return air ducts tightly sealed to the furnace. **A confined space must have two openings into the space for combustion air. One opening must be within 12 inches of the ceiling, and the other must be within 12 inches of the floor.** The required sizing of these openings is determined by whether inside or outside air is used to support combustion, the method by which the air is brought to the space, and by the total input rate of all appliances in the space.

Horizontal Furnace Installation

The *TA series furnaces can be installed horizontally in an attic, basement, crawl space or alcove. It can be suspended from a ceiling in a basement or utility room in either a right to left airflow or left to right airflow. (See Figures 7 and 8.)

If the furnace is to be suspended from the ceiling, it will be necessary to use steel straps around each end of the furnace. These straps should be attached to the furnace with sheet metal screws and to the rafters with bolts. The furnace could also be suspended by an angle iron frame bolted to the rafters. (See Figure 7.)

Access for positioning and servicing must be considered when locating the unit. Refer to Table 3, Minimum Clearances to Combustible Material, for clearance specifications.

Keep all insulating materials away from the louvered door. Insulating materials may be combustible.

The *TA series furnace may be installed directly on combustible wood flooring or supports, if type "B-1" vent pipe is used (See Figure 8). It is recommended for further reduction of fire hazard that cement board or sheet metal be placed between the furnace and the combustible floor and extend 12 inches beyond the front of the louvered door.

! WARNING:

Furnaces installed with combustion air drawn from a heated space which includes exhaust fans, fireplaces, or other devices that may produce a negative pressure should be considered confined space installations.

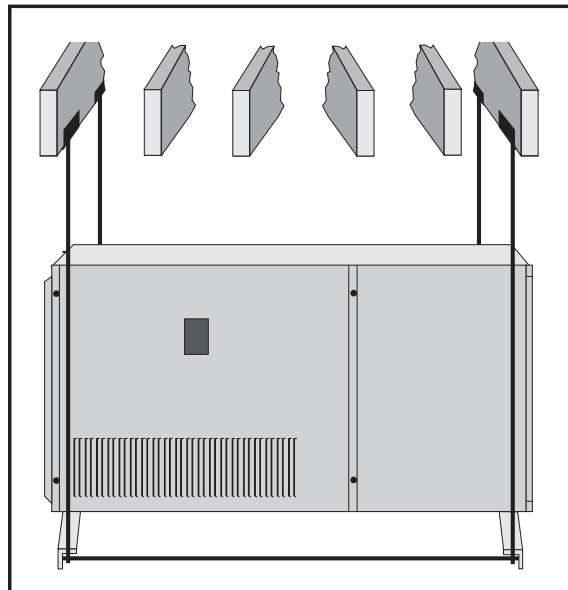


Figure 7. *TA Horizontal Installation Suspended in Attic or Crawl Space

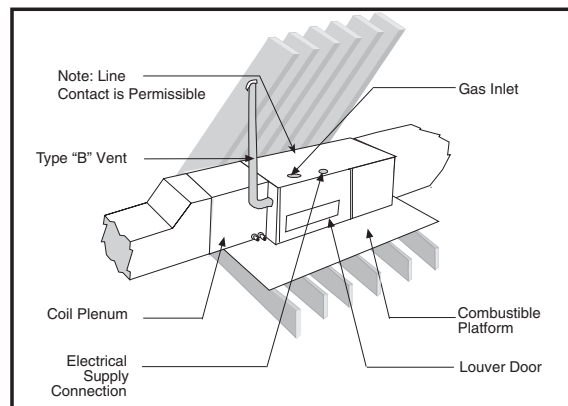


Figure 8. *TA Horizontal installation on a Platform

See the venting section for venting guidelines and specifications.

Air From Inside (See Figure 9)

If combustion air is taken from the heated space, the two openings must *each* have a free area of at least one square inch per 1,000 Btuh of total input of all appliances in the confined space, but **not less than 100 square inches of free area**. For example, if the combined input rate of all appliances is less than or equal to 100,000 Btuh, each opening must have a free area of at least 100 square inches. If the com-

bined input rate of all appliances is 120,000 Btuh, each opening must have a free area of at least 120 square inches.

Outdoor Air Using Vertical Ducts
(See Figure 10)

If combustion air is taken from outdoors through vertical ducts, the openings and ducts must have a minimum free area of one square inch per 4,000 Btuh of total appliance input. In installations drawing combustion air from a ventilated attic, both air ducts must extend above the attic insulation.

If the unit is installed in an area with an exhaust fan, provide sufficient ventilation to prevent negative pressures from occurring in the room.

The combustion air openings must not be restricted in any manner.

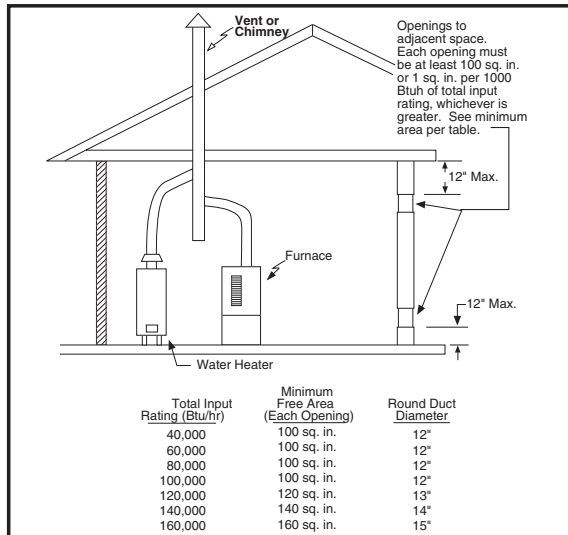


Figure 9. Equipment in a Confined Space with all Combustion Air Drawn from the Inside

! CAUTION:

Do not supply combustion air from an attic space that is equipped with power ventilation or any other device that may produce a negative pressure.

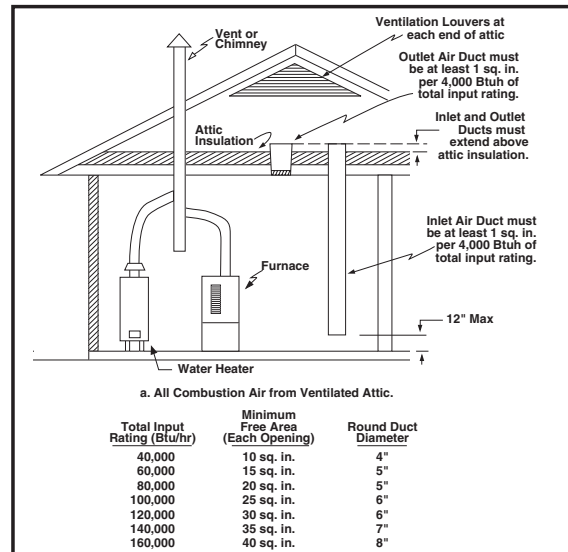


Figure 10. Equipment in a Confined Space with all Combustion Air Drawn from the Outside through Vertical Ducts

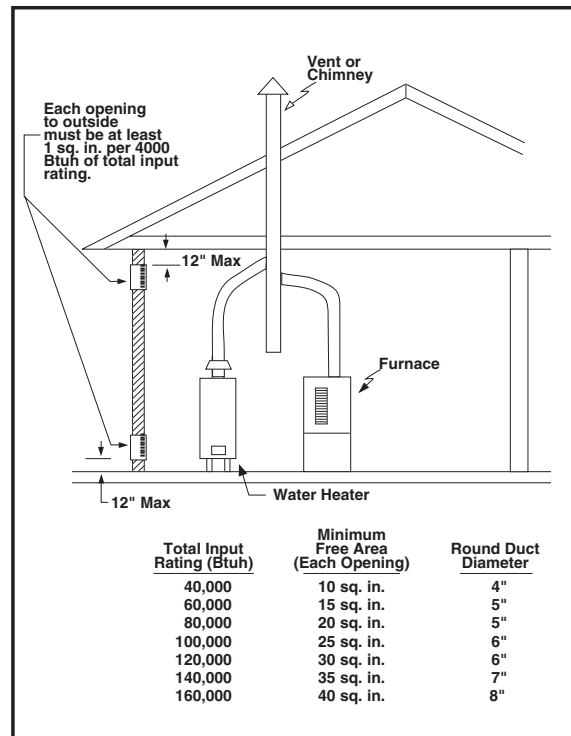


Figure 11. Equipment in a Confined Space with all Combustion Air Drawn from the Outside through Exterior Wall

Air Directly Through An Exterior Wall
(See Figure 11)

If combustion air is provided directly through an exterior wall, the two openings must each have free area of at least one square inch per 4000 Btuh of total appliance input.

Outdoor Air Using a Crawl Space and Ventilated Attic
(See Figure 12)

When directly communicating with the outdoors, each opening shall have a minimum free area of 1 square inch per 4,000 Btuh of total appliance input. The openings shall communicate directly, or by ducts, with the outdoor spaces (crawl or attic) that freely communicate with the outdoors.

Outdoor Air Using Horizontal Ducts
(See Figure 13)

If combustion air is taken from outdoors through horizontal ducts, the openings and ducts must have a minimum free area of one square inch per 2,000 Btuh of total appliance input.

If the unit is installed in an area with an exhaust fan, provide sufficient ventilation to prevent negative pressures from occurring in the room.

The combustion air openings must not be restricted in any manner.

VENTING REQUIREMENTS

General

This furnace must be vented in compliance with the current revision of the National Fuel Gas Code (ANSI-Z223.1/NFPA54), with the instructions provided below.

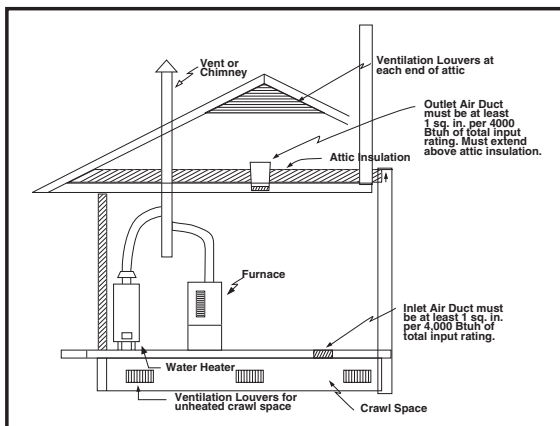


Figure 12. Equipment in a Confined Space with All Combustion Air Drawn from a Crawl Space and Ventilated Attic

In Canada, venting shall conform to the requirements of the current (CAN/CGA B149.1 or .2) installation codes. **Consult local codes for special requirements.**

For Category I furnace installations, the furnace shall be connected to a factory built chimney or vent complying with a recognized standard, or a masonry or concrete chimney lined with a lining material acceptance to the authority having jurisdiction. **Venting into an unlined masonry chimney or concrete chimney is prohibited.**

This furnace must never be vented to a chimney flue servicing a fireplace or other appliance designed to burn solid fuel. If the furnace vent is to be connected to a chimney serving a fireplace, the fireplace must be sealed off from the chimney. Single wall metal vents shall not be used for Category I venting, Category I furnaces must be vented vertically or near vertically.

The furnace vent, if metal, may be insulated if local codes allow. Any part of the vent system, metal vent only, not exposed to weather, but which are exposed to ambient temperatures below 35° F must be insulated to prevent condensation. All vent insulation shall be foil backed fiberglass of one inch minimum thickness.

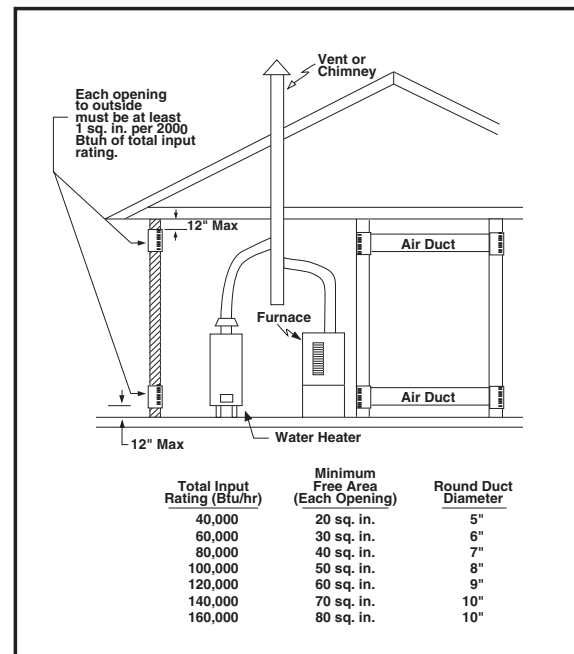


Figure 13. Equipment in a Confined Space with all Combustion Air Drawn from the Outside through Horizontal Ducts

Three sheet metal fasteners (field supplied) should be used to secure the vent pipe to the furnace flue. These fasteners should be evenly spaced around the flue diameter, if possible.

Category I - Common Venting

When an existing furnace is removed from a venting system serving other appliances, the venting system is likely to be too large to properly vent the remaining appliances. An

improperly sized venting system can result in the formation of condensate, leakage, spillage, etc.

The steps outlined in the warning below shall be followed with each individual appliance connected to the vent system placed in operation, while all other appliances connected to the vent system are not in operation:



WARNING:

CARBON MONOXIDE POISONING HAZARD

Failure to follow the steps outlined below for each appliance connected to the venting system being placed into operation could result in carbon monoxide poisoning or death.

The following steps shall be followed for each appliance connected to the venting system being placed into operation, while all other appliances connected to the venting system are not in operation:

1. Seal any unused openings in the venting system.
2. Inspect the venting system for proper size and horizontal pitch, as required in the *National Fuel Gas Code, ANSI Z223.1/NFPA 54* or the *CSA B149.1, Natural Gas and Propane Installation Codes* and these instructions. Determine that there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
3. As far as practical, close all building doors and windows and all doors between the space in which the appliance(s) connected to the venting system are located and other spaces of the building.
4. Close fireplace dampers.
5. Turn on clothes dryers and any appliance not connected to the venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they are operating at maximum speed. Do not operate a summer exhaust fan.
6. Follow the lighting instructions. Place the appliance being inspected into operation. Adjust the thermostat so appliance is operating continuously.
7. Test for spillage from draft hood equipped appliances at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle.
8. If improper venting is observed during any of the above tests, the venting system must be corrected in accordance with the *National Fuel Gas Code, ANSI Z223.1/NFPA 54* and/or *CSA B149.1, Natural Gas and Propane Installation Codes*.
9. After it has been determined that each appliance connected to the venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-fired burning appliance to their previous conditions of use.

The venting system should be designed to have the minimum number of elbows or turns. All horizontal runs shall be sloped upwards from the furnace at 1/4 inch per running foot of vent. Supports for the vent pipe must be installed a minimum of every five feet along the vent run to ensure no displacement after installation.

Under no circumstances shall any portion of the vent system extend into or pass through any return air duct, supply air duct, or plenum.

If the furnace is operated with blocked or restricted venting, the blocked vent switch located in the vent plate will open, turning off the gas supply to the burners. The blocked vent switch is a manually reset device. DO NOT install a jumper wire across this switch to defeat its function. DO NOT reset the switch without identifying and correcting the fault condition which caused the switch to trip. If this switch must be replaced, use only the part specified in the Replacement Parts List.

! WARNING:

Upon completion of the furnace installation, carefully inspect the entire flue system both inside and outside the furnace to assure it is properly sealed. Leaks in the flue system can result in serious personal injury or death due to exposure of flue products, including carbon monoxide.

Category III: Horizontal Venting

NOTE: The reduced NOx models (eighth character N) are not approved as a Category III (Category III) furnace for use with horizontal venting.

The furnaces are approved for use with 3" single wall AL29-4C stainless steel vent pipe in horizontal vent applications. This pipe is available from the following manufacturers:

Z-FLEX Inc. - vent brand name (**Z-VENT**)
Heat-fab Inc. - vent brand name (**Saf-T Vent**)
Flex-L International - vent brand name (**Star-34 Vent**)

This vent pipe must be used for the entire length of the vent run. The installation must be in accordance with all instructions supplied by the vent manufacturer for use on Category III

appliances. When venting horizontal, this is defined as a Category III furnace, the vent pressure is positive, and the venting system must be sealed in both horizontal and vertical runs.

For horizontal venting installations in both the United States and Canada the transition assembly must be modified by adding a bleed tube to the pressure switch tube and bypassing the vent switch. All model furnaces will require **Vent Kit #903196** for horizontal venting.

NOTE: No bleed tube is required for the *RA 045(C,N)-08 model.

Horizontal Venting For Upflow Models:

1. Remove the rubber tubing from the pressure switch sensor tube and the collector pan sensor tube. Cut 1/2 inch from one end of the rubber sensor tube, fold in half and cut along the bend line. Discard the 1/2 inch long piece of tubing. Select the correct bleed tube using the table supplied with vent kit #903196 and place the other two pieces of tubing on both ends of the bleed tube. Do not cover the hole in the bleed tube. Place the assembly back on the pressure switch sensor tube and the collector pan sensor tube. (See Figure 14.)

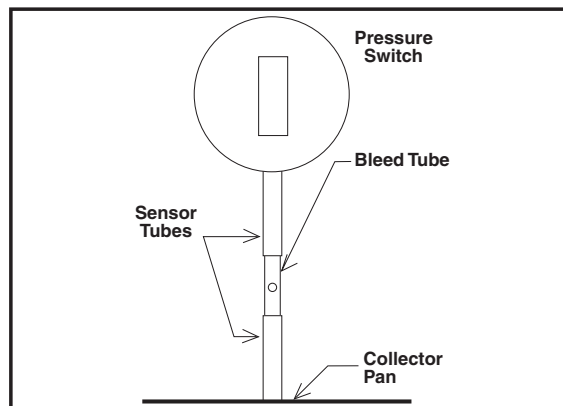


Figure 14. *TA Bleed Tube Installation

2. Remove the nut and restrictor plate from the vent collar assembly and discard the restrictor plate. Select the appropriate dilution cover plate as noted with vent kit #903196. Fit the clearance hole in the cover plate over the weld stud. The cover plate must cover the hole(s) on the vent collar assembly. Tighten the nut securely while holding the cover plate in position. (See Figure 15.)
3. Bypass the vent switch by removing both wires from the vent switch and attaching them to the wire nut. (See Figure 16.)

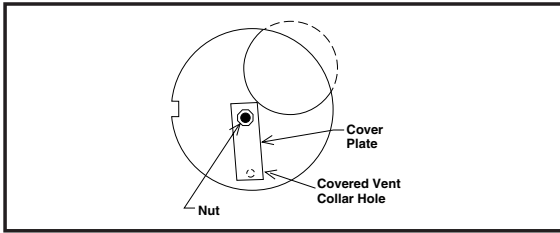


Figure 15. Vent Collar Detail

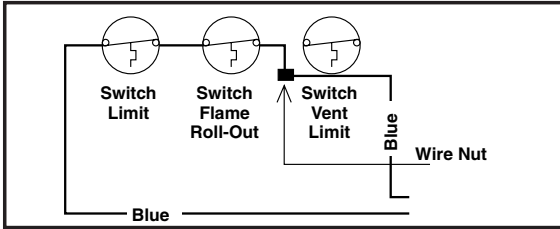


Figure 16. Limit Circuit Wiring

*Horizontal Venting: *TK Models:*

1. By-pass the vent switch, located on blower compartment door, by removing both wires from the switch. Remove wire terminals, strip wires and tie together in a wire nut. (See Figure 16.)
2. Remove the rubber tubing from the pressure switch sensor tube and the collector pan sensor tube. Cut the tubing approximately 3" from one end. Select the appropriate dilution cover plate as noted with vent kit #903196. Insert the bleed tube into the tubing. **Do not cover the hole in the bleed tube.** Place the tubing assembly back on the pressure switch sensor tube and collector pan sensor tube. (See Figure 17.)
3. To gain access to the restrictor plate, remove and discard the combustion tube from the transition assembly. **Insure the seal between inducer and transition assembly is not broken.** (See Figure 18.)
4. Remove and discard the restrictor plate and screw from the transition assembly. (See Figure 18.)
5. Install and seal a 4" to 3" reducer to the transition. (See Figure 19.) Attach the new high temperature vent pipe to the reducer.

⚠ CAUTION:

Do not drill holes through the vent pipe or fittings on a horizontal vented furnace. Do not use sheet metal screws, or rivets. Drilling, screws, or rivets will cause leaks.

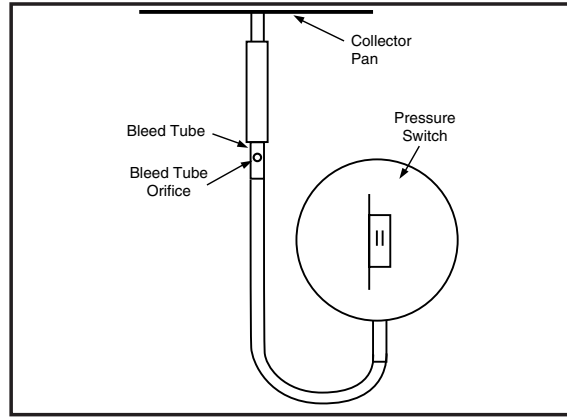


Figure 17. *TK Bleed Tube Installation

The components of the horizontal vent system must not be penetrated with screws, rivets, or other devices, either when joining pipes and fittings or using support straps. All joints must be sealed with high temperature silicone before locking bands are installed. If the lengths of pipe must be cut, the joint must still be sealed with silicone and the locking band used. When installing the condensate tube be sure to form a trap by means of a 3" loop filled with water. (See Figure 20.)

Keep the number of pipe fittings to a minimum. Maintain a minimum of 6 inches of air space between the vent and combustibles at all times, this includes inside and outside the building.

NOTE: The direction of the male-female joints from the drain tee to the termination tee is opposite to standard gas appliance venting. The male end of the pipes point towards the furnace.

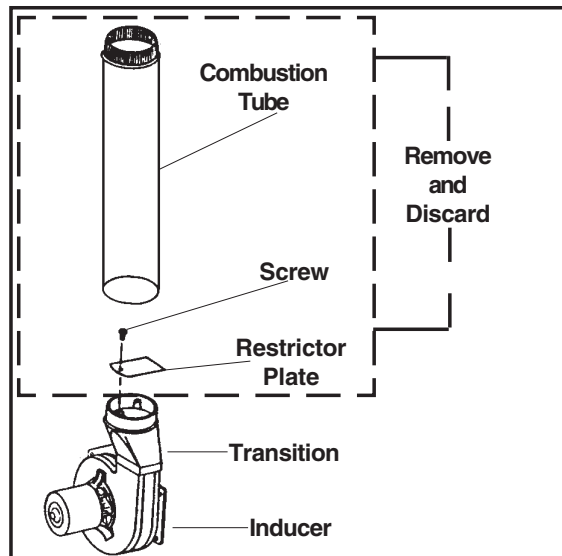


Figure 18. *TK Horizontal Vent Modification

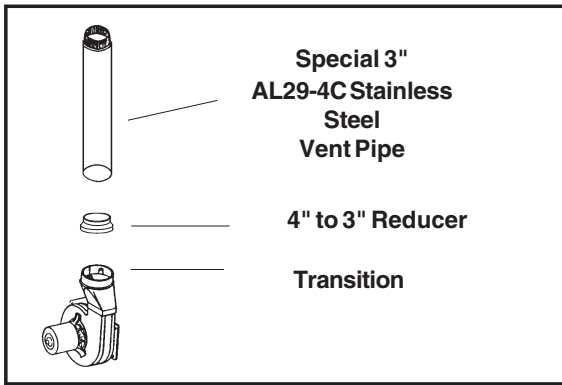


Figure 19. *TK Reducer Installation

1. Apply an adhesive bead around the outside of the pipe approximately 1/4" from the end of the pipe. This includes the first fitting or pipe attached to the furnace.
2. Push the pipe and fitting together while twisting the pipe or fitting. Twisting the pipe or fitting spreads the adhesive completely within the fitting socket.
3. When the pipe is at the socket bottom, inspect the joint. Look for a complete, uninterrupted ring of adhesive material around the pipe at the fitting socket. Additional adhesive or rotation of the pipe or fitting may be required for a complete seal. The complete adhesive material ring provides the seal required for the positive pressure vent.
4. All vent systems must include a tee and drain plug for collection and disposal of condensate. The drain tee must be installed within the first 5 feet of vent run to protect the furnace.
5. All horizontal sections must have a slope toward the drain tee of not less than 1/4" per foot to prevent the collection of condensate at any location other than at the tee.
6. Horizontal runs must be supported with 3/4" pipe strap at a maximum of 5 foot intervals and at each point where an elbow is used.
7. Maintain a 6 inch minimum air space to combustibles from all sections of the stainless steel vent system, except when a wall thimble is used.

Horizontal Power Venting— The Tjerlund GPAK-1 horizontal kit is certified for use

with this furnace. The kit includes a power venter, a side-wall vent hood and a barometric draft control. It has an electrical interlock to assure that the furnace will not operate when the power venter is off.

The kit is for use only when exhaust is through an exterior wall, normally with horizontal vent piping. The power venter establishes negative pressure in the vent piping and the furnace operates as if connected to Category I vertical venting.

Horizontal Venting Requirements

Furnace Input	Pipe Size	Reducer Needed	Maximum # Elbows	Max. Feet Vent Pipe
60,000	3"	4" to 3"	4	35
72,000	3"	4" to 3"	4	35
96,000	3"	4" to 3"	4	35
120,000	3"	4" to 3"	4	30

Table 4. Horizontal Venting Requirements

Installation Instructions are provided with the kit. Installation must conform to those instructions and applicable requirements of local codes.

WARNING:

The entire vent system must be sealed with a high temperature sealant which will withstand temperatures of 450°F. Recommended sealants: Dow Corning Sealant 736 RTV; GE 106 RTV; High Tech Ind., High TEMP RED.

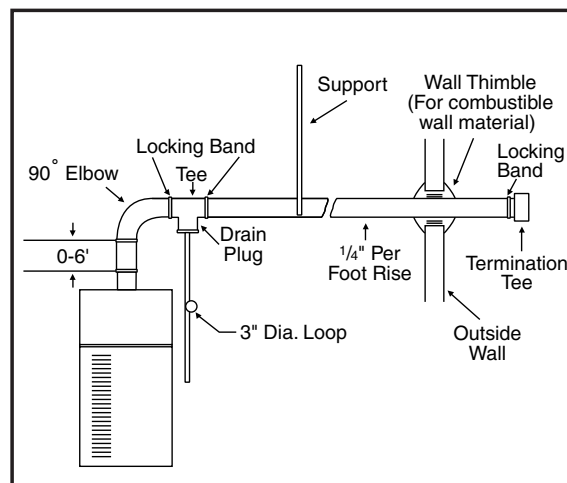


Figure 20. Typical Horizontal Vent Installation

Location of Outdoor Terminations

Horizontal Installation

The vent termination tee must be installed with the following minimum clearances. (See Figure 21.) Vent termination clearances shall be con-

sistent with the **National Fuel Gas Code, ANSI Z223.1/NFPA 54 and/or the CSA B149.1, Natural Gas and Propane Installation Code.**

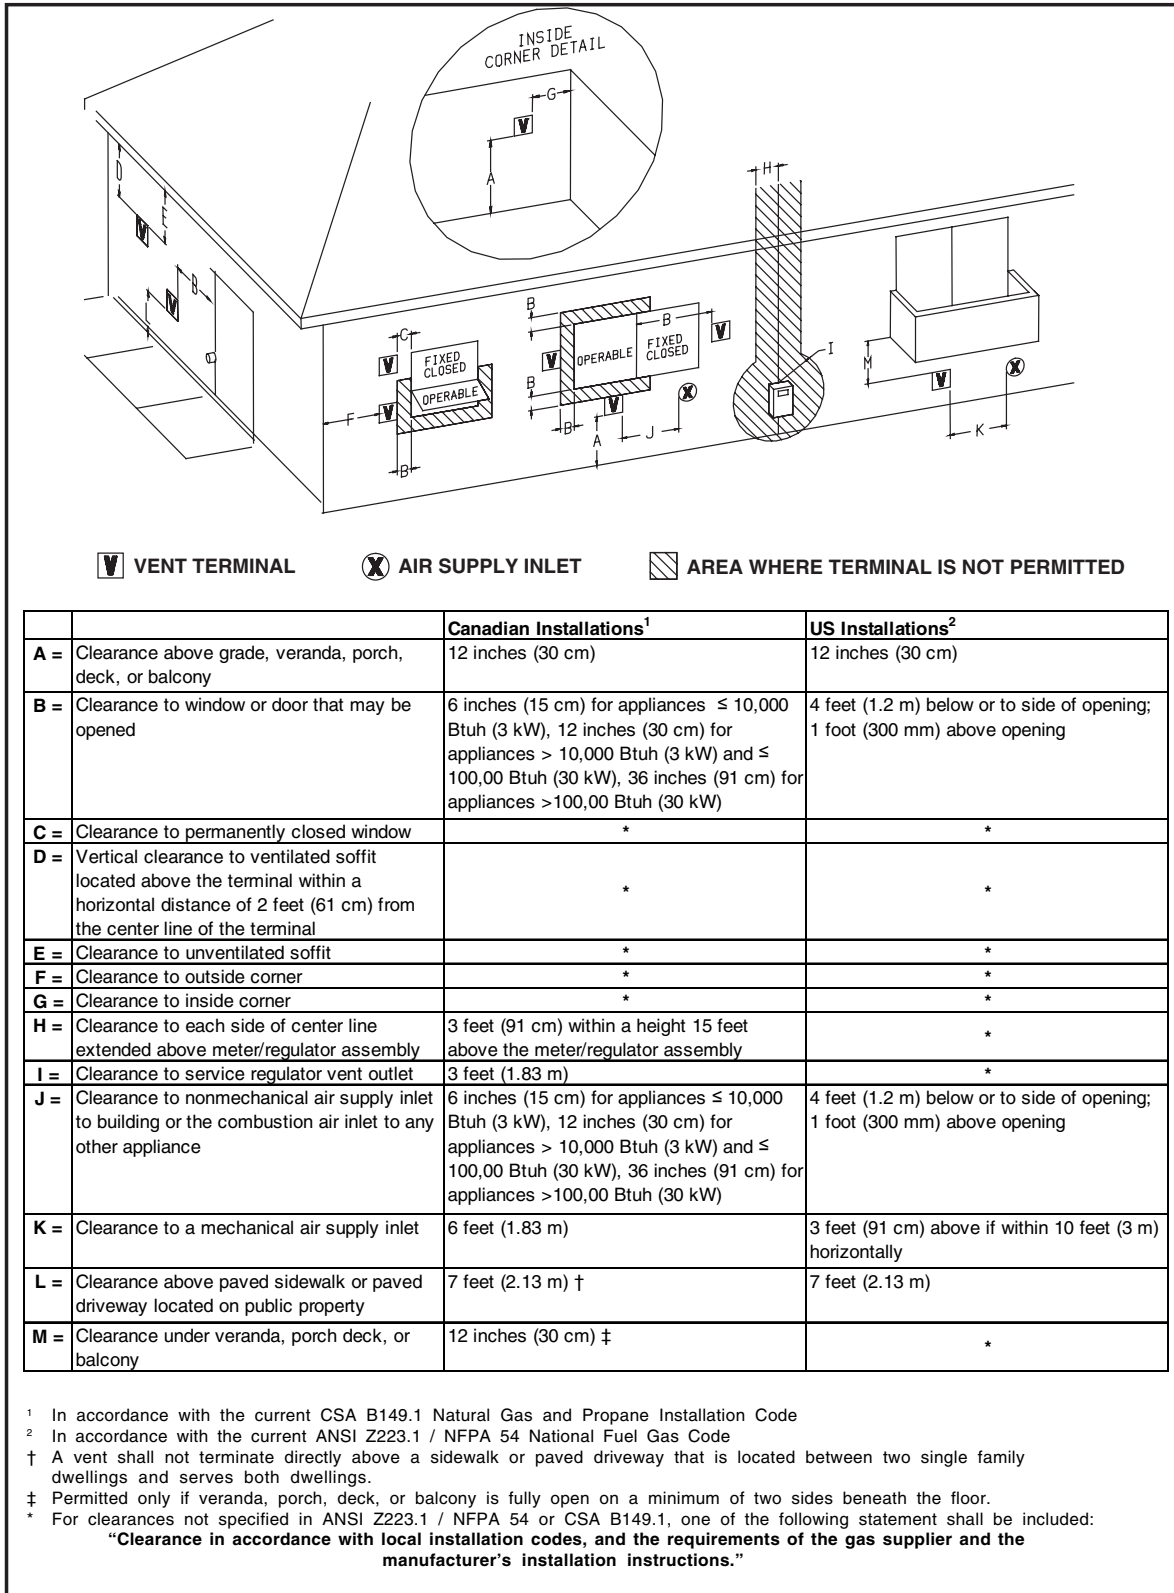


Figure 21. Vent Termination Clearances for Other Than Direct Vent Furnaces

All minimum clearances specified must be maintained to protect building materials from degradation by flue gases.

1. The termination tee must be 12 inches above snow level or grade level which ever is higher. See Figure 22 for alternate method to achieve 12" above snow level.
2. Avoid areas where condensate drainage may cause problems such as above planters, patios, or adjacent to windows where the steam from the flue gases may cause fogging. Do not terminate above any public walkway.
3. Select the point of wall penetration where the minimum 1/4 inch per foot of upward slope can be maintained.
4. When penetrating a noncombustible wall, the hole through the wall must be large enough to maintain the pitch, pipe clearance for passage, and provide for proper sealing. Penetrating a combustible wall requires the use of a wall thimble. (See Figure 22.) A 6-1/2 inch square framed opening is required to insert the thimble halves. The thimble is adjustable to varying wall thickness and is held in place by applying sealant to the male sleeve before assembly. Also run a bead of sealant around the outer wall thimble.
5. The vent pipe must extend 1-1/4 inches through the outer thimble half for a combustible wall. Be sure to check this carefully before cutting the vent pipe.

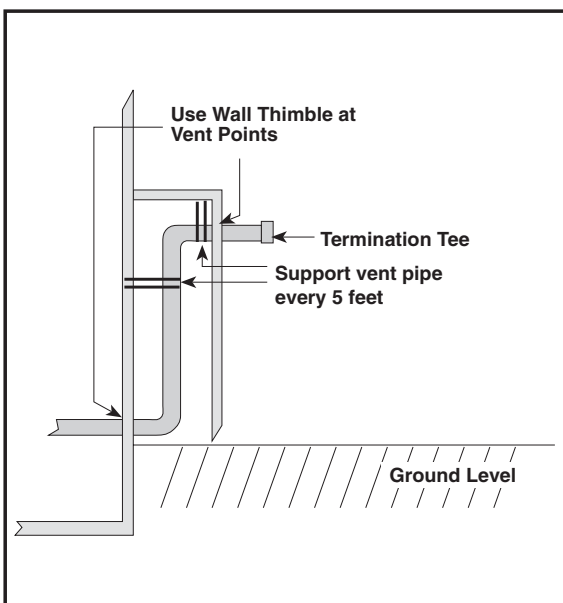


Figure 22. Alternate Horizontal Vent Installation

6. Attach a 3 inch coupling to the end of the pipe that extends through the wall or thimble. This prevents the vent pipe from being pushed inward.
7. Cut an 8 inch minimum piece of vent pipe and connect the coupling to the termination tee. The inside of the tee must be a minimum of 12 inches from the outside of the wall. (See Figure 23.)

Flexible Vent Systems

Flexible gas vent is approved for use in vertical single vent or common vent installations only. The minimum distance to combustibles is 1" for type B insulated and 6" for single wall. The venting system must be installed in accordance with the local authorities, the vent manufacturer's instructions and the instructions listed below.

The flexible vent must be installed in accordance with the venting tables for vertical or common venting only. The vent system must be supported in horizontal runs with 3/4" pipe strap at a maximum of 5 foot intervals. All horizontal sections must have a slope toward the furnace of not less than 1/4" per foot. The vent must not sag, or have any bends greater than 90 degrees.

CIRCULATING AIR SUPPLY

General

Plenums and air ducts must be installed in accordance with the Standard for the Installation of Air Conditioning and Ventilating Systems (NFPA No. 90A) or the Standard for the Installation of Warm Air Heating and Air Conditioning Systems (NFPA No. 90B).

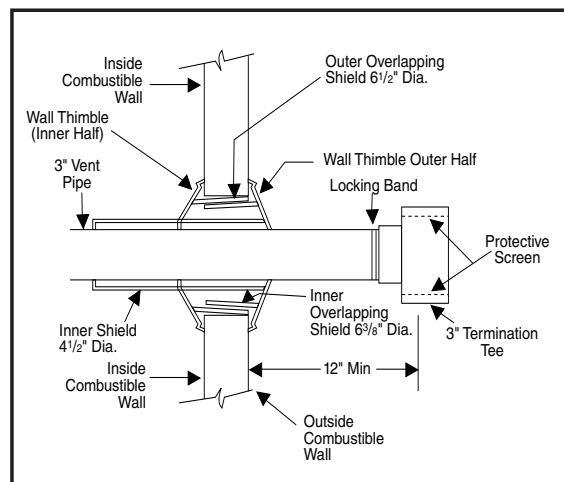


Figure 23. Typical Termination

It is recommended that the outlet duct be provided with a removable access panel. This opening should be accessible when the furnace is installed in service and shall be of a size that smoke or reflected light may be observed inside the casing to indicate the presence of leaks in the heat exchanger. The cover for the opening shall be attached in such a manner as to prevent leaks.

If outside air is used as return air to the furnace for ventilation or to improve indoor air quality, the system must be designed so that the return air is not less than 50° F (10° C) during operation. If a combination of indoor and outdoor air is used, the ducts and damper system must be designed so that the return air supply to the furnace is equal to the return air supply under normal, indoor return air applications.

When a cooling system is installed which uses the furnace blower to provide airflow over the indoor coil, the coil must be installed downstream (on the outlet side) of the furnace or in parallel with the furnace.

If a cooling system is installed in parallel with the furnace, a damper must be installed to prevent chilled air from entering the furnace and condensing on the heat exchanger. If a manually operated damper is installed, it must be designed so that operation of the furnace is prevented when the damper is in the cooling position and operation of the cooling system is prevented when the damper is in the heating position.

Return Air

In applications where the supply ducts carry heated air to areas outside the space in which the furnace is installed, the return air must be delivered to the furnace by duct(s) sealed to the furnace casing, running full size and without interruption.

WARNING:

The solid base of the furnace must be in place when the furnace is installed with side return air ducts. Removal of all or part of the base could cause products of combustion to be circulated into the living space and create potentially hazardous conditions, including carbon monoxide poisoning that could result in personal injury or death.

For Upflow/Horizontal installations: The return air ductwork may be connected to any or all of the following: left side return, right side return, or bottom return. NOTE: Do not use the back of the furnace for return air. Table 2, in the front pages of these instructions, contains the airflow data for each furnace model. Where maximum airflow is 1800 CFM or more, two openings must be used for return air.

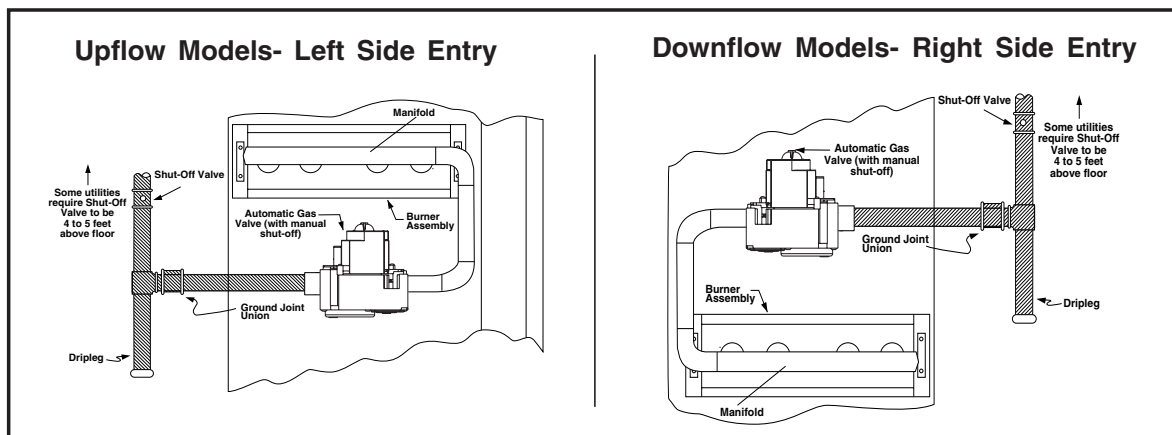


Figure 24. Typical Gas Service Connection

WARNING:

Products of combustion must not be allowed to enter the return air ductwork or the circulating air supply. Failure to prevent products of combustion from being circulated into the living space can create potentially hazardous conditions including carbon monoxide poisoning that could result in personal injury or death.

All return ductwork must be secured to the furnace with sheet metal screws. For installations in confined spaces, all return ductwork must be adequately sealed and joints must be taped. When return air is provided through the bottom of the furnace, the joint between the furnace and the return air plenum must be air tight.

The floor or platform on which the furnace is mounted must provide sound physical support of the furnace with no gaps, cracks, or sagging between the furnace and the floor or platform.

Return air and circulating air ductwork must not be connected to any other heat producing device such as a fireplace insert, stove, etc. Doing so may result in fire, explosion, carbon monoxide poisoning, personal injury, or property damage.

GAS SUPPLY AND PIPING

General

This furnace may be installed for either left or right side gas entry. A typical gas service hookup is shown in Figure 24. When making the gas connection provide clearance between the gas supply line and the entry hole in the furnace casing to avoid unwanted noise and/or damage to the furnace.

All gas piping must be installed in compliance with local codes and utility regulations. Some local regulations require the installation of a manual main shut-off valve and ground joint union external to the furnace. The shut-off valve should be readily accessible for service and/or emergency use. Consult the local utility or gas supplier for additional requirements regarding placement of the manual main gas shut-off. In the absence of local codes the gas line instal-

lation must comply with the latest edition of the National Fuel Gas Code (ANSI Z223.1) or (CAN/CGA B149.1 or .2) Installation Codes.

An 1/8 inch NPT tap must be installed in the gas line to the unit for use when measuring the gas supply pressure. The tap should be readily accessible for service use. A drip leg should be installed in the vertical pipe run to the unit. Table 5 lists gas flow capacities for standard pipe sizes as a function of length in typical applications based on nominal pressure drop in the line.

IMPORTANT NOTES:

1. Gas piping must not be run in or through air ducts, chimneys, gas vents, elevator shafts, etc.
2. Compounds used on threaded joints of gas piping must be resistant to the actions of liquefied petroleum gases.
3. The main manual gas valve and main power disconnect to the furnace must be properly labeled by the installer in case emergency shutdown is required.

Leak Check

After the gas piping to the furnace is complete, all connections must be tested for gas leaks. To check for leaks in gas piping systems, use only a soap and water solution or other approved method.

CAPACITY OF BLACK IRON GAS PIPE (CU. FT. PER HOUR) FOR NATURAL GAS (SPECIFIC GRAVITY - 0.60)								
NOMINAL BLACK IRON PIPE DIAMETER (in.)	LENGTH OF PIPE RUN (feet)							
	10	20	30	40	50	60	70	80
1/2	130	90	75	65	55	50	45	40
3/4	280	190	150	130	115	105	95	90
1	520	350	285	245	215	195	180	170
1 1/4	1050	730	590	500	440	400	370	350
1 1/2	1600	1100	890	760	670	610	560	530

The cubic feet per hour listed in the table above must be greater than the cubic feet per hour of gas flow required by the furnace.

To determine the cubic feet per hour of gas flow required by the furnace, divide the input rate of the furnace by the heating value of the gas:

$$\text{Cubic Feet Per Hour Required} = \frac{\text{Input To Furnace (Btu/hr)}}{\text{Heating Value of Gas (Btu/Cu. Ft.)}}$$

Table 5. Capacity of Black Iron Gas Pipe (cu. ft. per hour) for Natural Gas (specific gravity = .60)

! CAUTION:

Do not use matches, lighters, candles, or other sources of open flame to check for gas leaks.

IMPORTANT NOTE:

When pressure testing the gas supply lines at pressures greater than 1/2 psig (14 inch W.C.), the furnace must be disconnected from the gas supply piping system to prevent damage to the gas control valve. If the test pressure is less than or equal to 1/2 psig (14 inch W.C.), the furnace must be isolated from the gas supply line by closing the manual shut-off valve.

! WARNING:

FIRE OR EXPLOSION HAZARD

Failure to follow the safety warnings exactly could result in serious injury, death or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

MANIFOLD PRESSURE ADJUSTMENT

Manifold pressures for low and high stages are independently adjustable. Adjustment tap locations on the valve are shown in Figure 25. Manifold pressure would be adjusted below procedure:

- Turn off gas shut off valve outside furnace.
- Install manometer on the gas valve at the outlet pressure tap.
- Turn on the shut off. Run furnace at high fire and set manifold pressure. Also set manifold pressure while running at low fire (refer to Tables 7 and 8.)
- Ensure plug is tight after removing manometer.

! WARNING:

This furnace was equipped at the factory for use with natural gas only. A special kit, supplied by the manufacturer, is required to convert the furnace to operate on LP/propane gas. Failure to use the proper conversion kit can cause fire, explosion, property damage, carbon monoxide poisoning, personal injury, or death.

High Altitude Application

High altitude application with this furnace can be field performed by a simple adjustment of manifold pressure, and if necessary changing the orifices. The changes required depend on the installation altitude and the heating value of the

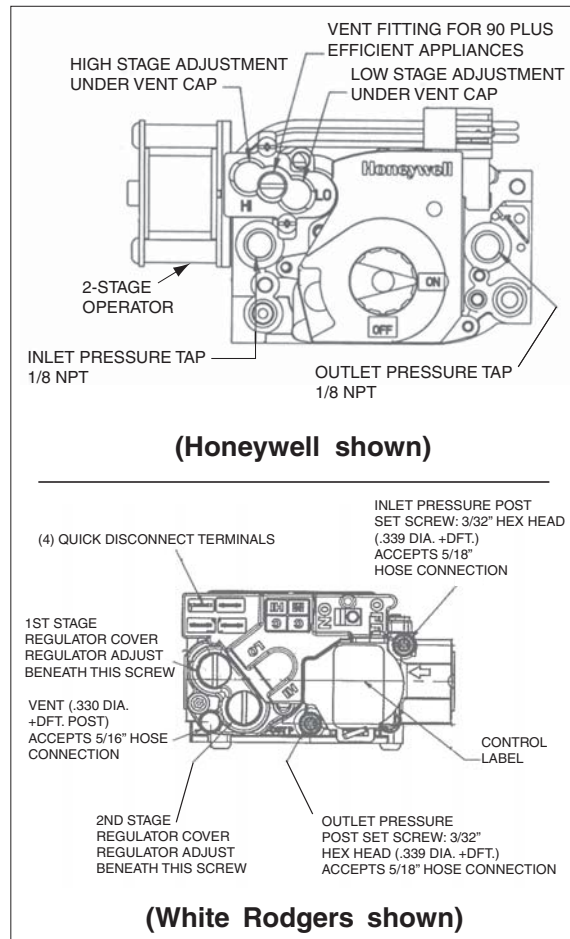


Figure 25. Gas Valve

For a Natural Gas Sea Level Heating Value of 800 to 899 Btu/cu.ft.						
		Elevation (feet above sea level)				
		zero to 1999	2000 to 4999	5000 to 5999	6000 to 7999	8000 to 10000
Manifold Pressure Setting (in WC)	Full Input	3.5	3.5	3.5	3.5	3.0
	Low Input	1.7	1.7	1.7	1.7	1.6

For a Natural Gas Sea Level Heating Value of 900 to 999 Btu/cu.ft.						
		Elevation (feet above sea level)				
		zero to 1999	2000 to 4999	5000 to 5999	6000 to 7999	8000 to 10000
Manifold Pressure Setting (in WC)	Full Input	3.5	3.5	3.5	3.2	2.8
	Low Input	1.7	1.7	1.7	1.6	1.5

For a Natural Gas Sea Level Heating Value of 1,000 to 1,100 Btu/cu.ft.						
		Elevation (feet above sea level)				
		zero to 1999	2000 to 4999	5000 to 5999	6000 to 7999	8000 to 10000
Manifold Pressure Setting (in WC)	Full Input	3.5	3.5	3	2.8	2.5
	Low Input	1.7	1.7	1.5	1.4	1.3

Table 6. Manifold Pressure (in WC) for Natural Gas at Various Altitudes

For a LP Gas Sea Level Heating Value of 2,500 Btu/hr.						
		Elevation (feet above sea level)				
		zero to 1999	2000 to 4999	5000 to 5999	6000 to 7999	8000 to 10000
Manifold Pressure Setting (in WC)	Full Input	10	8.5	10	9	8.5
	Low Input	5.5	5.5	6.5	6.5	6.5

Table 7. Manifold Pressure (in WC) for LP/Propane Gas at Various Altitudes

Furnace Rating Plate Input (Btu/h)	Orifice Drill Size	
	Nat	LP
60,000	45	55
72,000	43	54
96,000	43	54
120,000	43	54

Table 8. Natural and LP Gas Orifice Sizes for Elevations between zero and 4999 ft. Above Sea Level

Furnace Rating Plate Input (Btu/h)	Orifice Drill Size	
	Nat	LP
60,000	45	56
72,000	43	55
96,000	43	55
120,000	43	55

Table 9. Natural and LP gas Orifice Sizes for Elevations between 5000 and 10,000 ft. Above Sea Level

gas. The gas heating value based on sea level can be obtained from your local gas utility. The heating value of gas at high altitude is always lower than the sea level heating value. The heating values used in Tables 6 & 7 are based on sea level values.

Natural Gas High Altitude Conversion

All factory shipped furnaces are ready to operate between zero and 4999 ft. above sea level. For higher altitudes (between 5000 and 10,000 ft. above sea level), conversion can be achieved simply by adjusting the furnace manifold pressure as shown in Table 6.

LP/Propane Gas Conversion

IMPORTANT NOTE: When converting a low NOx furnace from Natural gas to LP/propane gas, it is necessary to remove the NOx Baffles from the furnace.

Conversion of this furnace to utilize LP/propane gas must be made by qualified service personnel, using factory authorized or approved parts. Conversion to LP/propane gas can be accomplished by first replacing the natural gas orifices with the appropriate LP/propane orifices shown in Table 8 or 9. Note: for installations between

zero and 5000 ft. above sea level, a, #54 drill size orifice should be used depending upon the rated firing rate of the unit (see Table 8 or 9). However for installations above 5000 ft. above sea level, a # 55 drill size orifice should be used. After changing the orifices, use Table 7 to determine the appropriate manifold pressure for your installation.

Conversion to LP/propane, sea level, and high altitude is detailed in the installation instructions provided with the conversion kit. Approved conversion kits are listed below.

United States LP/Propane Gas Sea Level and High Altitude Conversion Kit - P/N 904404.

This kit is for LP/propane conversion in the United States at altitudes between zero and 10,000 ft. above sea level. Follow the installation instructions supplied with the kit for proper installation.

Canadian LP/Propane Gas Sea Level and High Altitude Conversion Kit - P/N 904405.

This kit is for LP/propane conversions in Canada at altitudes between zero and 4500 ft. above sea level. Follow the installation instructions supplied with the kit for proper installation.



WARNING:

To avoid electric shock, personal injury, or death, turn off the electric power at the disconnect or the main service panel before making any electrical connections.

ELECTRICAL WIRING

General

Electrical connections must be made in accordance with all applicable local codes and ordinances, and with the current revision of the National Electric Code (ANSI/NFPA 70).

For Canadian installations the electrical connections and grounding shall be done in accordance with the current Canadian Electrical Code (CSA C22.1, Part 1 and/or local codes). If any of the original wire as supplied with the furnace must be replaced, it must be replaced with wire having a temperature rating of at least 105°C. Refer to the furnace nameplate and Table 10 for electrical requirements.

Furnace Model Number *TA,*TK	Furnace Input (Btu/hr)	Cabinet Width (in.)	Nominal Electrical Supply	Maximum Operating Voltage	Minimum Operating Voltage	Maximum Furnace Amperes	Minimum Wire Gauge	Maximum Fuse or Circuit Breaker Amps**
060(+)-08A	60,000	14.25	115-60-1	127	103	7.1	14	15
060(+)-12A	60,000	14.25	115-60-1	127	103	7.1	14	15
072(+)-12B	72,000	19.75	115-60-1	127	103	7.1	14	15
072(+)-16B	72,000	19.75	115-60-1	127	103	9.0	14	15
096(+)-12B	100,000	19.75	115-60-1	127	103	7.1	14	15
096(+)-16B	100,000	19.75	115-60-1	127	103	9.0	14	15
096(+)-20B	100,000	19.75	115-60-1	127	103	14.5	12	20
120(+)-16B	120,000	19.75	115-60-1	127	103	9.0	14	15
120(+)-20B	120,000	19.75	115-60-1	127	103	14.5	12	20
120(+)-16C	120,000	22.50	115-60-1	127	103	9.0	14	15
120(+)-20C	120,000	22.50	115-60-1	127	103	12.2	12	20

Note: (+) can be C or N.

**Time-delay fuses or HACR-type circuit breakers are required.

Thermostat Wire Gauge	Recommended Thermostat Wire Length	
	2-wire (heating)	4 or 5-wire (cooling)
24	55 ft.	25 ft.
22	90 ft.	45 ft.
20	140 ft.	70 ft.
18	225 ft.	110 ft.

Table 10. Electrical Data

Line Voltage Wiring

The line voltage (115 volt) to the furnace must be supplied from a dedicated branch circuit containing the correct fuse or circuit breaker for the furnace. (See Table 10.) An electrical disconnect must be installed to be readily accessible from and located within sight of the furnace. (See the Wiring Diagram label in the furnace and Figure 35.)



CAUTION:

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

Verify proper operation after servicing.

The furnace cabinet must have an uninterrupted, unbroken ground to minimize injury should an electrical fault condition occur. **The controls used in this furnace require an earth ground to operate properly.** Acceptable methods for grounding are electrical wire or conduit approved for electrical ground service. Do not use gas piping as an electrical ground.

IMPORTANT NOTE:

Proper line voltage polarity must be maintained in order for the control system to operate correctly. Verify that the incoming neutral line is connected to the white wire and the incoming "hot" line is connected to the black wire. These furnaces will not operate unless the polarity and ground are properly connected. See Figure 26.

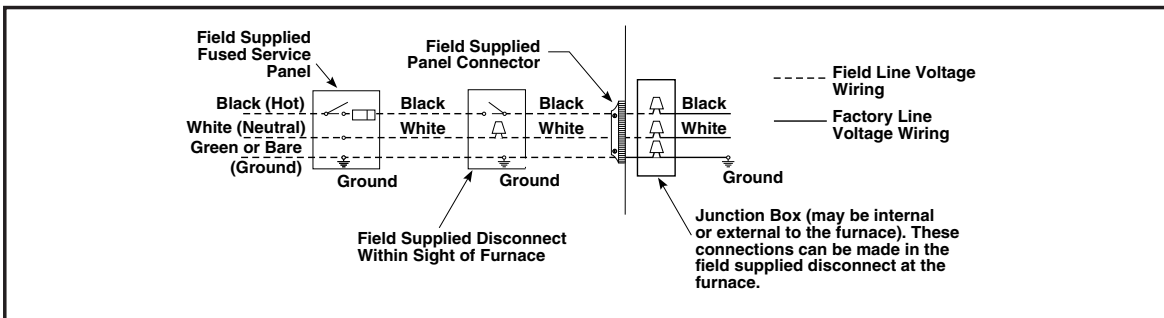


Figure 26. Line Voltage Field Wiring

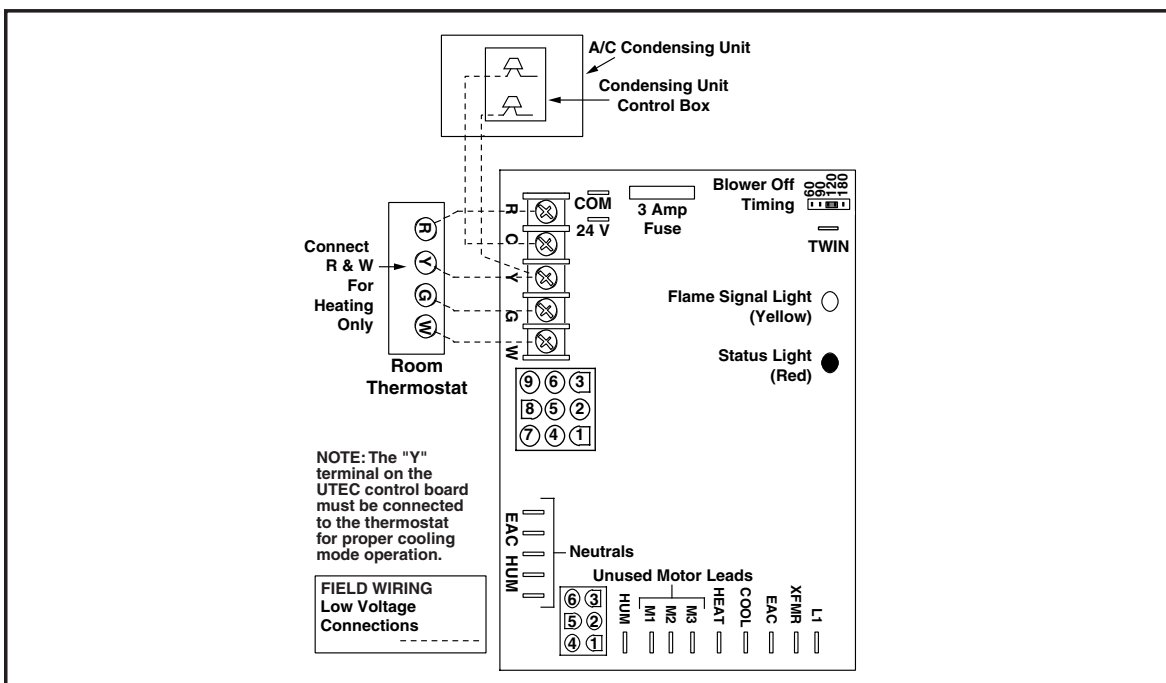


Figure 27. Low Voltage Field, Four-wire Heating/Cooling Applications

Low Voltage Wiring

Staging Configurations

These furnaces are factory configured to operate on high fire only, but can be field converted to operate as two-stage furnaces.


NOTE: To achieve full rated capacity and efficiency, the furnace should be operated in the factory configuration (high fire only as described in part 2.)

1. *Two stage thermostat configuration* – For this installation a two stage heating thermostat is used. **CAUTION:** Disconnect yellow wire with black stripe from low firing of gas valve. Remove female connector from yellow/black wire and strip insulation from end. Connect stripped yellow wire with black stripe to (W2) from the thermostat. (See Figure 28). The first stage bulb (W1) is connected to W on the furnace control board. On a call for first stage heat, the furnace will operate at low fire and the blower will run at a lower speed. On a call for second stage heat, the furnace will operate at high fire and the blower will run at a higher speed. The furnace will stage between low fire, high fire, and off depending on the thermostat signal.

2. *High fire only configuration* – As shipped from the factory, the low and high terminals on the gas valve are connected in parallel (See Figure 29). This defeats the staging feature and the furnace operates on high fire only. All of the burners will operate on a call for heat and the variable speed blower will operate at a higher speed.

3. *Low fire only configuration* – For this installation, the high terminal is disconnected (See Figure 30). This defeats the staging feature and the furnace operates on low fire only. The furnace will run at reduced firing rate and the variable speed blower will operate at a lower speed.

4. *Outdoor ambient dependent configuration* – For this installation, the high and low terminals are connected in parallel with an outdoor thermostat (open on rise style) in series with the high terminal (See Figure 31). **CAUTION:** DO NOT CONNECT W2 from outdoor thermostat to the furnace wiring when using the outdoor ambient dependent configuration. When the outdoor temperature is above the set point, the outdoor thermostat opens keeping the high terminal closed. The furnace operates in the low fire mode at a lower blower speed. When the

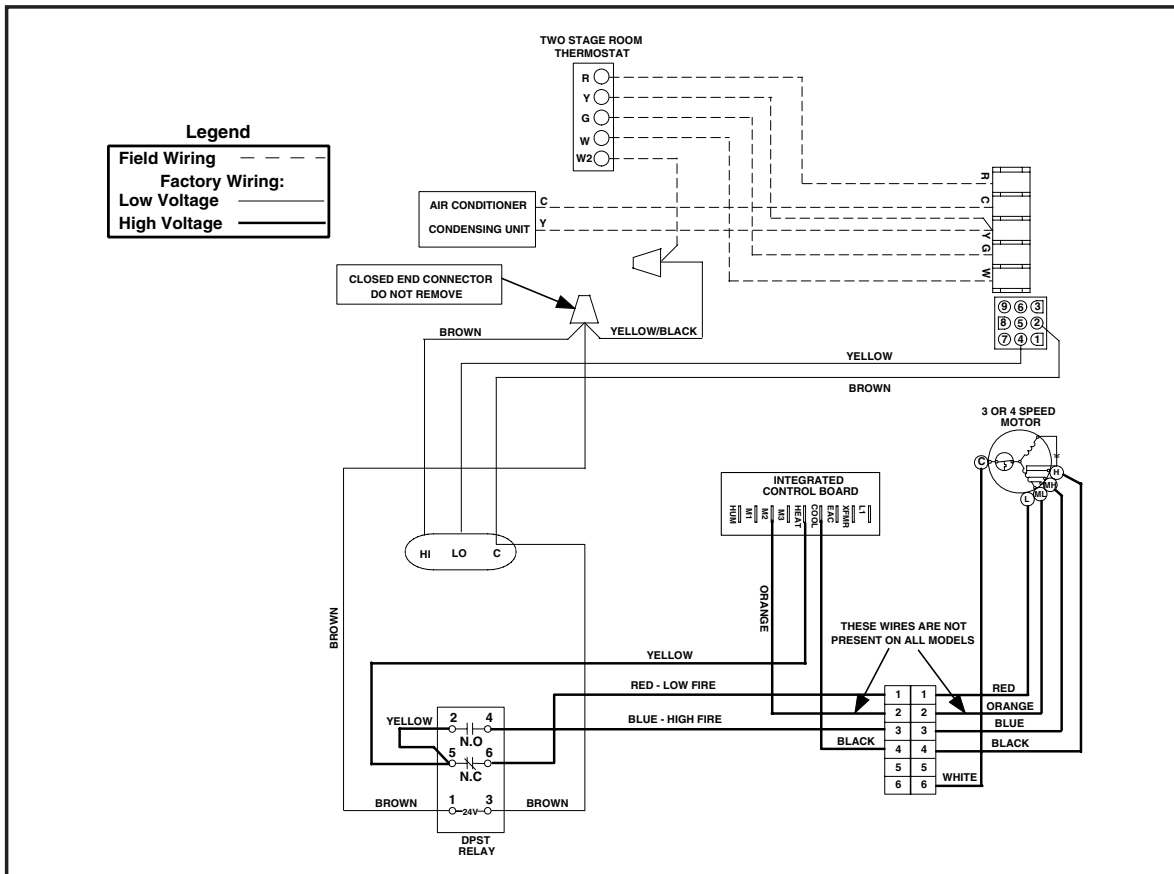

outdoor thermostat closes, the high fire on gas valve opens and the furnace operates in the high fire mode at higher blower speed.

5. *Timed staging configuration* – For this installation, the low and high on the gas valve are connected in parallel with a delay on make timer (two wire style) in series with the low fire gas valve (See Figure 32). **CAUTION: DO NOT CONNECT W2** from thermostat to the furnace wiring when using timed stage configuration. When the low fire on the gas valve is energized, the furnace operates in the low fire mode at a lower blower speed and the timer begins its delay function. If the room thermostat is not satisfied before the timer activates, the furnace will stage to high fire and the blower will operate at a higher speed until the room thermostat is satisfied.

Install the thermostat per the manufacturer's instructions. The low voltage (24 volt) connections from the thermostat are made at the terminal strip on the control board in the furnace. See Figures 28-32 for the proper connections for heating only (four wire) and heating/cooling (five wire) applications. The recommended minimum wire gauge for thermostat wiring is shown in Table 10.

The thermostat must not be installed on an outside wall or any other location where its operation may be adversely affected. Adverse affects include radiant loading from fireplaces, sunlight, or lighting fixtures, and convective loading from warm air registers or electrical appliances.

To check the heat anticipator setting either:

1. Add the current draw of the system components; or
2. Measure the current flow on the thermostat R-W circuit after the circulating blower motor has started.

Set the heat anticipator according to the thermostat manufacturer's instructions for heat anticipator settings.

START-UP AND ADJUSTMENTS

General

Prior to start-up, verify that:

1. The line voltage power leads are securely connected, that the polarity of the connections is correct, and that the furnace is properly grounded.
2. The thermostat wires (R, W, Y, and G) are

securely connected to the correct leads on the terminal strip of the circuit board.

3. The gas line service pressure does not exceed 10.0 in. water column (0.36 psig), and is not less than 4.5 in. water column (0.16 psig) for natural gas. For LP gas the line service pressure must not exceed 14 in. water column (0.51 psig), and must not be less than 11.0 in. w.c. (0.40 psig).
4. The roll-out and vent safety manual reset switches are closed. If necessary, press the red button to reset a switch. DO NOT install a jumper wire across a switch to defeat its function. If a switch reopens on start-up, DO NOT reset the switch without identifying and correcting the fault condition which caused the switch to trip.
5. The blower door is in place, closing the door switch in the line voltage circuit.
6. The gas line has been purged and all connections are leak tight.

Start-up Procedures

After all of the above checks have been made:

1. Set the thermostat to the lowest setting.
2. Close the disconnect(s) to provide line voltage to the furnace.
3. Follow the procedures given on the operating instruction label attached to the furnace.
4. Set the thermostat above room temperature and verify the operating sequence. (See the Sequence of Operation).
5. After the furnace has run for approximately five minutes, set the thermostat below room temperature and verify steps (9) through (11) of the Sequence of Operation.

Verifying and Adjusting Firing Rate

The firing rate must be verified for each installation to prevent over-firing the furnace.

IMPORTANT NOTE:

The firing rate must not exceed the rate shown on the furnace rating plate. At altitudes above 2000 feet it must not exceed that on the rating plate less 4% for each 1000 feet.

Follow the procedure below to determine the firing rate.

1. Shut off all other gas fired appliances.
2. Start the furnace and allow it to run for at least three minutes.
3. Measure the time (in seconds) required for the gas meter to complete one revolution.

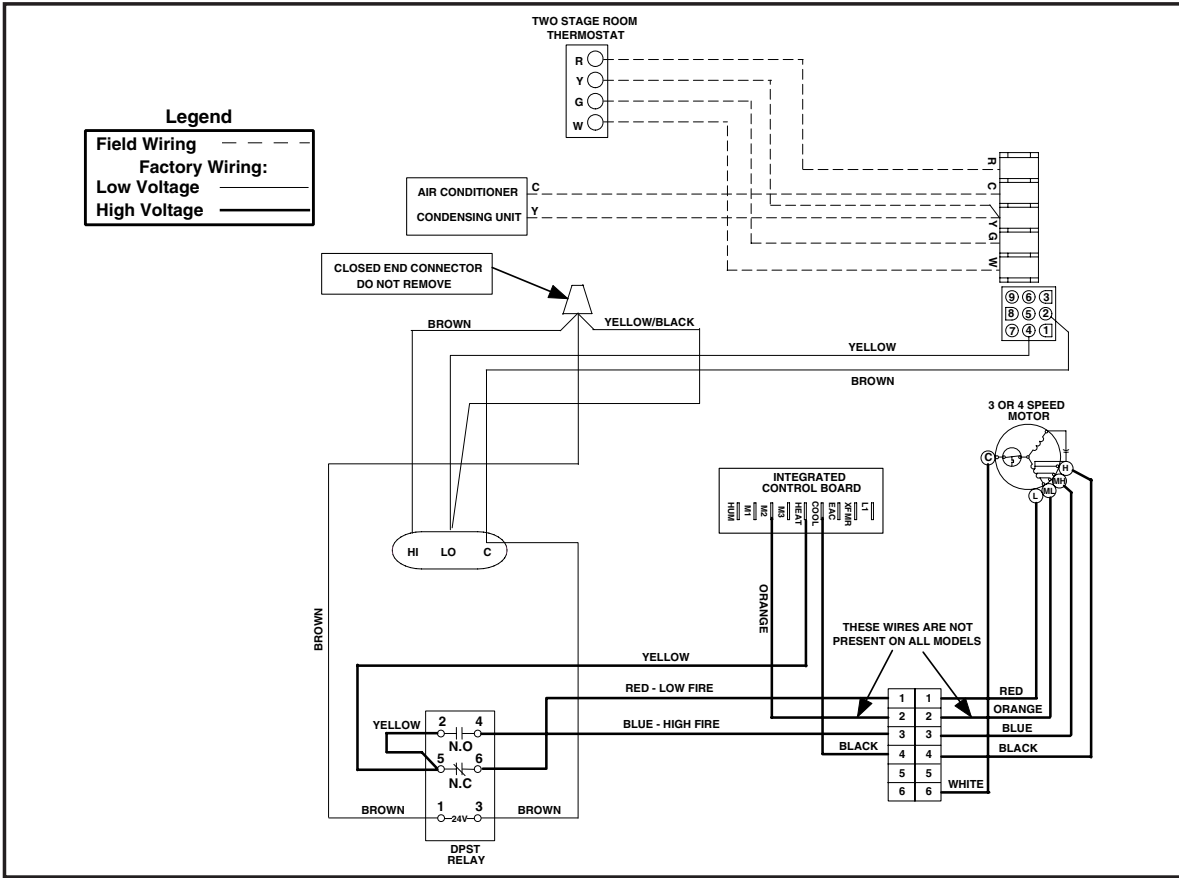


Figure 29. High Fire Only Configuration

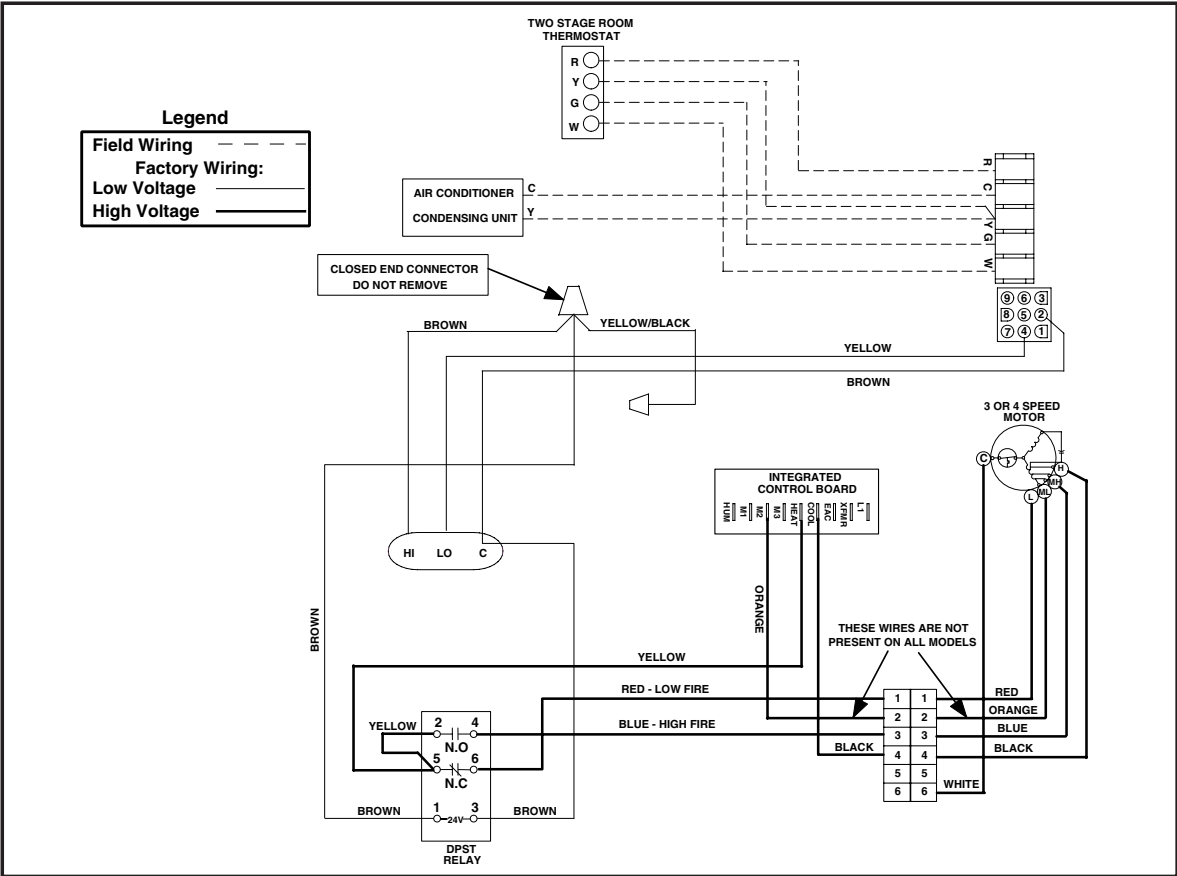


Figure 30. Low Fire Only Configuration

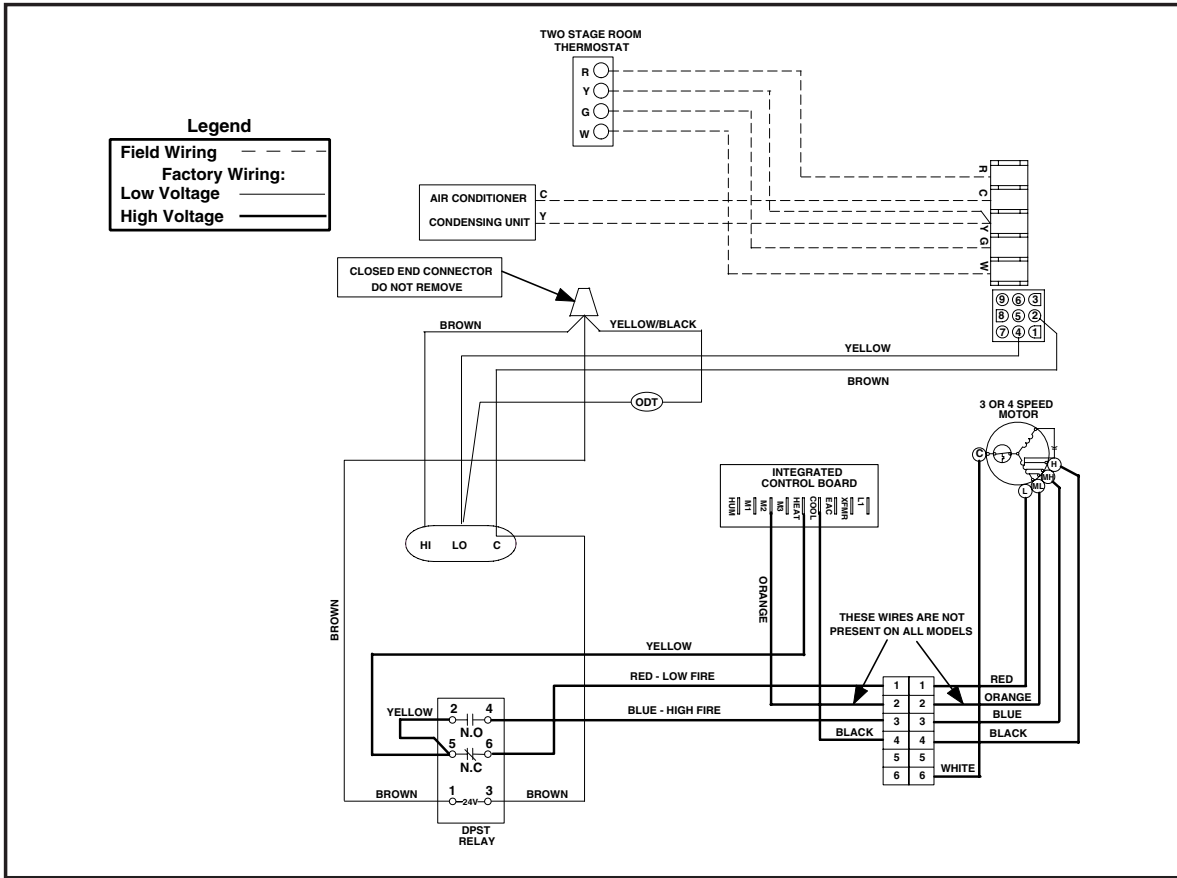


Figure 31. Outdoor Ambient Dependent

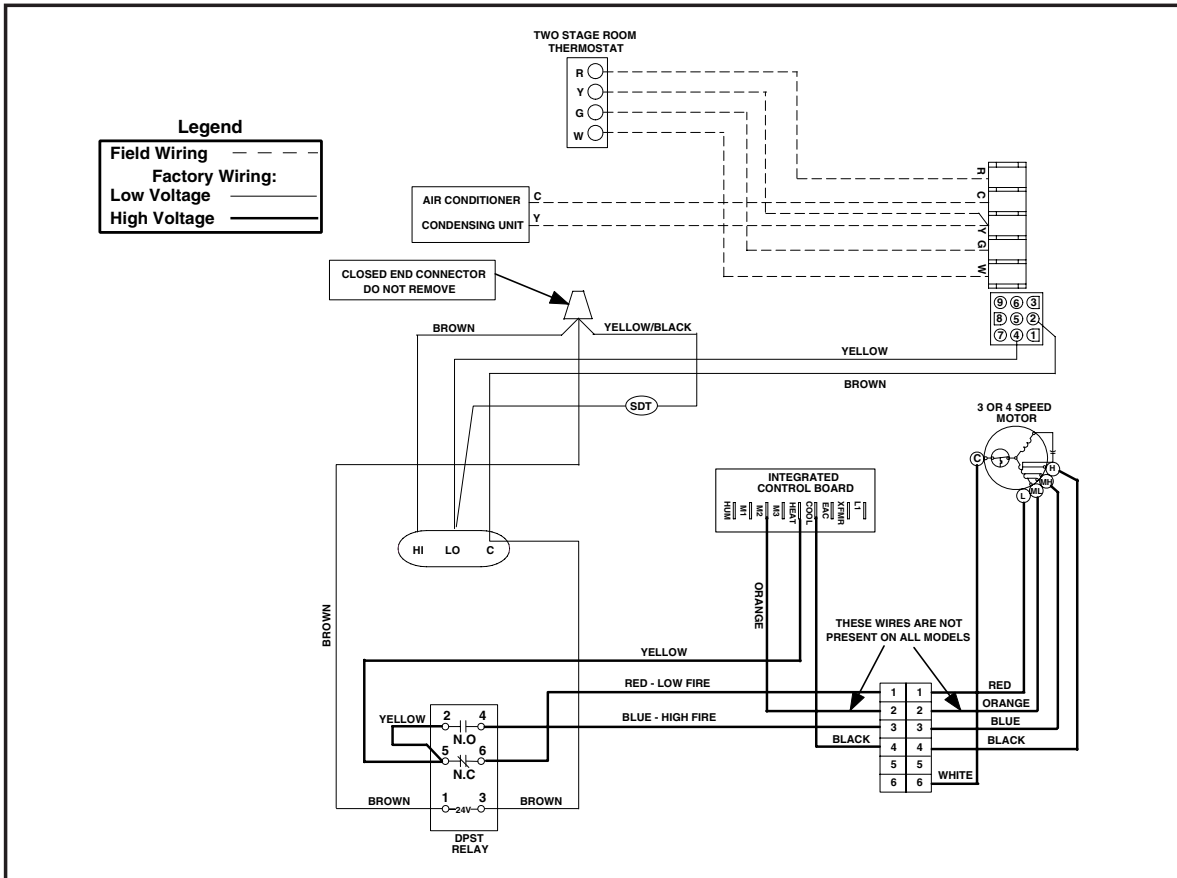


Figure 32. Timed Two Stage Configuration

4. Convert the time per revolution to cubic feet of gas per hour using Table 11.
5. Multiply the gas flow rate in cubic feet per hour by the heating value of the gas in Btu per cubic foot to obtain the firing rate in Btu per hour. Example:

- Time for 1 revolution of a gas meter with a 1 cubic foot dial = 40 seconds.
- From Table 11 read 90 cubic feet per hour of gas.
- Heating value of the gas (obtained from gas supplier) = 1040 Btu per cubic foot.
- Firing rate = 1040 x 90 = 93,600 Btuh.

6. Adjustments to the firing rate can be made by adjusting the gas manifold pressure. See the High Altitude Application section for additional information of firing rate at elevations above 2000 ft.

The manifold pressure must be set to the appropriate value for your installation. Refer to either Table 6 for natural gas or Table 7 for LP/propane gas to verify the manifold pressure setting required for your particular installation. To adjust the manifold pressure, remove the regulator cap and turn the adjusting screw clockwise to increase pressure or counter-clockwise to reduce pressure. Replace the regulator cap after adjustments are complete.



CAUTION:

Do not re-drill the burner orifices. If the orifice size must be changed, use only new orifices.

Verifying and Adjusting Temperature Rise

Verify the temperature rise through the furnace is within the range specified on the furnace rating plate. Temperature rises outside the specified range could result in premature heat exchanger failure.

Place thermometers in the return and supply air stream as close to the furnace as possible. The thermometer on the supply air side must be shielded from direct radiation from the heat exchanger to avoid false readings. Adjust all registers and duct dampers to the desired position and run the furnace for ten to fifteen minutes before taking any temperature readings. The temperature rise is the difference between the supply and return air temperatures. For typical duct systems, the temperature rise will fall within the range specified on the rating plate with the blower speed at the factory recommended setting. If the temperature rise measured is outside the range specified, it may be necessary to change the blower speed. Lower blower speeds will increase the temperature rise and higher blower speeds will decrease the temperature rise. The furnace is equipped with a multi-speed motor. Heating and cooling speed selection is made by moving the leads located in the furnace (See Figure 33 blower relay). The wiring diagram on the furnace and Figure 35 show the speed taps for adjusting motor speed.

If it is desired that the blower operate at the same speed for heating and cooling, tape off the unused blower lead and install the jumper wire. The jumper wire should be connected between the “cool” terminal on the control board and the

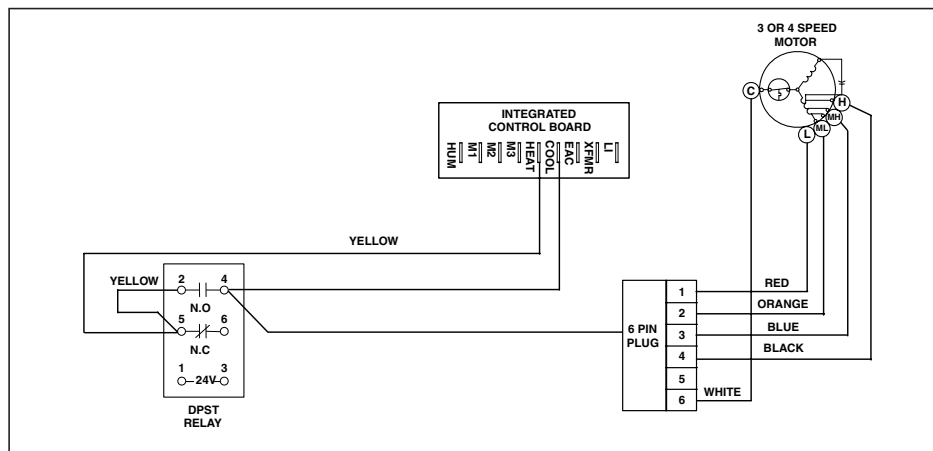


Figure 33. Blower Relay

appropriate terminal on the blower relay. Figure 33 shows high fire heating and cooling using the same blower speed.

The integrated control is factory set to start the circulating air blower 30 seconds after the gas valve is opened. The integrated control is factory wired to turn the blower motor off 120 seconds after the gas valve is closed. If necessary for comfort, the "off" time may be changed by adjusting the Blower Off jumper on the integrated control. See Figure 34 for blower on and off time adjustments.

! WARNING:

To avoid electric shock, personal injury, or death, disconnect the electric power before performing any maintenance.

Verifying Burner Operation

To verify operation of the burners, make sure that the furnace door is in place and that there is power to the furnace. Set the thermostat to a temperature above room temperature and ob-

serve the ignition sequence. The burner flame should carry over immediately between all burners. The flames should be blue, without yellow tips. Flames should extend from each burner without lifting off, curling, or floating. After verifying satisfactory flame characteristics, set the thermostat to a temperature below room temperature and verify that the burner flame extinguishes completely.

Verify Operation of the Supply Air Limit Switch

To verify operation of the supply air limit switch, make sure that the blower door is in place and that there is power to the furnace. Block the return airflow to the furnace by installing a close-off plate in place of or upstream of the filter(s). Set the thermostat to a temperature above room temperature and verify that the Sequence of Operation is as described in these instructions. The limit switch should function to turn off the gas valve within approximately four minutes (the exact time depending on the efficiency of the close-off in blocking the return air to the furnace). The circulating air and combustion blowers should continue to run when the limit switch opens. Remove the close-off immedi-

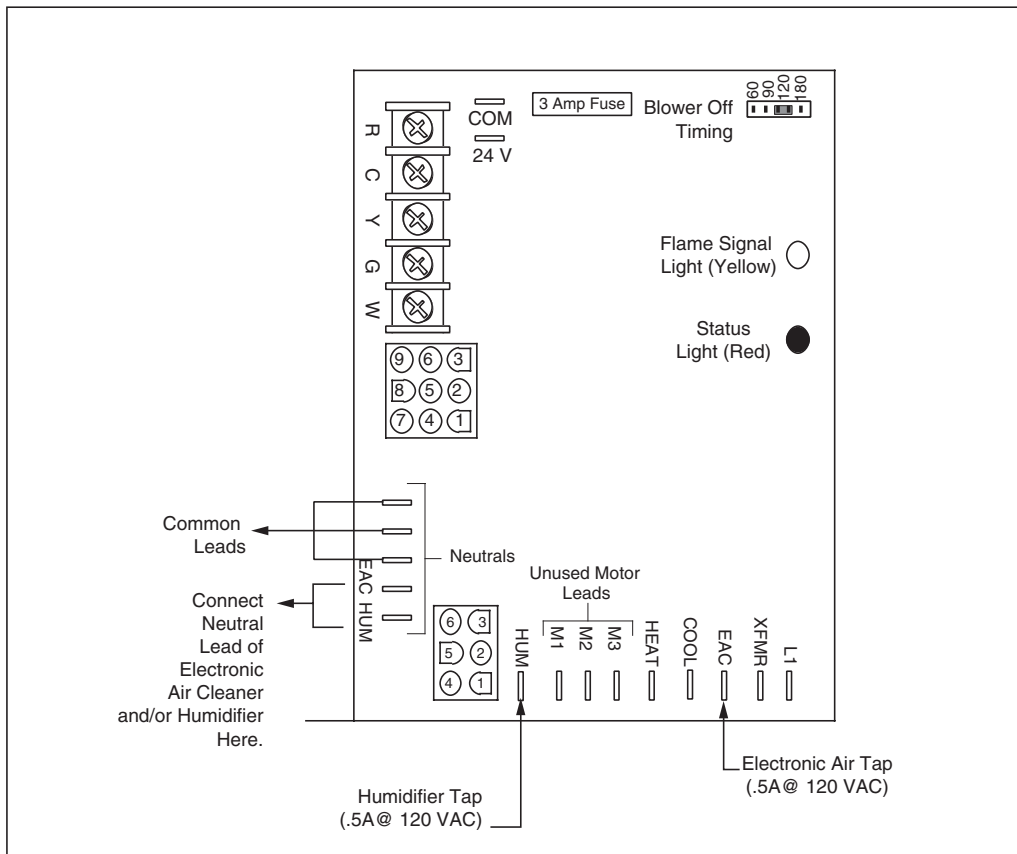


Figure 34. Integrated Control

ately after the limit switch opens. If the furnace operates for more than four minutes with no return air, set the thermostat to a temperature below room temperature, shut off the power to the furnace, and replace the limit switch.

DESCRIPTION OF COMPONENTS

Figure 36 shows the location of each of the functional components described below. Also, refer to the Sequence of Operation Section of this manual. If any component of the furnace

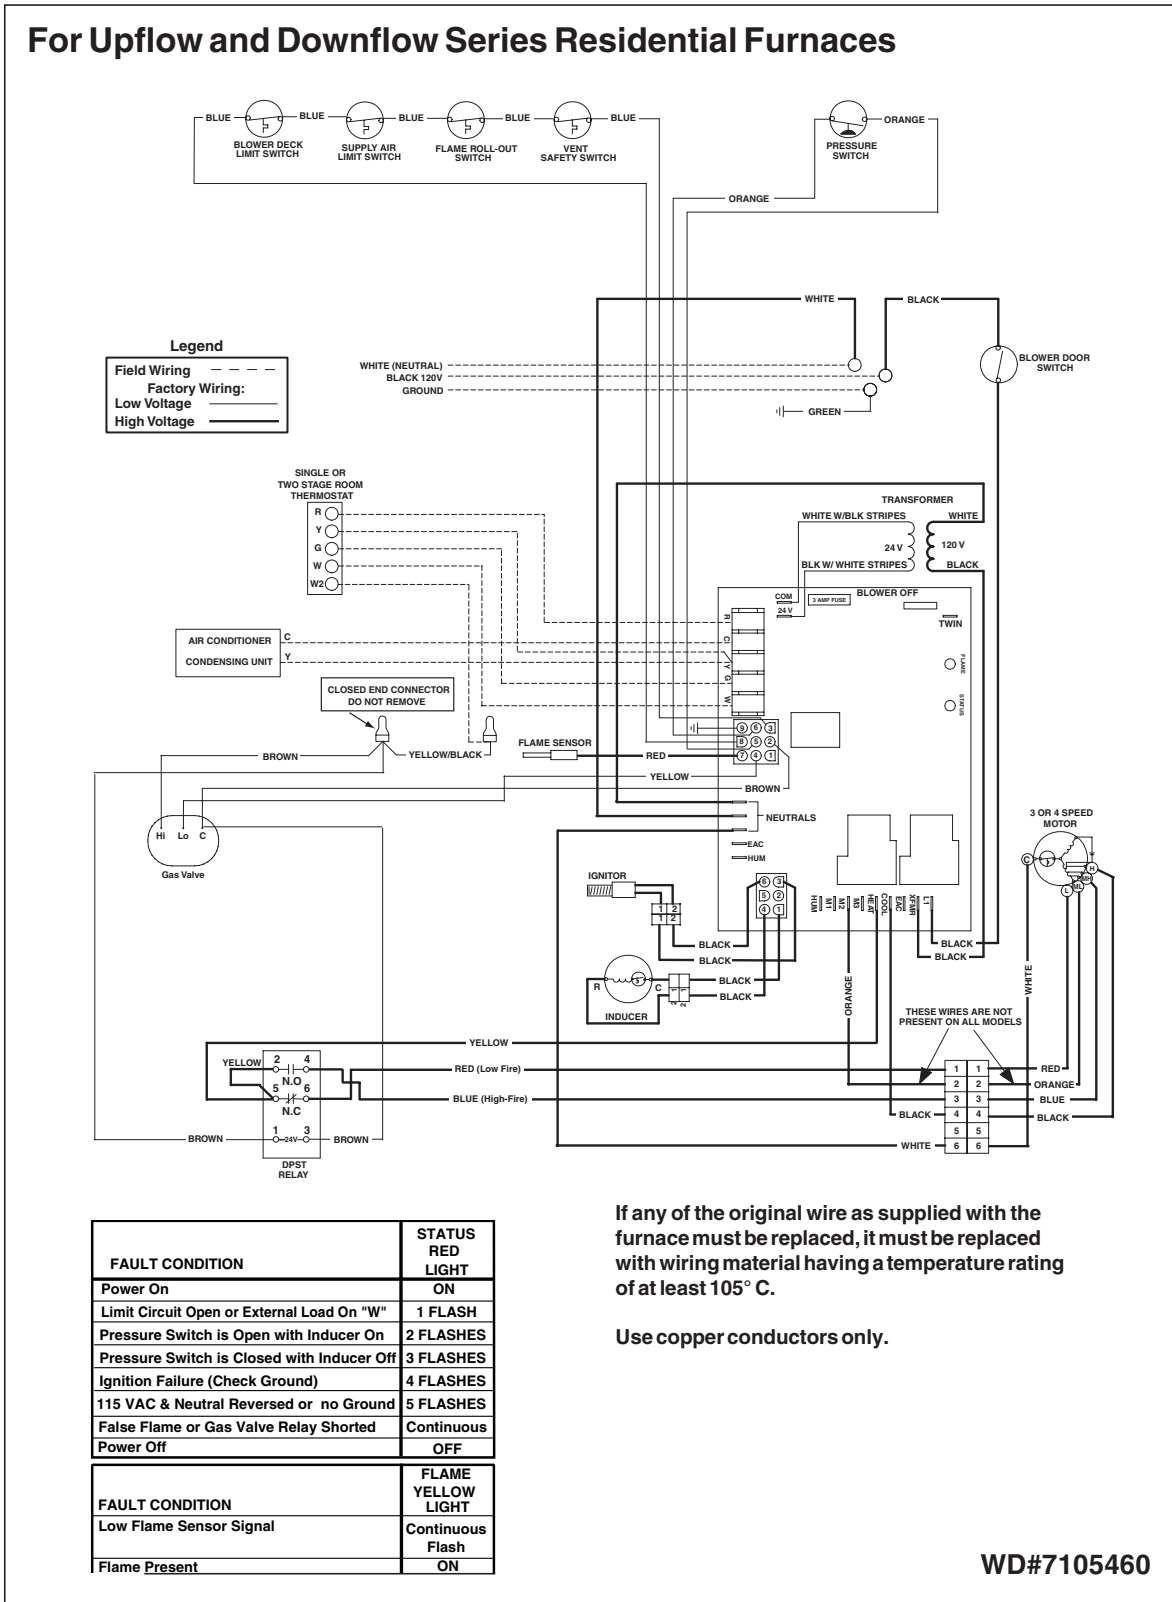


Figure 35. Wiring Diagram for Upflow and Downflow Models

GAS FLOW RATE (CUBIC FEET PER HOUR)							
TIME FOR ONE REVOLUTION (SECONDS)	CUBIC FEET PER REVOLUTION OF METER			TIME FOR ONE REVOLUTION (SECONDS)	CUBIC FEET PER REVOLUTION OF METER		
	1	5	10		1	5	10
10	360	1800	3600	66	55	273	545
12	300	1500	3000	68	53	265	529
14	257	1286	2571	70	51	257	514
16	225	1125	2250	72	50	250	500
18	200	1000	2000	74	49	243	486
20	180	900	1800	76	47	237	474
22	164	818	1636	78	46	231	462
24	150	750	1500	80	45	225	450
26	138	692	1385	82	44	220	439
28	129	643	1286	84	43	214	429
30	120	600	1200	86	42	209	419
32	113	563	1125	88	41	205	409
34	106	529	1059	90	40	200	400
36	100	500	1000	92	39	196	391
38	95	474	947	94	38	191	383
40	90	450	900	96	38	188	375
42	86	429	857	98	37	184	367
44	82	409	818	100	36	180	360
46	78	391	783	102	35	176	353
48	75	375	750	104	35	173	346
50	72	360	720	106	34	170	340
52	69	346	692	108	33	167	333
54	67	333	667	110	33	164	327
56	64	321	643	112	32	161	321
58	62	310	621	114	32	158	316
60	60	300	600	116	31	155	310
62	58	290	581	118	31	153	305
64	56	281	563	120	30	150	300

Table 11. Gas Flow Rate

must be replaced, use only factory authorized replacement parts. See the Replacement Parts List for the factory authorized replacement for each component.

Flame Sensor

The flame sensor acts to prove that flame has carried over from the igniter to the opposite end burner. If no flame is sensed, the furnace will shut down within 7 seconds of ignition.

Flame Roll-Out Switch

The flame roll-out switch verifies that the burner flames are drawn into the heat exchanger tubes. If the burner flames are not properly drawn into the heat exchanger, the flame roll-out switch will open. The circulating air blower (and combustion blower, if connected) will continue to operate if the flame roll-out switch opens.

Gas Valve

The gas valve controls the flow of gas to the burners. When the gas valve is energized it automatically opens and regulates the gas pressure in the manifold.

Pressure Switch

The pressure switch verifies that the inducer is drawing the combustion gases through the heat exchanger.

Supply Air Limit Switch

The supply air limit switch prevents the air temperature leaving the furnace from exceeding the maximum allowable outlet air temperature.

Vent Safety Switch

The vent safety switch shuts the furnace down if the vent becomes blocked or restricted.

MAINTENANCE

It is recommended that the furnace be checked yearly. At a minimum, this check should include the following items.

 **WARNING:**

To avoid electrical shock, personal injury, or death, turn off the electric power at the disconnect or the main service panel before making any electrical connections.

! WARNING:

Products of combustion must not be allowed to enter the living space. Failure to prevent products of combustion from being circulated into the living space can create potentially hazardous conditions including carbon monoxide poisoning that could result in personal injury or death.

Vent System

Check the vent pipe to ensure that it is not corroded or blocked by debris. Any corroded section of vent pipe must be replaced, and any obstruction or blockage must be removed prior to operating the furnace.

Air Filter(s)

! WARNING:

Never operate the furnace without a filter in place. Dust and lint in the return air can build up on internal components, resulting in loss of efficiency, equipment damage, and possible fire.

Air filter(s) are not supplied with the furnace as shipped from the factory.

The installer must provide a high velocity filter and rack for a filter in the return air duct adjacent to the furnace, or in a return air grill to the furnace. Filters should be changed or cleaned monthly during the heating season. New or newly renovated homes may require more frequent changing until the construction dust has been removed.

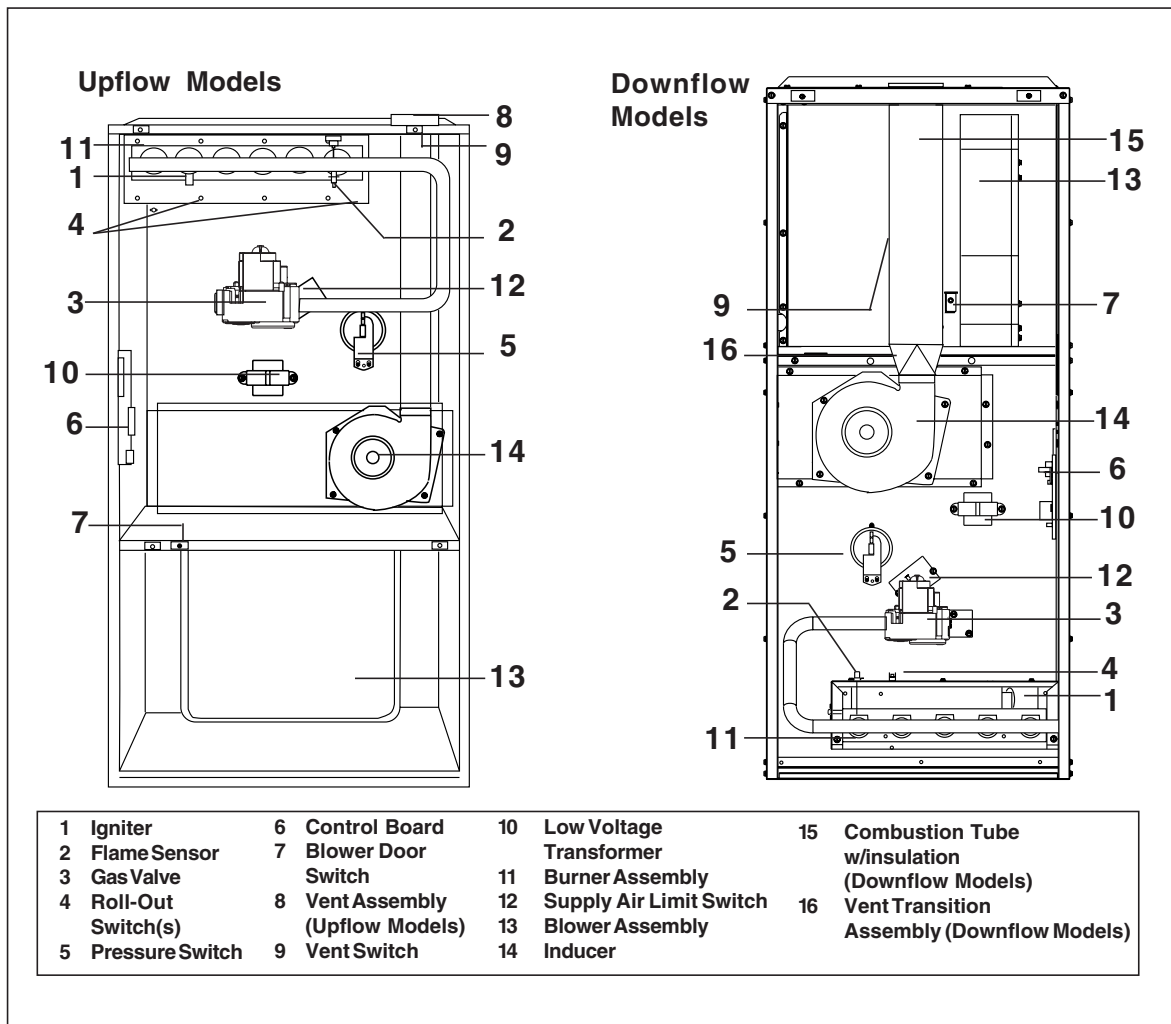


Figure 36. Location of Major Components

Filters for side return and bottom return applications are available from your local distributors.

Lubrication

The bearings in the circulating air blower motor and inducer blower used in these furnaces are pre-lubricated and sealed at the factory. No further oiling of the bearings is required for the life of the motor.

Blower Compartment

The blower compartment should be cleaned monthly during the heating and cooling seasons to remove any dirt and lint that may have accumulated in the compartment or on the blower and motor. Dirt and lint can create excessive loads on the motor resulting in higher than normal operating temperatures and shortened service life.

Heat Exchanger and Burner Maintenance

The furnace should operate for many years without soot buildup in the flue passageways, however, the flue passageways, the vent system, and the burners should be inspected and cleaned (if required) by a qualified serviceman annually to ensure continued safe operation. Particular attention must be given to identify deterioration from corrosion or other sources.



WARNING:

Holes in the vent pipe or heat exchanger can cause products of combustion to enter the home. Replace the vent pipe or heat exchanger if leaks are found. Failure to prevent products of combustion from being circulated into the living space can create potentially hazardous conditions including carbon monoxide poisoning that could result in personal injury or death.

Cleaning Of Flue Passages

If the flue passages must be cleaned, follow the steps below. See Figure 36 for component location and identification.

1. Shut off the gas supply to the furnace either at the meter or at the manual valve in the gas supply piping.
2. Turn off all power to the furnace and set the thermostat to the lowest temperature setting.

3. Remove the louvered door from the furnace.
4. Turn the gas control lever to the OFF position.
5. Disconnect the wires from the gas valve, igniter, flame sensor, combustion air motor, flame roll-out switch, blocked vent switch, over-temperature limit switch, pressure switch.



CAUTION:

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

6. Remove the silicone rubber tube from the collector pan.
7. For *TA upflow models: Remove the screws that hold the vent control assembly to the top panel.
8. Remove the nuts that hold the combustion air motor to the collector pan, and remove the complete combustion air blower and combustion tube assembly. **BE CAREFUL NOT TO BREAK THE SEALS AT EACH END OF THE COMBUSTION AIR TUBE.**
9. Remove the screws that hold the collector pan in place, and remove the collector pan from the furnace.
10. Using wrenches, separate the ground-joint union in the gas supply piping at the furnace.
11. Remove the piping between the gas valve and the ground-joint union, if necessary.
12. Remove the screws that hold the burner assembly in place and remove the burner assembly. **BE EXTREMELY CAREFUL NOT TO DAMAGE THE IGNITER WHILE REMOVING THE BURNER ASSEMBLY.**
13. The furnace heat exchanger tubes can now be cleaned by the use of a round wire brush attached to a length of high grade stainless steel cable, such as drain cleanout cable. Attach variable speed reversible drill to the other end of the spring cable. Slowly rotate the cable with the drill and insert it into the top portion of the heat exchanger. While reversing the drill, work the cable in and out several times to obtain sufficient cleaning. Repeat this sequence for each heat exchanger tube.
14. When all heat exchanger tubes have been cleaned, any debris inside the tubes can be removed with the nozzle of a vacuum cleaner.
15. With a light, check the condition of the upper and lower sections of the heat exchanger tube.
16. Inspect the burners and clean them (if necessary) with a soft wire brush and/or the nozzle

of a vacuum cleaner. **BE EXTREMELY CAREFUL NOT TO DAMAGE THE IGNITER WHILE CLEANING THE BURNER.**

17. Replace all the parts in reverse order from which they were removed.
18. Follow the lighting instructions found on the furnace door to return the furnace to operation. Verify proper operation after servicing.

Cleaning of Burners

If the burners must be cleaned, follow the steps below. See Figure 36 for component location and identification.

1. Shut off the gas supply to the furnace either at the meter or at a manual valve in the supply piping.
2. Turn off all power to the furnace and set the thermostat to the lowest temperature setting.
3. Remove the upper louvered door from the furnace.
4. Turn the gas control lever to the OFF position.
5. Disconnect the wires from the gas valve, igniter, and flame sensor.
6. Using wrenches, separate the ground-joint union in the gas supply piping at the furnace.
7. Remove the piping between the gas valve and the ground-joint union, if necessary.
8. Remove the screws that hold the burner assembly in place and remove the burner assembly. **BE EXTREMELY CAREFUL NOT TO DAMAGE THE IGNITER WHILE REMOVING THE BURNER ASSEMBLY.**
9. Inspect the burners and clean them (if necessary) with a soft wire brush and/or the nozzle of a vacuum cleaner. **BE EXTREMELY CAREFUL NOT TO DAMAGE THE IGNITER WHILE CLEANING THE BURNER.**
10. Replace all the parts in reverse order from which they were removed.
11. Follow the lighting instructions found on the furnace door to return the furnace to operation. Verify proper operation after servicing.

SYSTEM OPERATION INFORMATION

General

Proper maintenance is most important to achieve the best performance from a furnace. Follow these instructions for years of safe, trouble free operation.

1. Do not place combustible materials on or against the furnace cabinet or within 6 inches of the vent pipe.
2. Do not store gasoline or any other flammable vapors and liquids in the vicinity of the furnace.
3. Change or replace the air filters monthly during

any period when the circulating blower is operating regularly.

4. Always replace the doors on the furnace after servicing or cleaning/changing the filters. Do not operate the furnace without all doors and covers in place.
5. Avoid operating the furnace when windows and doors are open.
6. **Be sure that the thermostat is properly installed and is not being affected by drafts or heat from lamps or other appliances.**

Sequence of Operation

The operating sequences for the heating, cooling, and fan modes are described below. Refer to the field and furnace wiring diagrams; Figures 26, 27, 28, 29, 30, 31, 32, 33, 34 and 35.

Heating Mode:

1. On a call for heat the thermostat closes, applying 24 VAC to the W terminal on the control board.
2. The control board checks for continuity on the 24 VAC limit control circuit (over-temperature limit switch, flame rollout switches and blocked vent switch in series). If an open limit is detected the control board will energize the inducer and the conditioned air blower. All other system functions will be inoperable until the limit circuit closes. While the limit is open, the red LED will pulse at a rate of 1 blink per unit time.
3. The furnace control checks for continuity across the pressure switch (24 VAC). If the pressure switch is closed the heat mode sequence will not continue. If it remains closed for 10 seconds the red LED will blink 3 times repetitively until the fault condition clears.
4. The inducer is energized.
5. The pressure switch will close. If the pressure switch does not close after 10 seconds the fault LED will blink 2 times repetitively and the inducer will continue to run until the switch is closed.
6. The inducer will pre-purge for 30 seconds and then the igniter will start its warm-up as follows:

Initial Power up: After 30 seconds of igniter warm-up the gas valve (24 VAC) will then open. The igniter circuit will stay energized for 3 seconds after the gas valve opens.

After Initial Power up: The control has a programmed adaptive ignition feature which varies

the warm-up period as follows: If ignition is successful the warm-up is reduced by 3-seconds on each subsequent call for heat until ignition failure occurs. Upon ignition failure, the warm-up is increased by 3-seconds on the next try. If successful, the timing remains fixed at this level. In general, whenever ignition failure occurs the warm-up interval is increased by 3-seconds on the next try. And if successful, it remains there. Minimum and maximum warm-up time limits are set at 6 and 54-seconds, respectively.

7. The furnace control must prove flame via the flame sensor 5 seconds after the gas valve opens. If flame is sensed, all burners are on and the igniter cools off. If no flame is sensed, the gas valve closes immediately and the inducer continues to run. A second trial for ignition (step 6) begins if no flame is sensed on the fifth try for ignition, the furnace control is locked and the red LED will blink 4 times repetitively. The thermostat must be opened for at least ten seconds to reset the furnace control after a lock out. Otherwise, the furnace will attempt another ignition sequence in 1 hour.
8. The furnace control energizes the circulating air blower on the heating speed 30 seconds after the gas valve circuit is energized .
9. When the thermostat has been satisfied, gas valve is de-energized.
10. The inducer is de-energized after a 30-second postpurge.
11. The furnace control keeps the circulating air blower energized for 120 seconds (factory set) or 60, 90, or 180 seconds (field adjustable). (See Figure 34.)
12. Abnormal conditions: If a limit opens during operation, the inducer and circulating air blower continue to operate. The gas valve is de-energized immediately. The blowers continue to operate until the limit closes. When the limit closes the inducer blower is de-energized immediately. The circulating air blower continues to operate for the specified delay (factory set at 120 seconds).

Cooling Mode:

1. On a call for cooling the thermostat closes, applying 24 VAC to the G and Y terminals on the furnace control. This closes the compressor contactor.

2. The furnace control energizes the circulating blower (115 VAC) on the cooling speed.
3. When the thermostat is satisfied, the G and Y terminals on the control board are de-energized opening the compressor contactor.
4. The circulating air blower is de-energized after a 90-second delay.

Fan Mode:

1. On a call for fan operation, the thermostat applies 24 VAC to the G terminal on the furnace control board.
2. The circulating air blower is energized immediately on the low heating speed.
3. If the furnace is operated in the continuous ON position at the thermostat and is then switched to AUTO, the circulating blower will operate for a specified delay (factory set at 120 seconds).

Furnace Fails to Operate

If the furnace does not operate check the following:

1. Is the thermostat operating properly?
2. Are the blower compartment door(s) in place?
3. Is the furnace disconnect closed?
4. Has the circuit breaker tripped or the control board fuse burned open?
5. Is the gas turned on?
6. Are any manual reset switches open?
7. Is the filter dirty or plugged?
8. Is the flame sensor coated? (Remove and clean with emery cloth.)

If the furnace locks out after 5 attempts for ignition, it will try again every hour if a call for heat remains. If the inducer and circulating air blowers are operating, and items 1 through 8 have been checked, press the red reset button on the vent safety switch (See Figure 36). If the furnace operates after depressing the reset button, contact a qualified serviceman to identify and repair the problem.

If the furnace continues to not operate, depress the red reset buttons on the flame roll-out switches. (See Figure 36.) If the furnace operates after depressing the reset buttons, contact a qualified servicemen to identify and repair the problem.

Twinning

The two-stage furnace may not be twinned.

INSTALLATION/PERFORMANCE CHECKLIST

LOCATION _____ CITY _____ STATE _____

INSTALLER _____ CITY _____ STATE _____

UNIT MODEL NUMBER _____

UNIT SERIAL NUMBER _____

Minimum Clearances per Table 1? _____

Are Flue Connections tight? _____

Electrical Connections tight? _____

Is there Proper Draft? _____

Line Voltage Polarity correct? _____

Is Vent free from restrictions? _____

Supply Voltage: _____ Volts

Blower Motor HP: _____

Is the Filter(s) secured in place? _____

Is the Filter(s) clean? _____

FUEL TYPE:

Natural Gas _____

LP/Propane _____

Gas Piping Connections

leak-tested? _____

Has the Thermostat been calibrated? _____

Is the Thermostat level? _____

Is the Heat Anticipator Setting correct? _____

Gas Line Pressure: _____

(in. water column, with furnace operating)

Manifold Pressure: _____

(in. water column, with furnace operating)

Is there adequate fresh air supply for combustion and ventilation? _____

Has the Owner's Information been reviewed with the homeowner? _____

Has the Literature Package been left near the furnace? _____

Furnace Input: _____ (Btuh)

Supply Air Temperature: _____ (° F)

Return Air Temperature: _____ (° F)

Temperature Rise: _____ (° F)



7085090

7085090 (Replaces 7084370)