

Installation Instructions

ADDENDUM

G6RC/RL Furnace Series

Alternate Figure 29 for units equipped with Low-Voltage Vent Safety Switch

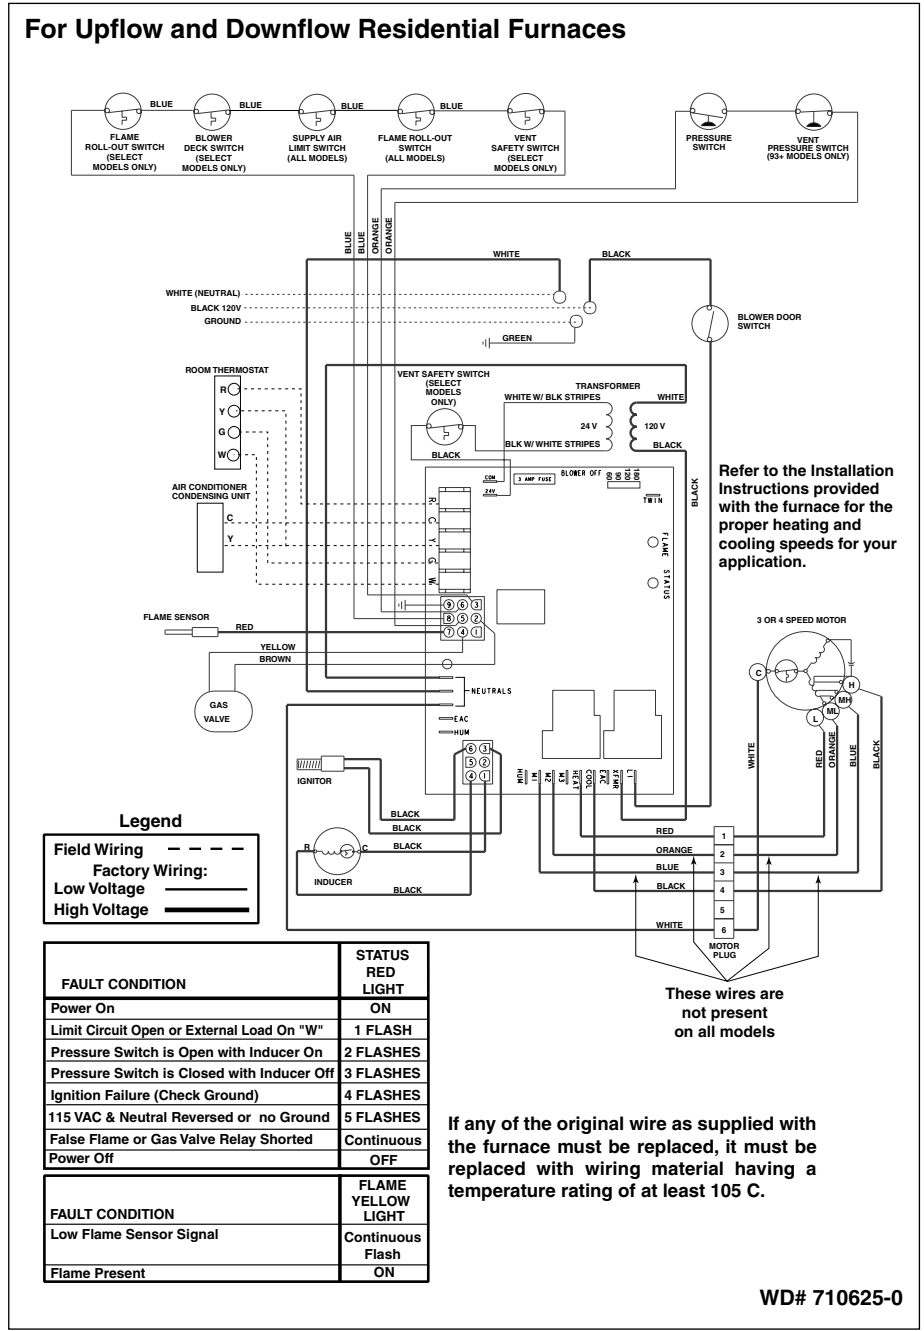


Figure 29. Upflow and Downflow Wiring Diagram

