

INSTALLATION INSTRUCTIONS

INDUCER ORIFICE SELECTION

Refer to the tables below to select the appropriate orifice size for this replacement kit. The orifice size can also be found on the back side of each orifice.

UPFLOW/HORIZONTAL UNITS:

CABINET SIZE	INPUT (MBTUH)	ORIFICE SIZE (INCHES)*
A	38	0.88 [Single Stage 92%] / 0.62 [Single Stage 95%]
B	46	0.94
B	54	0.94 [Single Stage 92%] / 0.75 [Single Stage 95%]
B	60	0.88 [Two Stage 92%] / 1.00 [Modulating]
B	61	1.00
B	72	1.00
C	72	1.16 [Single Stage 92%] / 0.88 [Single Stage 95%]
C	76	1.38
C	80	1.00
C	90	1.38 [Single Stage 92%] / 1.13 [Single Stage 95%]
C	100	1.25
D	108	N/A [Single Stage 92%] / 1.16 [Single Stage 95%]
D	120	N/A [Two Stage 92% / Modulating] / 1.38 [Single Stage 95%]

DOWNFLOW UNITS:

CABINET SIZE	INPUT (MBTUH)	ORIFICE SIZE (INCHES)*
A	38	0.56
B	54	0.94 [Single Stage 92%] / 0.75 [Single Stage 95%]
B	60	0.75
B	72	1.00
C	72	0.88
C	80	0.97
C	90	1.13
C	100	1.31
D	118	1.38
D	120	N/A [Single Stage 92%] / 1.50 [Two Stage 92%]

*NOTE: Model series in brackets where applicable



Specifications & illustrations subject to change without notice or incurring obligations (05/15).
O'Fallon, MO, © Nortek Global HVAC LLC 2015. All Rights Reserved.

709211C (Replaces 709211B)