


WIRING DIAGRAM

Air Handler X13 MOTOR

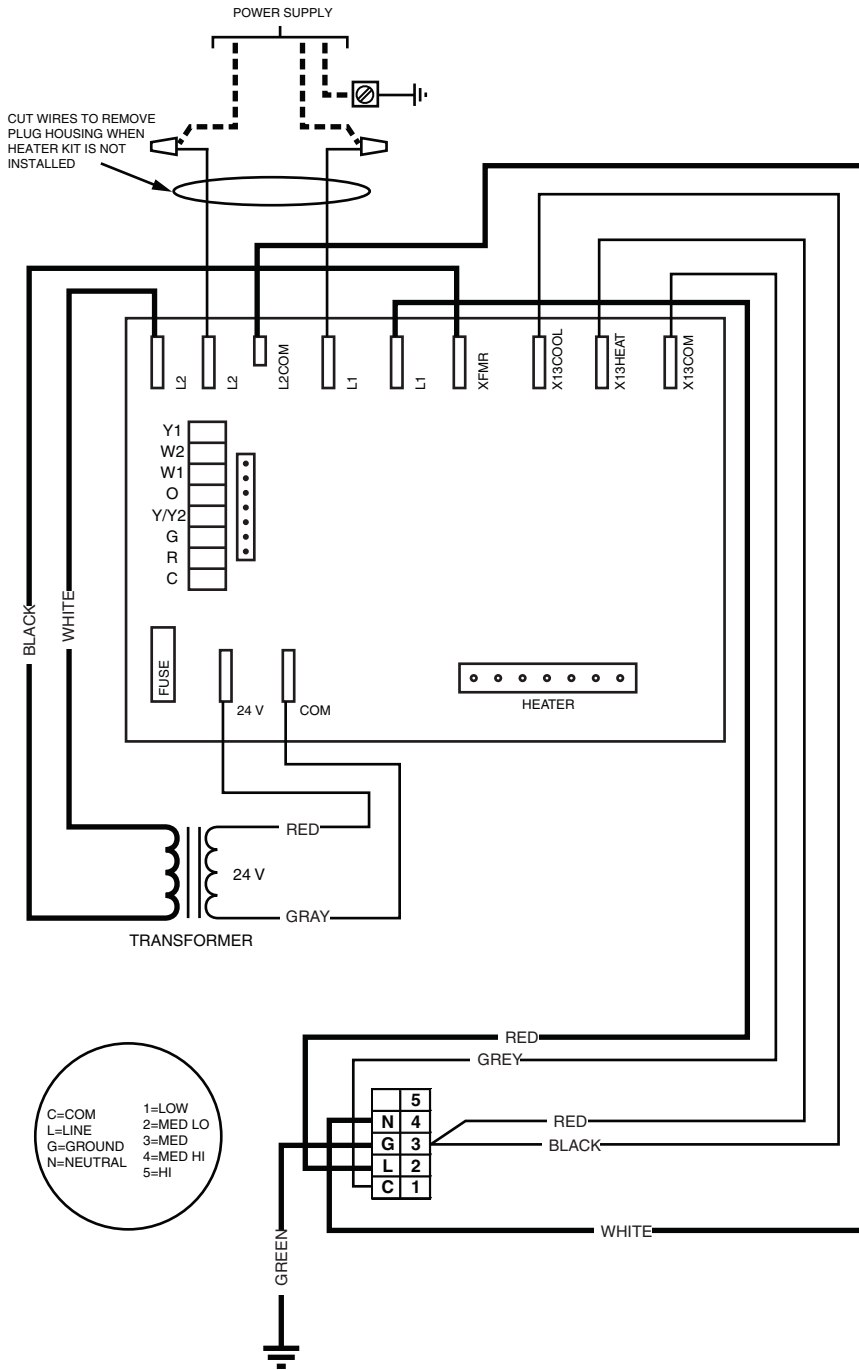

NOTES:

1. The blower motor speed tap connection may not be as shown. See the Installation Instructions.
2. Disconnect all power before servicing.
3. Transformer may have a dual voltage primary tap. Match the tap position with the supply voltage used.
4. If the internal wiring is replaced, use only 105° copper wire of the same gauge.

BL OWER			5
MOTOR PLUG	N		4
N = NEUTRAL	G		3
G = G ROUND	L		2
L = LINE	C		1
C = COMMON			

SPEED TAPS

5 = HI
4 = MED HI
3 = MED
2 = MED L OW
1 = L OW

LEGEND:

FIELD WIRING	- - - -
LOW VOLTAGE	————
HIGH VOLTAGE	—————



710545D
(Replaces 710545C)

0712