

# WIRING DIAGRAM

**SMALL PACKAGED HEAT PUMP- SINGLE PHASE**


**208/230 VOLT**

**60HZ**

**NOTES:**

1. Disconnect all power before servicing.
2. For supply connections use copper conductors only.
3. Not suitable on systems that exceed 150V to ground.
4. For replacement wires use conductors suitable for 105° C.

1. Couper le courant avant de faire letretien.
2. Employez uniquement des conducteurs en cuivre.
3. Ne convient pas aux installations de plus de 150V a la terre.

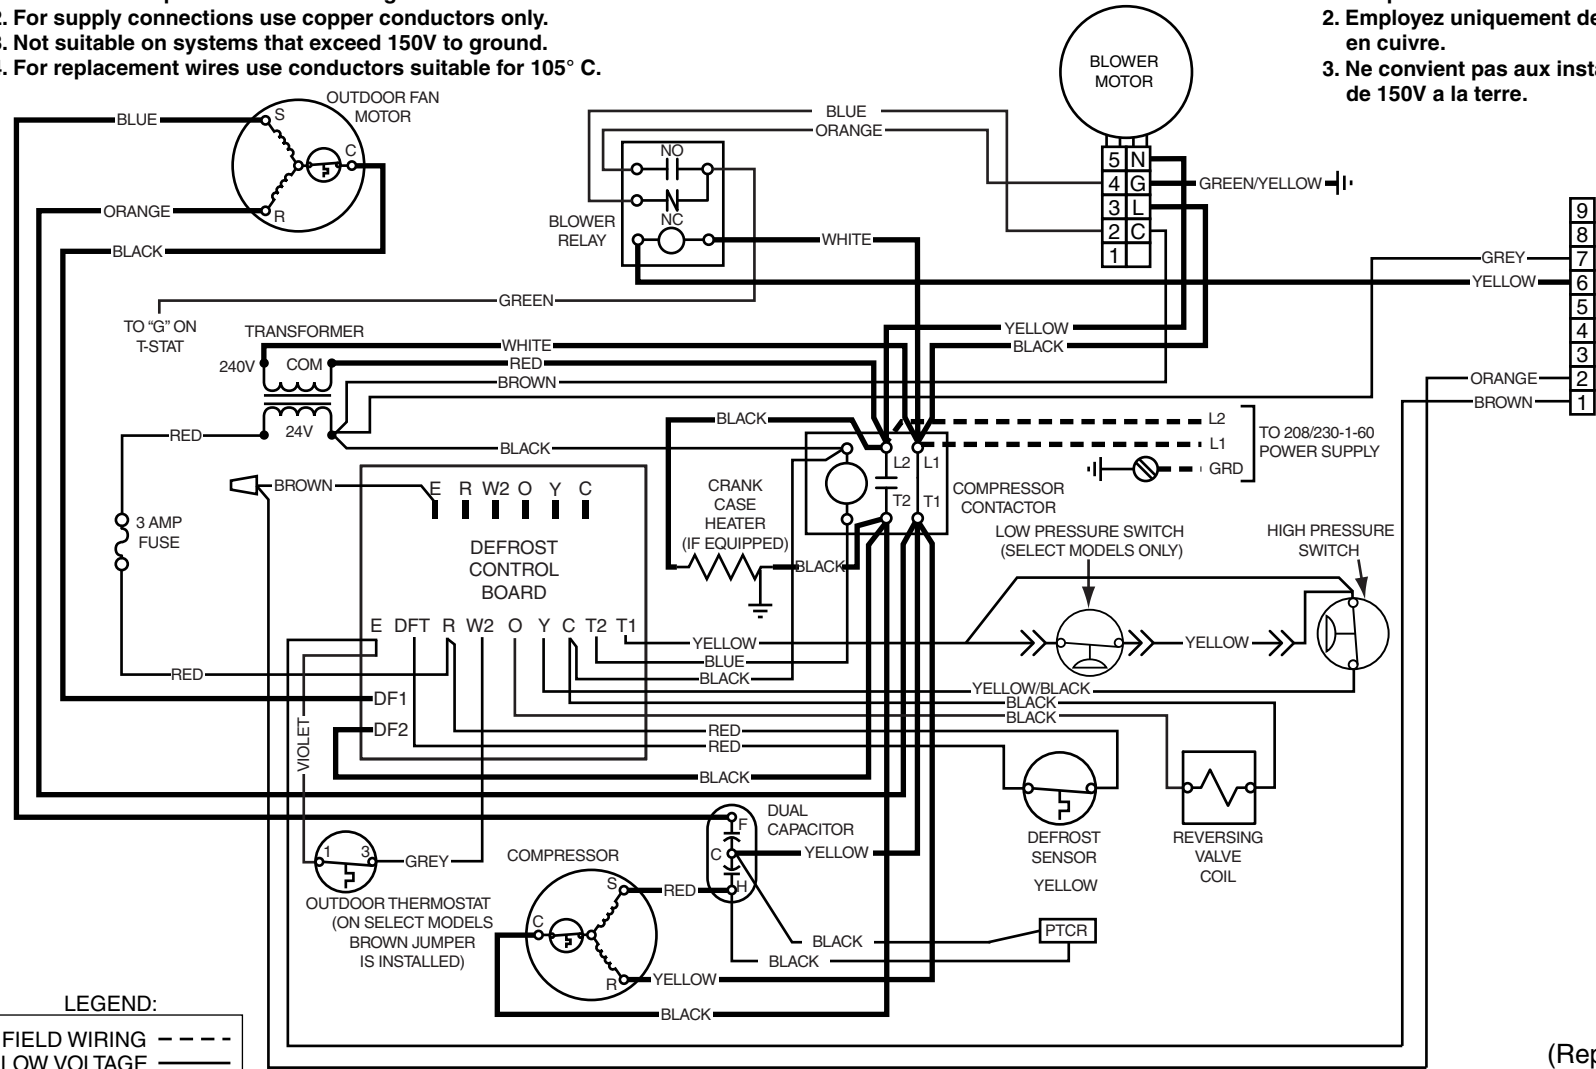

**LEGEND:**  
 FIELD WIRING - - - -  
 LOW VOLTAGE ————  
 HIGH VOLTAGE ————



**711181A**  
 (Replaces 711181-0)

03/12