



WIRING DIAGRAM

Air Handler with Factory Installed Heat (10kW)

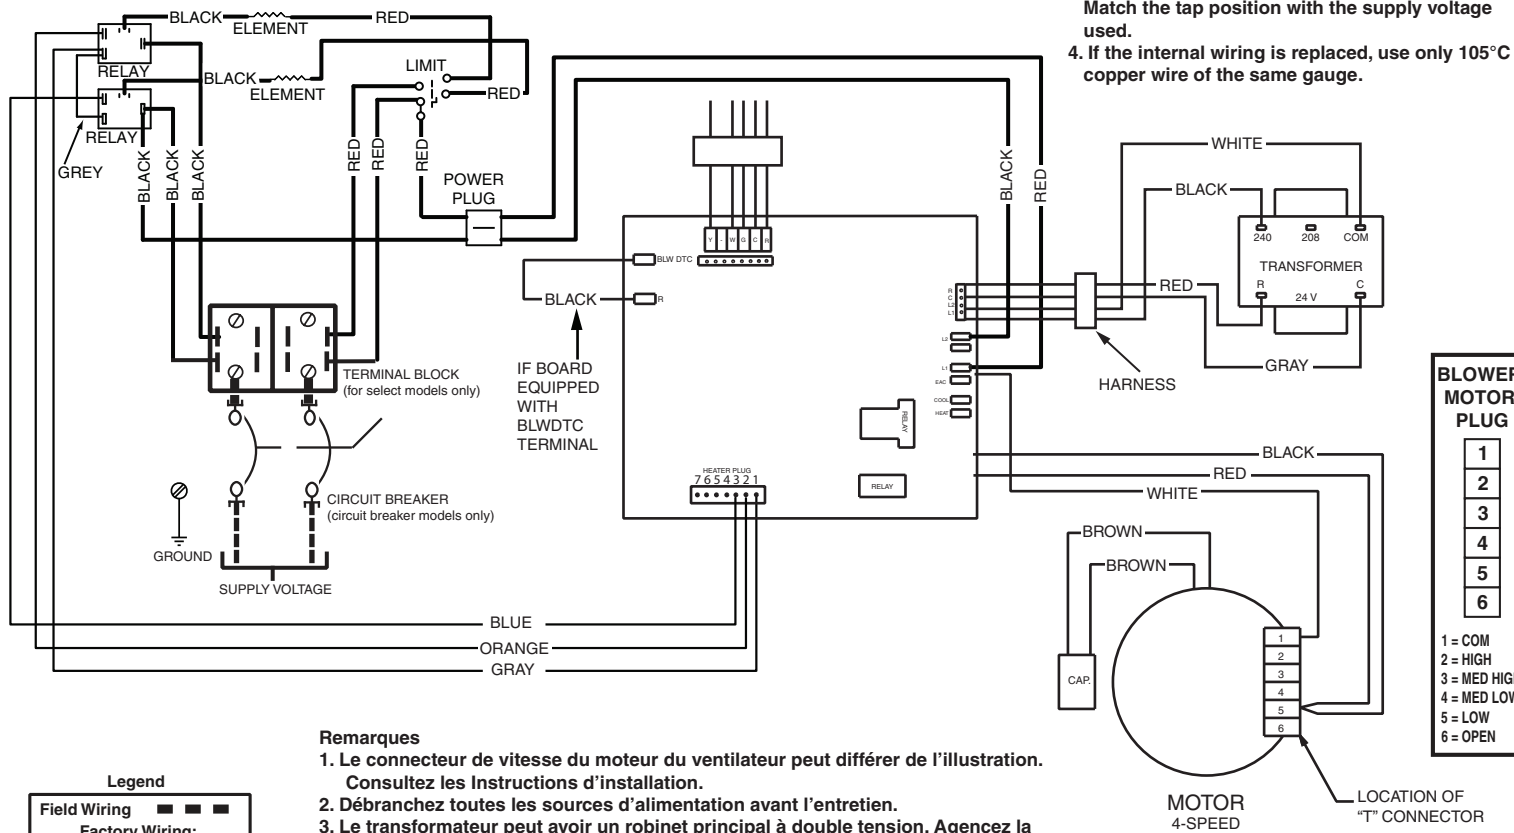

- NOTES:**
- The blower motor speed tap connection may not be as shown. See the Installation Instructions.
 - Disconnect all power before servicing.
 - Transformer may have a dual voltage primary tap. Match the tap position with the supply voltage used.
 - If the internal wiring is replaced, use only 105°C copper wire of the same gauge.

 **7112520**
0812