WIRING DIAGRAM

Q6SP-(090/120)(C/D) Series — 208-230/460 Volt — Three Phase / 60 Hz.

NOTES:

1. For supply wire ampacities and overcurrent protection, see unit rating label.
2. For "C" Series Models only. For208 VAC operation remove wire at 230V tap and place on 208V tap.
3. Wires attached to normally open contacts of auxillary switch.
4. Wires attached to normally closed contacts of auxillary switch.
5. Disconnect all power before servicing.
6. For supply connections, use copper conductors only.
7. If any of the original wire as supplied with the unit must be replaced, it must be replaced with wiring material having a temperature rating of at least 105C.

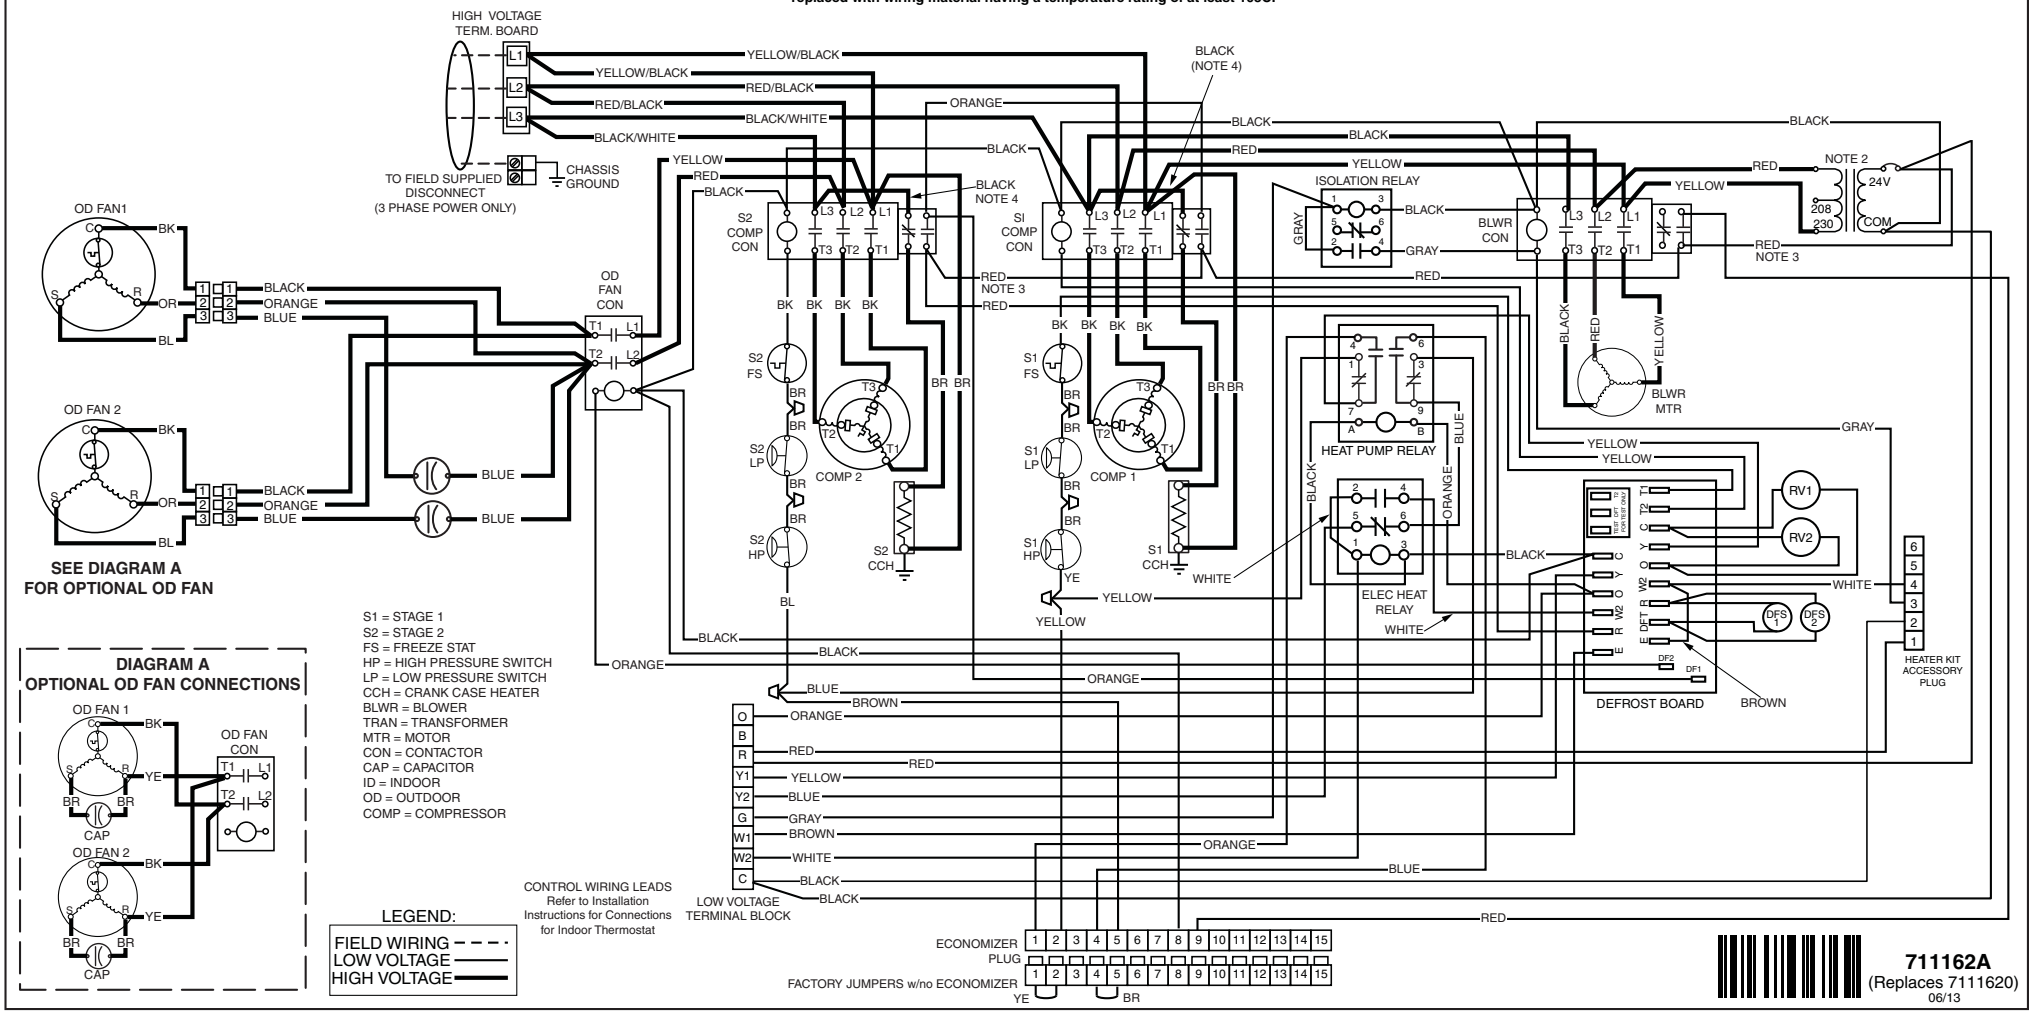

S1 = STAGE 1
S2 = STAGE 2
FS = FREEZE STAT
HP = HIGH PRESSURE SWITCH
LP = LOW PRESSURE SWITCH
CCH = CRANK CASE HEATER
BLWR = BLOWER
TRAN = TRANSFORMER
MTR = MOTOR
CON = CONTACTOR
CAP = CAPACITOR
ID = INDOOR
OD = OUTDOOR
COMP = COMPRESSOR

711162A
(Replaces 7111620)
06/13