

ADDENDUM

ATTENTION INSTALLERS

In addition to instructions supplied with TXV kit, the following additional steps need to be taken.

While restrictor housing is still open/disassembled, cut off the existing inlet side tubing 1" above the end of the coupling nut assembly. In Figure 1 below, the dotted line indicates where to cut. Braze the supplied liquid tube onto the liquid line stub that is still brazed to the coupling nut.

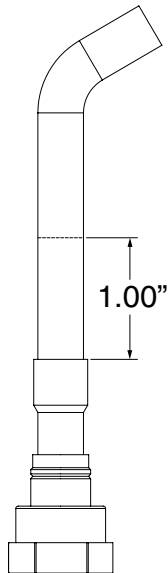


Figure 1. Tube Kit

Specifications & illustrations subject to change without notice or incurring obligations (07/15).
O'Fallon, MO, © Nortek Global HVAC LLC 2015.
All Rights Reserved.



7094310 (NEW)

ADDENDUM

ATTENTION INSTALLERS

In addition to instructions supplied with TXV kit, the following additional steps need to be taken.

While restrictor housing is still open/disassembled, cut off the existing inlet side tubing 1" above the end of the coupling nut assembly. In Figure 1 below, the dotted line indicates where to cut. Braze the supplied liquid tube onto the liquid line stub that is still brazed to the coupling nut.

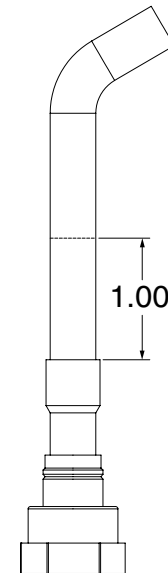


Figure 1. Tube Kit

Specifications & illustrations subject to change without notice or incurring obligations (07/15).
O'Fallon, MO, © Nortek Global HVAC LLC 2015.
All Rights Reserved.



7094310 (NEW)