


# WIRING DIAGRAM

## Furnace Kit for iQDrive™ System

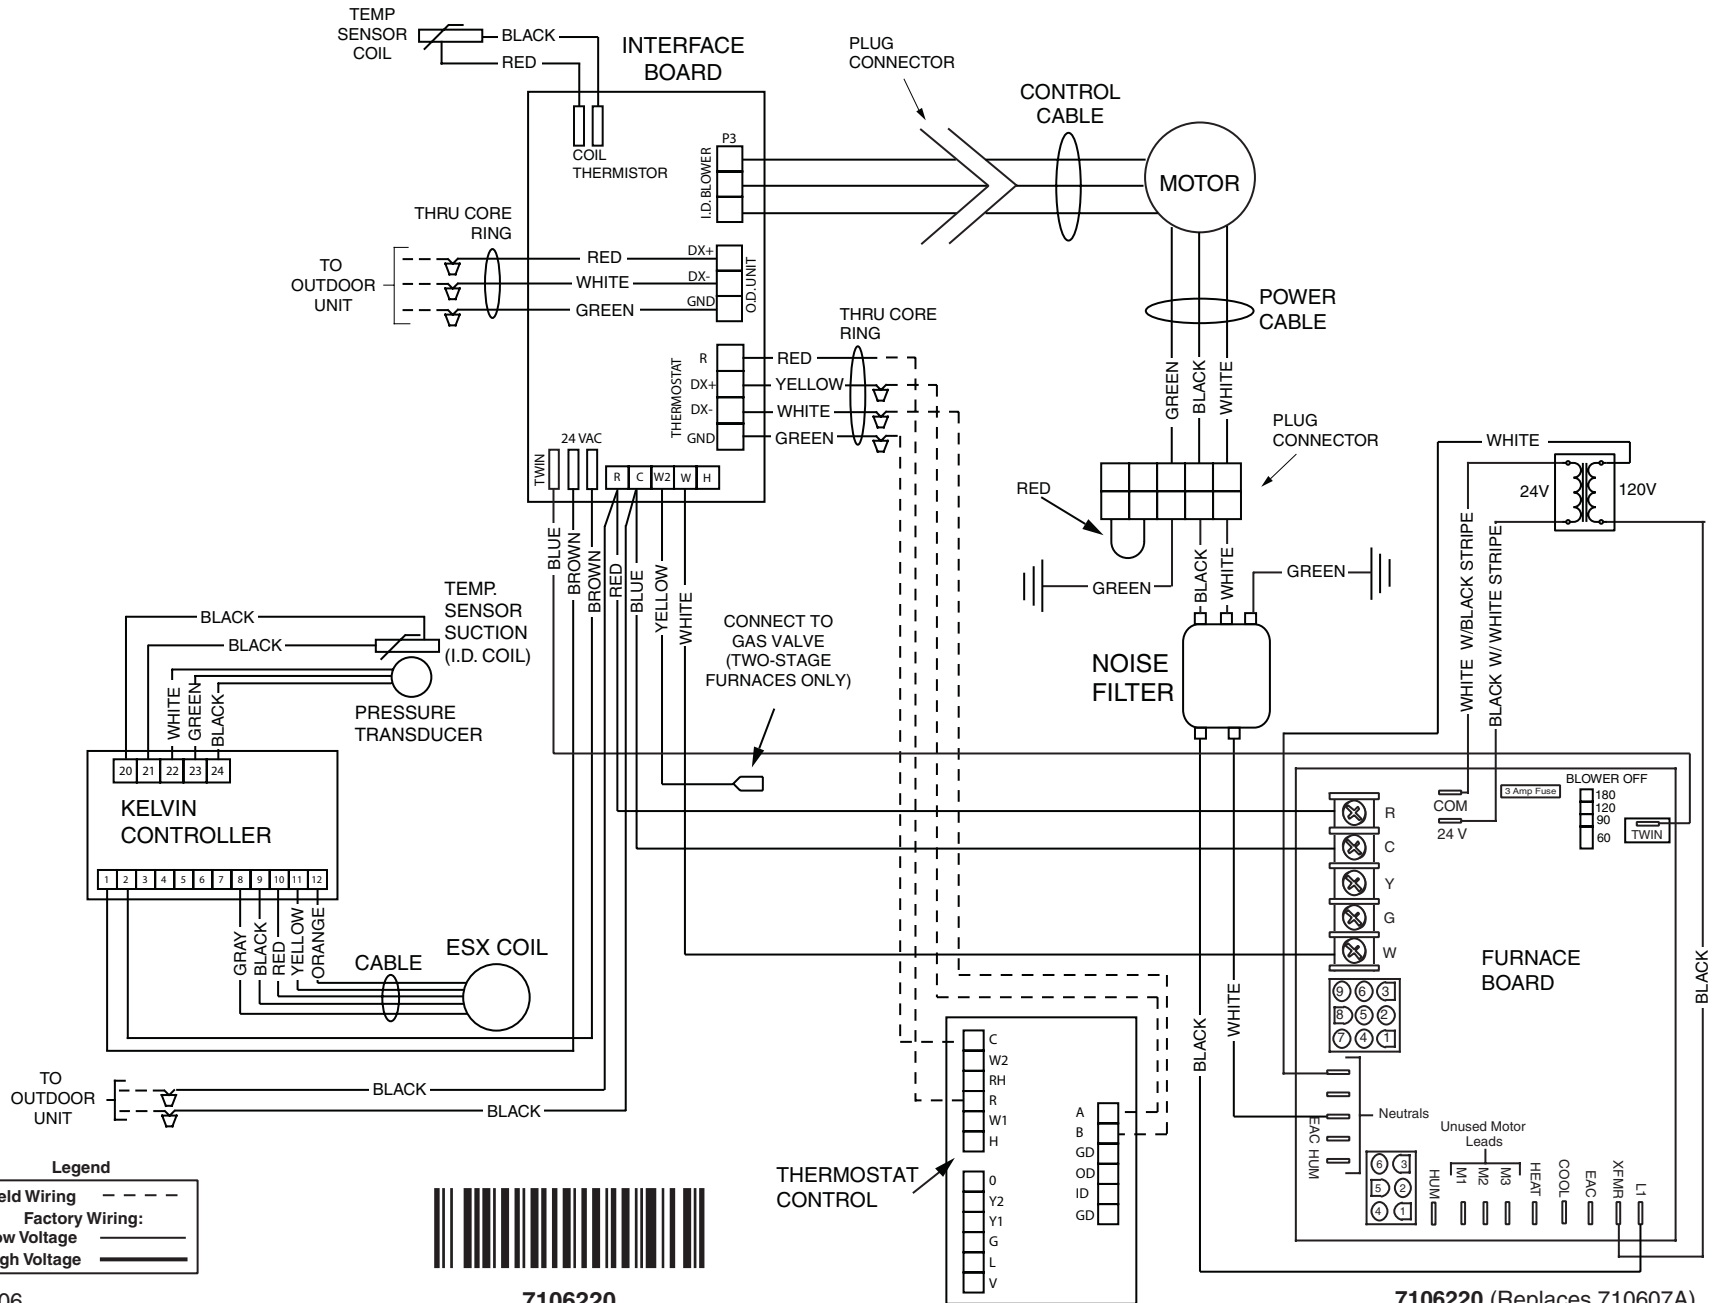

**Legend**

Field Wiring: - - - - -  
 Factory Wiring: \_\_\_\_\_  
 Low Voltage: \_\_\_\_\_  
 High Voltage: \_\_\_\_\_



7106220

07/06

7106220 (Replaces 710607A)