

ITEMS WITHIN A CIRCLE MAY VARY OR MAY NOT BE SUPPLIED. SEE THE OPTION KEY BELOW WHICH INDICATES BY CHECK MARKS WHICH NUMBERED CIRCLES APPLY.

OPTION KEY — CHECK MARKS INDICATE WHICH CIRCLES APPLY

<input type="checkbox"/>	01	CONTROLLING CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	02	SAFETY CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	03	BACK-UP CONTACTOR(S) - 2 POLE
<input checked="" type="checkbox"/>	04	CONTROLLING CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	05	SAFETY CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	06	BACK-UP CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	07	SINGLE PHASE LINE FUSING (L1 ONLY)
<input type="checkbox"/>	08	SINGLE PHASE LINE FUSING (L1 & L2)
<input type="checkbox"/>	09	THREE PHASE LINE FUSING
<input type="checkbox"/>	10	PRIMARY TRANSFORMER FUSING - 1 LINE
<input type="checkbox"/>	11	PRIMARY TRANSFORMER FUSING - 2 LINE
<input type="checkbox"/>	12	SECONDARY TRANSFORMER FUSING
<input type="checkbox"/>	13	PILOT LIGHT - LOW AIRFLOW
<input type="checkbox"/>	14	PILOT LIGHT - HEATER ON
<input type="checkbox"/>	15	PILOT LIGHT - STAGE(S) ON
<input type="checkbox"/>	16	PILOT LIGHT - FAN ON
<input type="checkbox"/>	17	PILOT SWITCH
<input type="checkbox"/>	18	CONTROL CIRCUIT DISCONNECT SWITCH
<input checked="" type="checkbox"/>	19	NO DISCONNECT SWITCH
<input type="checkbox"/>	20	IF CHECKED, HEATER MAY BE WIRED WITH _____ AWG MIN. SUPPLY WIRE PER 424.22(d)NEC. IF THE HEATER IS CONTROLLED IN ONE OF THE FOLLOWING 3 WAYS (1)TWO OR MORE THERMOSTAT(S) (2)THERMOSTAT WITH 2 OR MORE STAGES (3)PROPORTIONING TYPE THERMOSTAT(S)
<input checked="" type="checkbox"/>	21	USE <u>10</u> AWG MIN. SUPPLY WIRE. <u>1</u> WIRE(S) PER PHASE.
<input type="checkbox"/>	22	UTILISER UN CABLE D'ALIMENTATION D'AU MOINS _____ AUG. _____ CONDUCTEUR(S) PAR PHASE.
<input checked="" type="checkbox"/>	23	CLASS 1 CIRCUIT
<input type="checkbox"/>	24	CLASS 2 CIRCUIT
<input type="checkbox"/>	25	NO MANUAL CUT-OUT(S)

LEGEND: _____ POWER WIRING
 _____ CONTROL WIRING
 ----- WIRING SUPPLIED ONLY WHEN ASSOCIATED OPTION IS SUPPLIED


THIS DRAWING IS THE PROPERTY OF INDUSTRIAL ENGINEERING AND EQUIPMENT COMPANY INC. (INDEECO) AND IS LOANED UPON CONDITION THAT IT IS NOT TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART OR USED FURNISHING INFORMATION TO ANY PERSON WITHOUT WRITTEN CONSENT OF INDEECO, OR FOR ANY PURPOSE DETRIMENTAL TO THEIR INTEREST, AND TO BE RETURNED UPON REQUEST.



425 HANLEY INDUSTRIAL COURT
 ST. LOUIS, MO 63144 USA
 OFFICE: 314/644-4300
 FAX: 314/644-5332
 WWW.INDEECO.COM

USE COPPER SUPPLY WIRE SUITABLE FOR 75°C. (90°C IN CANADA). WIRE EXTERNAL CONTROL CIRCUIT PER CLASS 1, ARTICLE 725 OF NEC, AND/OR CLASS 1, SECTION 16 OF CEC, EXCEPT THE CLASS 2 CIRCUIT(S) SHOWN ABOVE.
 UTILISEZ DU CONDUIT CAPABLE DE SUPPORTER 75°C. (90°C AU CANADA). CONNECTEZ LE CIRCUIT DE CONTROL EXTERNE EN SUIVANT CLASSE 1, ARTICLE 725 DE LA NEC, OU/ET CLASSE 1, SECTION 16 DE LA CEC (EXCEPTION: LE CIRCUIT DE CLASSE 2 DEJA MENTIONNE AU DESSUS)

NO. L930N1:c24653-A-0

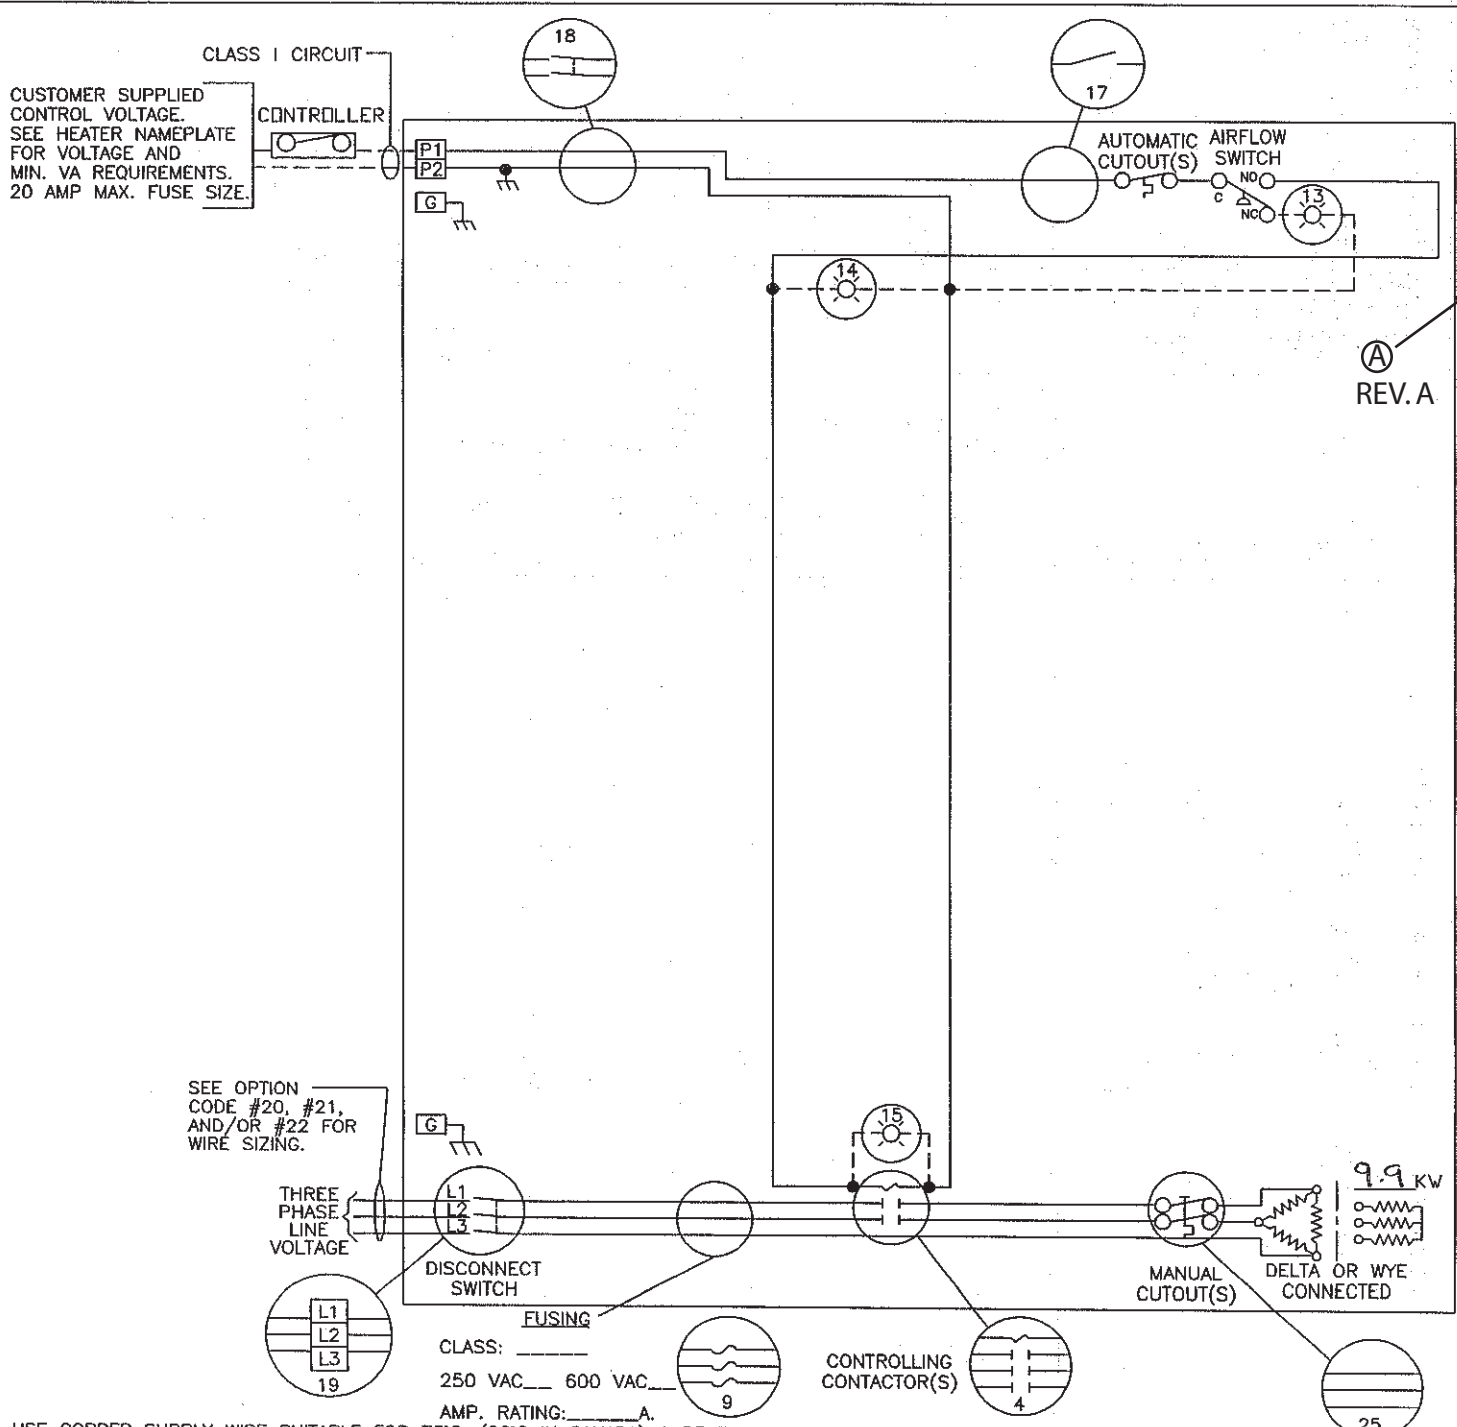

ITEMS WITHIN A CIRCLE MAY VARY OR MAY NOT BE SUPPLIED, SEE THE OPTION KEY BELOW WHICH INDICATES BY CHECK MARKS WHICH NUMBERED CIRCLES APPLY.

OPTION KEY
CHECK MARKS INDICATE WHICH CIRCLES APPLY

<input type="checkbox"/>	01	CONTROLLING CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	02	SAFETY CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	03	BACK-UP CONTACTOR(S) - 2 POLE
<input checked="" type="checkbox"/>	04	CONTROLLING CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	05	SAFETY CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	06	BACK-UP CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	07	SINGLE PHASE LINE FUSING (L1 ONLY)
<input type="checkbox"/>	08	SINGLE PHASE LINE FUSING (L1 & L2)
<input type="checkbox"/>	09	THREE PHASE LINE FUSING
<input type="checkbox"/>	10	PRIMARY TRANSFORMER FUSING - 1 LINE
<input type="checkbox"/>	11	PRIMARY TRANSFORMER FUSING - 2 LINE
<input type="checkbox"/>	12	SECONDARY TRANSFORMER FUSING
<input type="checkbox"/>	13	PILOT LIGHT - LOW AIRFLOW
<input type="checkbox"/>	14	PILOT LIGHT - HEATER ON
<input type="checkbox"/>	15	PILOT LIGHT - STAGE(S) ON
<input type="checkbox"/>	16	PILOT LIGHT - FAN ON
<input type="checkbox"/>	17	PILOT SWITCH
<input type="checkbox"/>	18	CONTROL CIRCUIT DISCONNECT SWITCH
<input checked="" type="checkbox"/>	19	NO DISCONNECT SWITCH
<input type="checkbox"/>	20	IF CHECKED, HEATER MAY BE WIRED WITH _____ AWG MIN. SUPPLY WIRE PER 424.22(d)NEC. IF THE HEATER IS CONTROLLED IN ONE OF THE FOLLOWING 3 WAYS (1)TWO OR MORE THERMOSTAT(S) (2)THERMOSTAT WITH 2 OR MORE STAGES (3)PROPORTIONING TYPE THERMOSTAT(S)
<input checked="" type="checkbox"/>	21	USE <u>14</u> AWG MIN. SUPPLY WIRE. <u>1</u> WIRE(S) PER PHASE.
<input type="checkbox"/>	22	UTILISER UN CABLE D'ALIMENTATION D'AU MOINS _____ AUG. _____ CONDUCTEUR(S) PAR PHASE.
<input checked="" type="checkbox"/>	23	CLASS 1 CIRCUIT
<input type="checkbox"/>	24	CLASS 2 CIRCUIT
<input type="checkbox"/>	25	NO MANUAL CUT-OUT(S)

LEGEND: _____ POWER WIRING
 _____ CONTROL WIRING
 ----- WIRING SUPPLIED ONLY WHEN ASSOCIATED OPTION IS SUPPLIED


THIS DRAWING IS THE PROPERTY OF INDUSTRIAL ENGINEERING AND EQUIPMENT COMPANY INC. (INDEECO) AND IS LOANED UPON CONDITION THAT IT IS NOT TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART OR USED FURNISHING INFORMATION TO ANY PERSON WITHOUT WRITTEN CONSENT OF INDEECO, OR FOR ANY PURPOSE DETRIMENTAL TO THEIR INTEREST, AND TO BE RETURNED UPON REQUEST.



425 HANLEY INDUSTRIAL COURT
 ST. LOUIS, MO 63144 USA
 OFFICE: 314/644-4300
 FAX: 314/644-5332
 WWW.INDEECO.COM

USE COPPER SUPPLY WIRE SUITABLE FOR 75°C. (90°C IN CANADA). WIRE EXTERNAL CONTROL CIRCUIT PER CLASS 1, ARTICLE 725 OF NEC, AND/OR CLASS 1, SECTION 16 OF CEC, EXCEPT THE CLASS 2 CIRCUIT(S) SHOWN ABOVE.
 UTILISEZ DU CONDUIT CAPABLE DE SUPPORTER 75°C. (90°C AU CANADA). CONNECTEZ LE CIRCUIT DE CONTROL EXTERNE EN SUIVANT CLASSE 1, ARTICLE 725 DE LA NEC, OU/ET CLASSE 1, SECTION 16 DE LA CEC (EXCEPTION: LE CIRCUIT DE CLASSE 2 DE'JA MENTIONNE AU DESSUS)

NO. L930N1:c24653-A-0

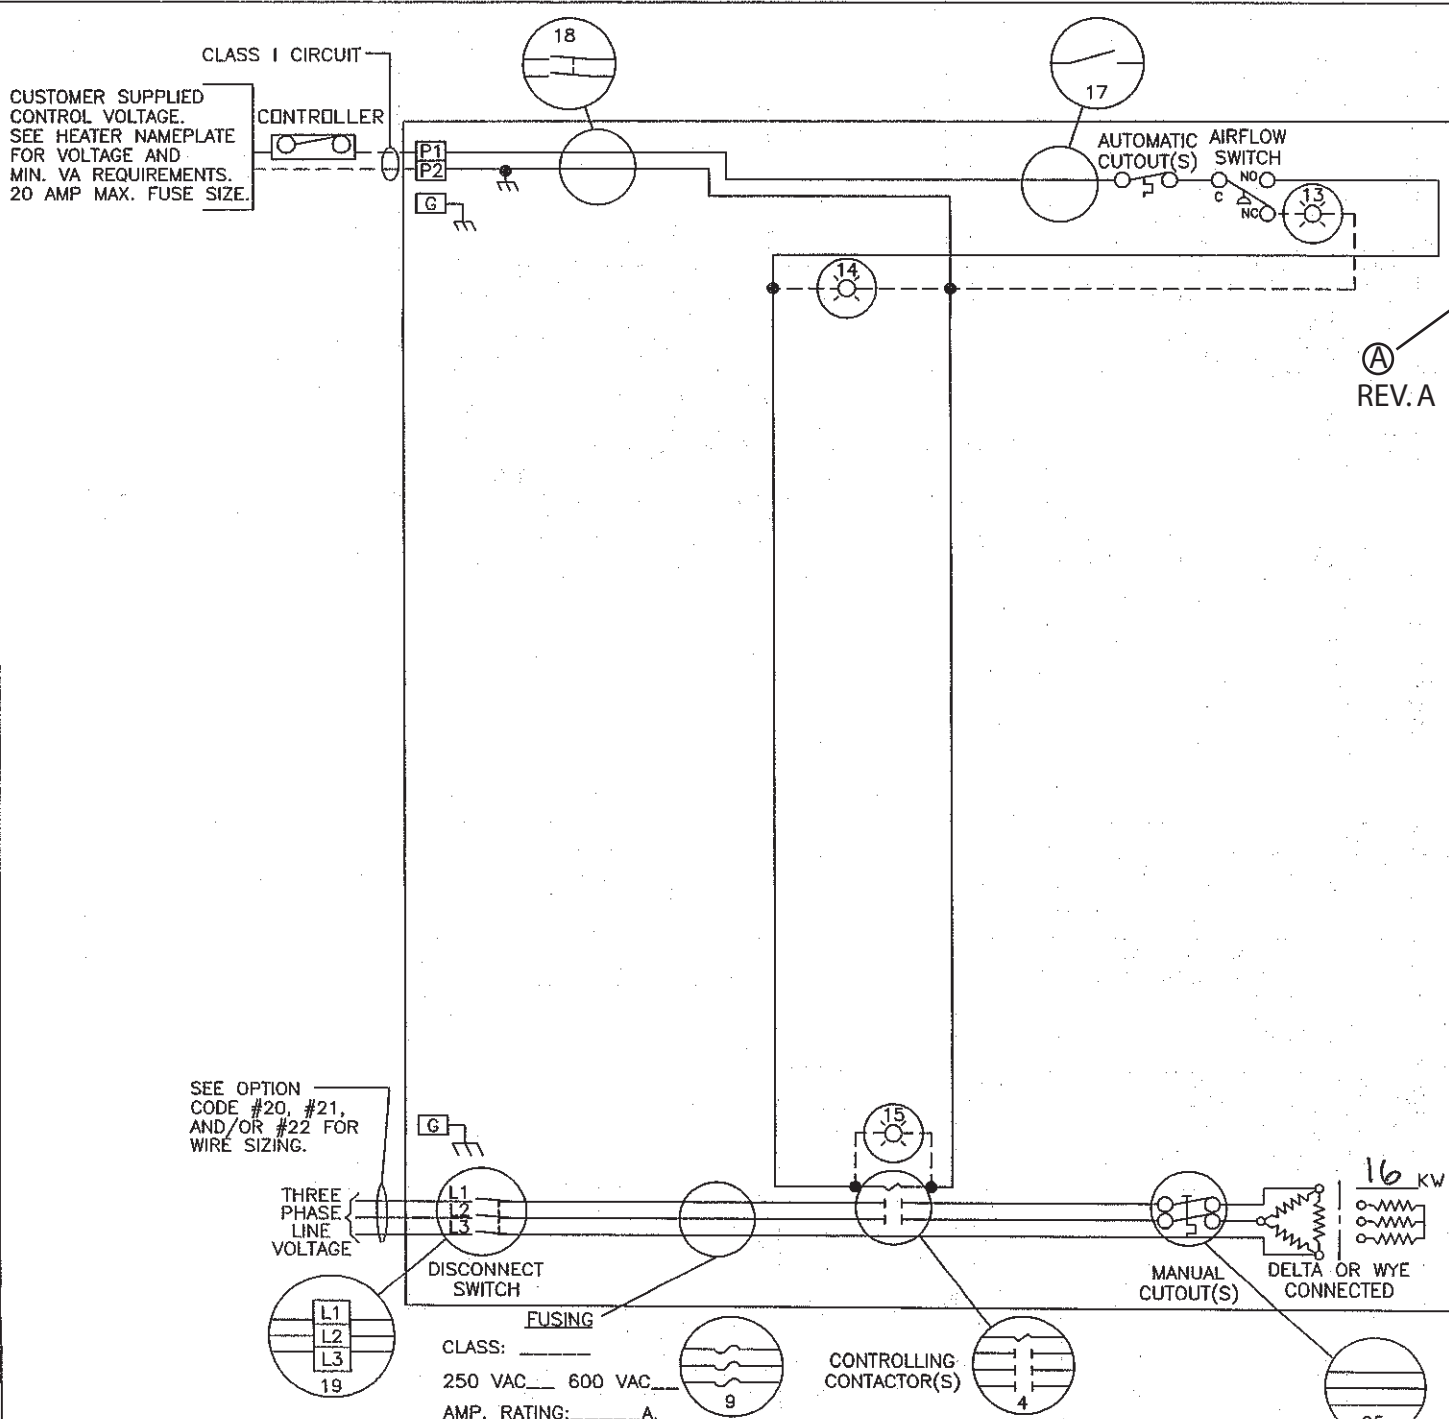

ITEMS WITHIN A CIRCLE MAY VARY OR MAY NOT BE SUPPLIED, SEE THE OPTION KEY BELOW WHICH INDICATES BY CHECK MARKS WHICH NUMBERED CIRCLES APPLY.

OPTION KEY —
CHECK MARKS INDICATE WHICH CIRCLES APPLY

<input type="checkbox"/>	01	CONTROLLING CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	02	SAFETY CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	03	BACK-UP CONTACTOR(S) - 2 POLE
<input checked="" type="checkbox"/>	04	CONTROLLING CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	05	SAFETY CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	06	BACK-UP CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	07	SINGLE PHASE LINE FUSING (L1 ONLY)
<input type="checkbox"/>	08	SINGLE PHASE LINE FUSING (L1 & L2)
<input type="checkbox"/>	09	THREE PHASE LINE FUSING
<input type="checkbox"/>	10	PRIMARY TRANSFORMER FUSING - 1 LINE
<input type="checkbox"/>	11	PRIMARY TRANSFORMER FUSING - 2 LINE
<input type="checkbox"/>	12	SECONDARY TRANSFORMER FUSING
<input type="checkbox"/>	13	PILOT LIGHT - LOW AIRFLOW
<input type="checkbox"/>	14	PILOT LIGHT - HEATER ON
<input type="checkbox"/>	15	PILOT LIGHT - STAGE(S) ON
<input type="checkbox"/>	16	PILOT LIGHT - FAN ON
<input type="checkbox"/>	17	PILOT SWITCH
<input type="checkbox"/>	18	CONTROL CIRCUIT DISCONNECT SWITCH
<input checked="" type="checkbox"/>	19	NO DISCONNECT SWITCH
<input type="checkbox"/>	20	IF CHECKED, HEATER MAY BE WIRED WITH _____ AWG MIN. SUPPLY WIRE PER 424.22(d)NEC. IF THE HEATER IS CONTROLLED IN ONE OF THE FOLLOWING 3 WAYS (1) TWO OR MORE THERMOSTAT(S) (2) THERMOSTAT WITH 2 OR MORE STAGES (3) PROPORTIONING TYPE THERMOSTAT(S)
<input checked="" type="checkbox"/>	21	USE <u>8</u> AWG MIN. SUPPLY WIRE. <u>1</u> WIRE(S) PER PHASE.
<input type="checkbox"/>	22	UTILISER UN CABLE D'ALIMENTATION D'AU MOINS _____ AUG. _____ CONDUCTEUR(S) PAR PHASE.
<input checked="" type="checkbox"/>	23	CLASS 1 CIRCUIT
<input type="checkbox"/>	24	CLASS 2 CIRCUIT
<input type="checkbox"/>	25	NO MANUAL CUT-OUT(S)


LEGEND: _____ POWER WIRING
 _____ CONTROL WIRING
 - - - - - WIRING SUPPLIED ONLY WHEN ASSOCIATED OPTION IS SUPPLIED

THIS DRAWING IS THE PROPERTY OF INDUSTRIAL ENGINEERING AND EQUIPMENT COMPANY INC. (INDEECO) AND IS LOANED UPON CONDITION THAT IT IS NOT TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART OR USED FURNISHING INFORMATION TO ANY PERSON WITHOUT WRITTEN CONSENT OF INDEECO, OR FOR ANY PURPOSE DETRIMENTAL TO THEIR INTEREST, AND TO BE RETURNED UPON REQUEST.

INDEECO
 425 HANLEY INDUSTRIAL COURT
 ST. LOUIS, MO 63144 USA
 OFFICE: 314/644-4300
 FAX: 314/644-5332
 WWW.INDEECO.COM

USE COPPER SUPPLY WIRE SUITABLE FOR 75°C. (90°C IN CANADA). WIRE EXTERNAL CONTROL CIRCUIT PER CLASS 1, ARTICLE 725 OF NEC, AND/OR CLASS 1, SECTION 16 OF CEC, EXCEPT THE CLASS 2 CIRCUIT(S) SHOWN ABOVE.
 UTILISEZ DU CONDUIT CAPABLE DE SUPPORTER 75°C. (90°C AU CANADA). CONNECTEZ LE CIRCUIT DE CONTROL EXTERNE EN SUIVANT CLASSE 1, ARTICLE 725 DE LA NEC, OU/ET CLASSE 1, SECTION 16 DE LA CEC (EXCEPTION: LE CIRCUIT DE CLASSE 2 DEJA MENTIONNE AU DESSUS)

NO. **L930N1:c24653-A-0**

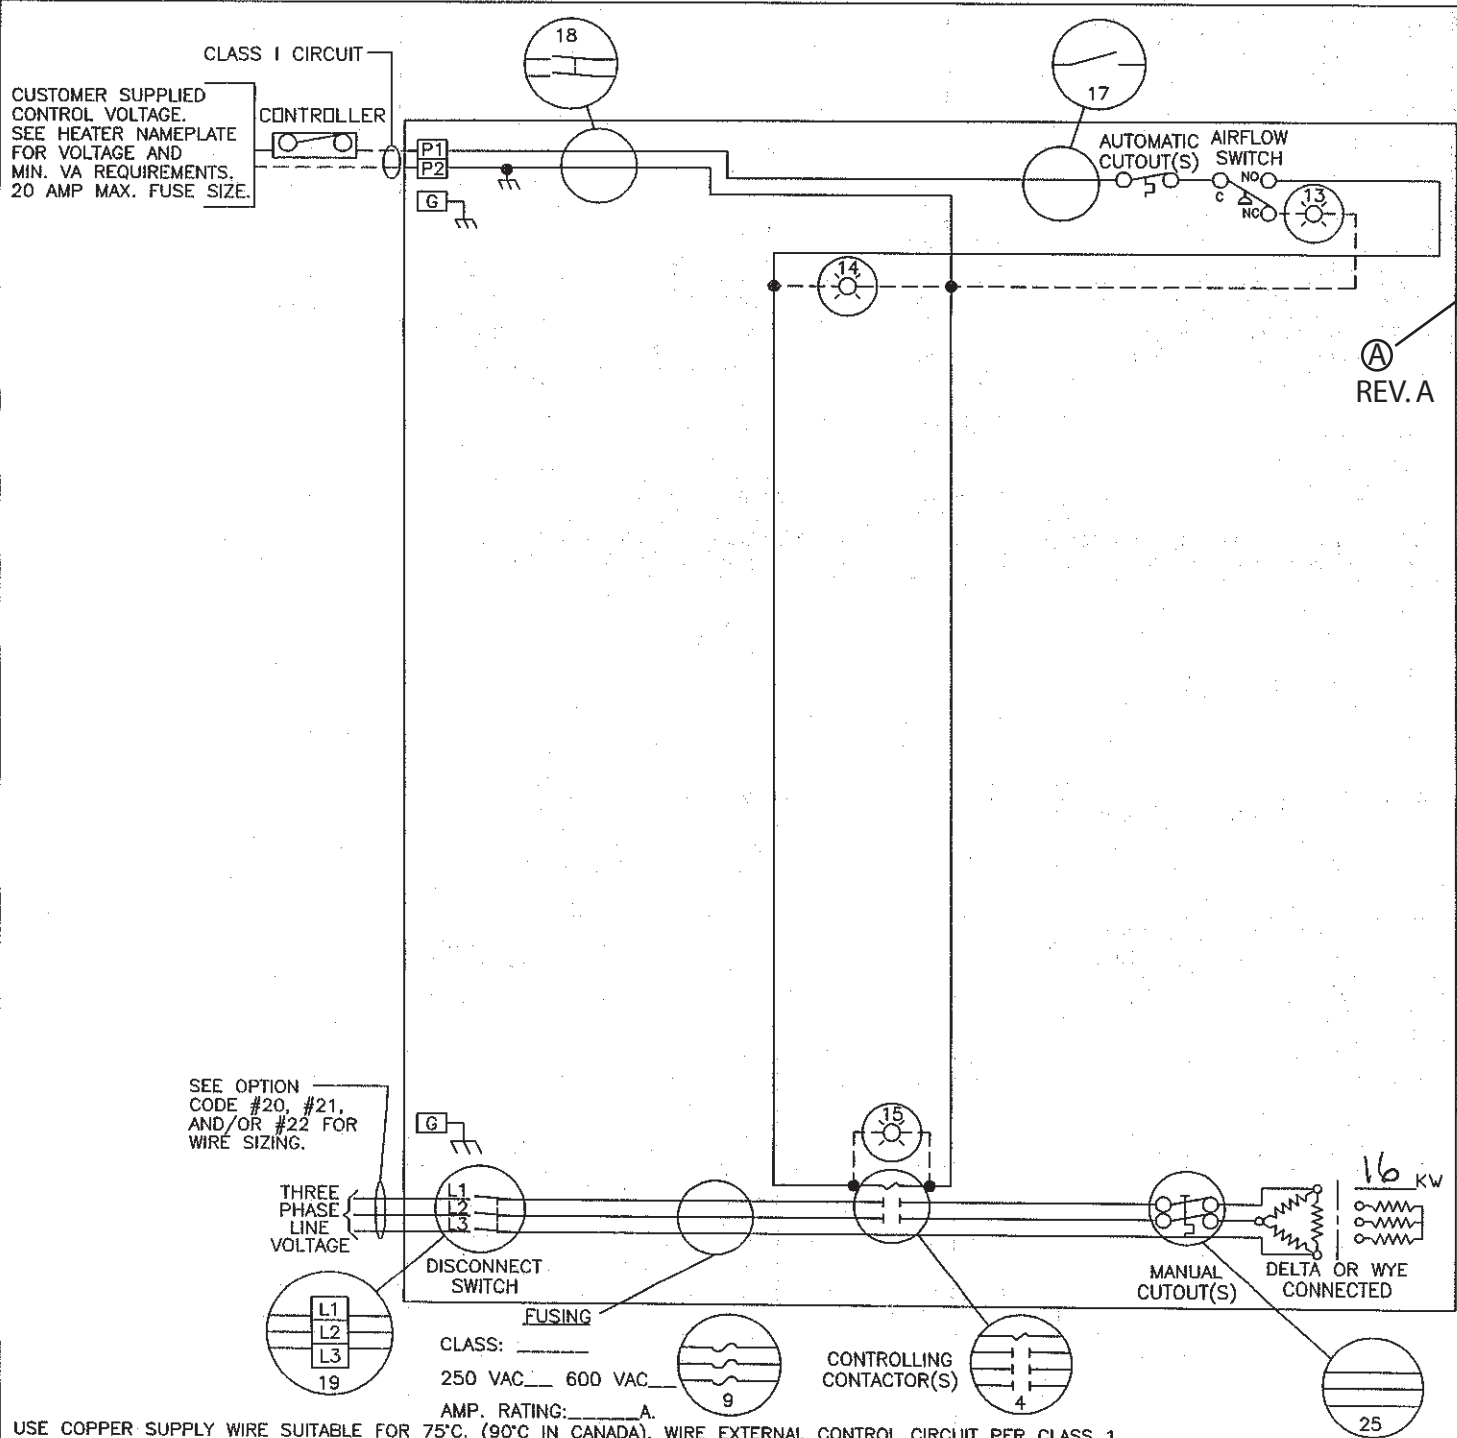

ITEMS WITHIN A CIRCLE MAY VARY OR MAY NOT BE SUPPLIED. SEE THE OPTION KEY BELOW WHICH INDICATES BY CHECK MARKS WHICH NUMBERED CIRCLES APPLY.

OPTION KEY
CHECK MARKS INDICATE WHICH CIRCLES APPLY

<input type="checkbox"/>	01 CONTROLLING CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	02 SAFETY CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	03 BACK-UP CONTACTOR(S) - 2 POLE
<input checked="" type="checkbox"/>	04 CONTROLLING CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	05 SAFETY CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	06 BACK-UP CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	07 SINGLE PHASE LINE FUSING (L1 ONLY)
<input type="checkbox"/>	08 SINGLE PHASE LINE FUSING (L1 & L2)
<input type="checkbox"/>	09 THREE PHASE LINE FUSING
<input type="checkbox"/>	10 PRIMARY TRANSFORMER FUSING - 1 LINE
<input type="checkbox"/>	11 PRIMARY TRANSFORMER FUSING - 2 LINE
<input type="checkbox"/>	12 SECONDARY TRANSFORMER FUSING
<input type="checkbox"/>	13 PILOT LIGHT - LOW AIRFLOW
<input type="checkbox"/>	14 PILOT LIGHT - HEATER ON
<input type="checkbox"/>	15 PILOT LIGHT - STAGE(S) ON
<input type="checkbox"/>	16 PILOT LIGHT - FAN ON
<input type="checkbox"/>	17 PILOT SWITCH
<input type="checkbox"/>	18 CONTROL CIRCUIT DISCONNECT SWITCH
<input checked="" type="checkbox"/>	19 NO DISCONNECT SWITCH
<input type="checkbox"/>	20 IF CHECKED, HEATER MAY BE WIRED WITH _____ AWG MIN. SUPPLY WIRE PER 424.22(d) NEC. IF THE HEATER IS CONTROLLED IN ONE OF THE FOLLOWING 3 WAYS (1) TWO OR MORE THERMOSTAT(S) (2) THERMOSTAT WITH 2 OR MORE STAGES (3) PROPORTIONING TYPE THERMOSTAT(S)
<input checked="" type="checkbox"/>	21 USE <u>10</u> AWG MIN. SUPPLY WIRE. <u>1</u> WIRE(S) PER PHASE.
<input type="checkbox"/>	22 UTILISER UN CABLE D'ALIMENTATION D'AU MOINS _____ AWG. _____ CONDUCTEUR(S) PAR PHASE.
<input checked="" type="checkbox"/>	23 CLASS 1 CIRCUIT
<input type="checkbox"/>	24 CLASS 2 CIRCUIT
<input type="checkbox"/>	25 NO MANUAL CUT-OUT(S)

LEGEND: _____ POWER WIRING
 _____ CONTROL WIRING
 WIRING SUPPLIED ONLY WHEN ASSOCIATED OPTION IS SUPPLIED


THIS DRAWING IS THE PROPERTY OF INDUSTRIAL ENGINEERING AND EQUIPMENT COMPANY INC. (INDEECO) AND IS LOANED UPON CONDITION THAT IT IS NOT TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART OR USED FURNISHING INFORMATION TO ANY PERSON WITHOUT WRITTEN CONSENT OF INDEECO, OR FOR ANY PURPOSE DETRIMENTAL TO THEIR INTEREST, AND TO BE RETURNED UPON REQUEST.



425 HANLEY INDUSTRIAL COURT
 ST. LOUIS, MO 63144 USA
 OFFICE: 314/644-4300
 FAX: 314/644-5332
 WWW.INDEECO.COM

USE COPPER SUPPLY WIRE SUITABLE FOR 75°C. (90°C IN CANADA). WIRE EXTERNAL CONTROL CIRCUIT PER CLASS 1, ARTICLE 725 OF NEC, AND/OR CLASS 1, SECTION 16 OF CEC, EXCEPT THE CLASS 2 CIRCUIT(S) SHOWN ABOVE.
 UTILISEZ DU CONDUIT CAPABLE DE SUPPORTER 75°C. (90°C AU CANADA). CONNECTEZ LE CIRCUIT DE CONTROL EXTERNE EN SUIVANT CLASSE 1, ARTICLE 725 DE LA NEC, OU/ET CLASSE 1, SECTION 16 DE LA CEC (EXCEPTION: LE CIRCUIT DE CLASSE 2 DEJA MENTIONNE AU DESSUS)

NO. L930N1:c24653-A-0

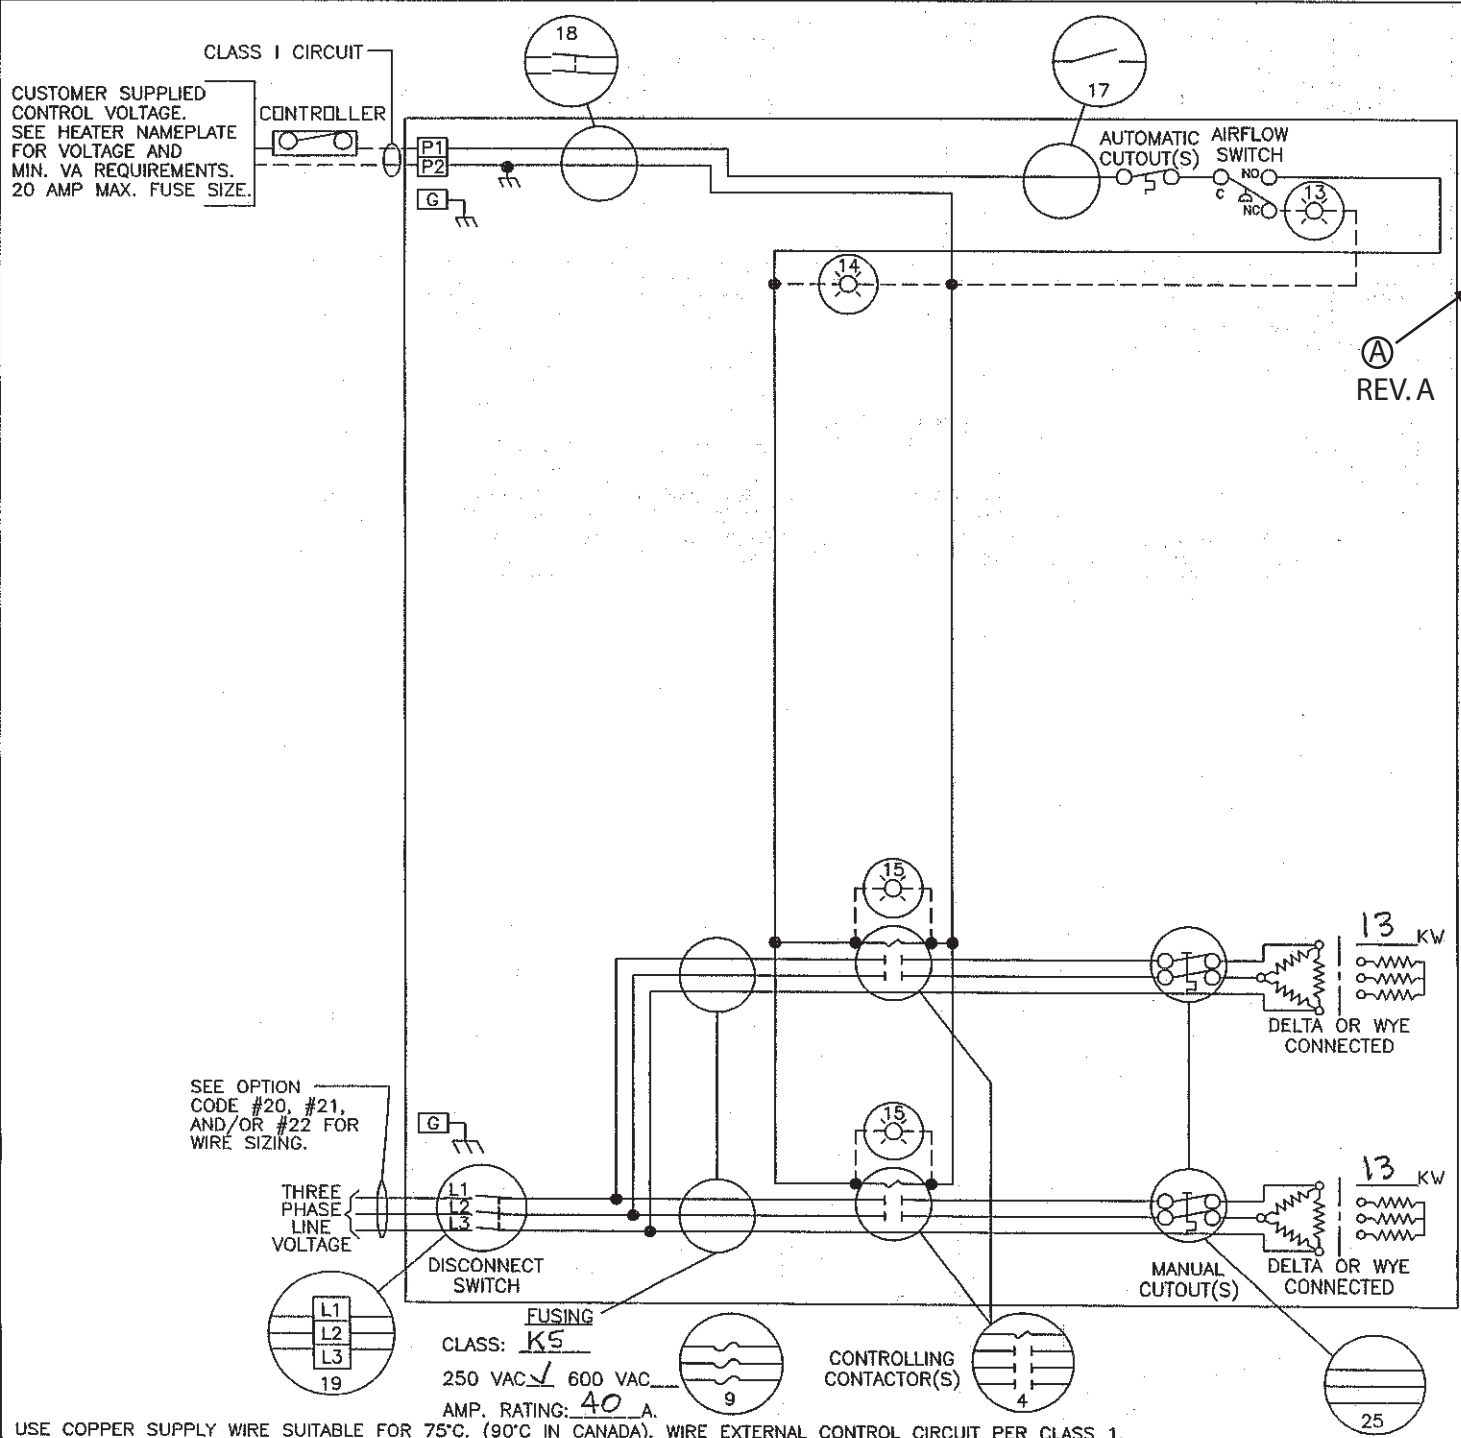

ITEMS WITHIN A CIRCLE MAY VARY OR MAY NOT BE SUPPLIED. SEE THE OPTION KEY BELOW WHICH INDICATES BY CHECK MARKS WHICH NUMBERED CIRCLES APPLY.

OPTION KEY -
CHECK MARKS INDICATE WHICH CIRCLES APPLY

<input type="checkbox"/>	01	CONTROLLING CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	02	SAFETY CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	03	BACK-UP CONTACTOR(S) - 2 POLE
<input checked="" type="checkbox"/>	04	CONTROLLING CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	05	SAFETY CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	06	BACK-UP CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	07	SINGLE PHASE LINE FUSING (L1 ONLY)
<input type="checkbox"/>	08	SINGLE PHASE LINE FUSING (L1 & L2)
<input checked="" type="checkbox"/>	09	THREE PHASE LINE FUSING
<input type="checkbox"/>	10	PRIMARY TRANSFORMER FUSING - 1 LINE
<input type="checkbox"/>	11	PRIMARY TRANSFORMER FUSING - 2 LINE
<input type="checkbox"/>	12	SECONDARY TRANSFORMER FUSING
<input type="checkbox"/>	13	PILOT LIGHT - LOW AIRFLOW
<input type="checkbox"/>	14	PILOT LIGHT - HEATER ON
<input type="checkbox"/>	15	PILOT LIGHT - STAGE(S) ON
<input type="checkbox"/>	16	PILOT LIGHT - FAN ON
<input type="checkbox"/>	17	PILOT SWITCH
<input type="checkbox"/>	18	CONTROL CIRCUIT DISCONNECT SWITCH
<input checked="" type="checkbox"/>	19	NO DISCONNECT SWITCH
<input type="checkbox"/>	20	IF CHECKED, HEATER MAY BE WIRED WITH _____ AWG MIN. SUPPLY WIRE PER 424.22(d)NEC. IF THE HEATER IS CONTROLLED IN ONE OF THE FOLLOWING 3 WAYS (1)TWO OR MORE THERMOSTAT(S) (2)THERMOSTAT WITH 2 OR MORE STAGES (3)PROPORTIONING TYPE THERMOSTAT(S)
<input checked="" type="checkbox"/>	21	USE <u>4</u> AWG MIN. SUPPLY WIRE. <u>1</u> WIRE(S) PER PHASE.
<input type="checkbox"/>	22	UTILISER UN CABLE D'ALIMENTATION D'AU MOINS _____ AUG. _____ CONDUCTEUR(S) PAR PHASE.
<input checked="" type="checkbox"/>	23	CLASS 1 CIRCUIT
<input type="checkbox"/>	24	CLASS 2 CIRCUIT
<input type="checkbox"/>	25	NO MANUAL CUT-OUT(S)

LEGEND: _____ POWER WIRING
 _____ CONTROL WIRING
 - - - - - WIRING SUPPLIED ONLY WHEN ASSOCIATED OPTION IS SUPPLIED


THIS DRAWING IS THE PROPERTY OF INDUSTRIAL ENGINEERING AND EQUIPMENT COMPANY INC. (INDEECO) AND IS LOANED UPON CONDITION THAT IT IS NOT TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART OR USED FURNISHING INFORMATION TO ANY PERSON WITHOUT WRITTEN CONSENT OF INDEECO, OR FOR ANY PURPOSE DETRIMENTAL TO THEIR INTEREST, AND TO BE RETURNED UPON REQUEST.



425 HANLEY INDUSTRIAL COURT
 ST. LOUIS, MO 63144 USA
 OFFICE: 314/644-4300
 FAX: 314/644-5332
 WWW.INDEECO.COM

USE COPPER SUPPLY WIRE SUITABLE FOR 75°C. (90°C IN CANADA). WIRE EXTERNAL CONTROL CIRCUIT PER CLASS 1, ARTICLE 725 OF NEC, AND/OR CLASS 1, SECTION 16 OF CEC, EXCEPT THE CLASS 2 CIRCUIT(S) SHOWN ABOVE.
 UTILISEZ DU CONDUIT CAPABLE DE SUPPORTER 75°C. (90°C AU CANADA). CONNECTEZ LE CIRCUIT DE CONTROL EXTERNE EN SUIVANT CLASSE 1, ARTICLE 725 DE LA NEC, OU/ET CLASSE 1, SECTION 16 DE LA CEC (EXCEPTION: LE CIRCUIT DE CLASSE 2 DE'JA MENTIONNE AU DESSUS)

NO. L930N1:c24652-A-0

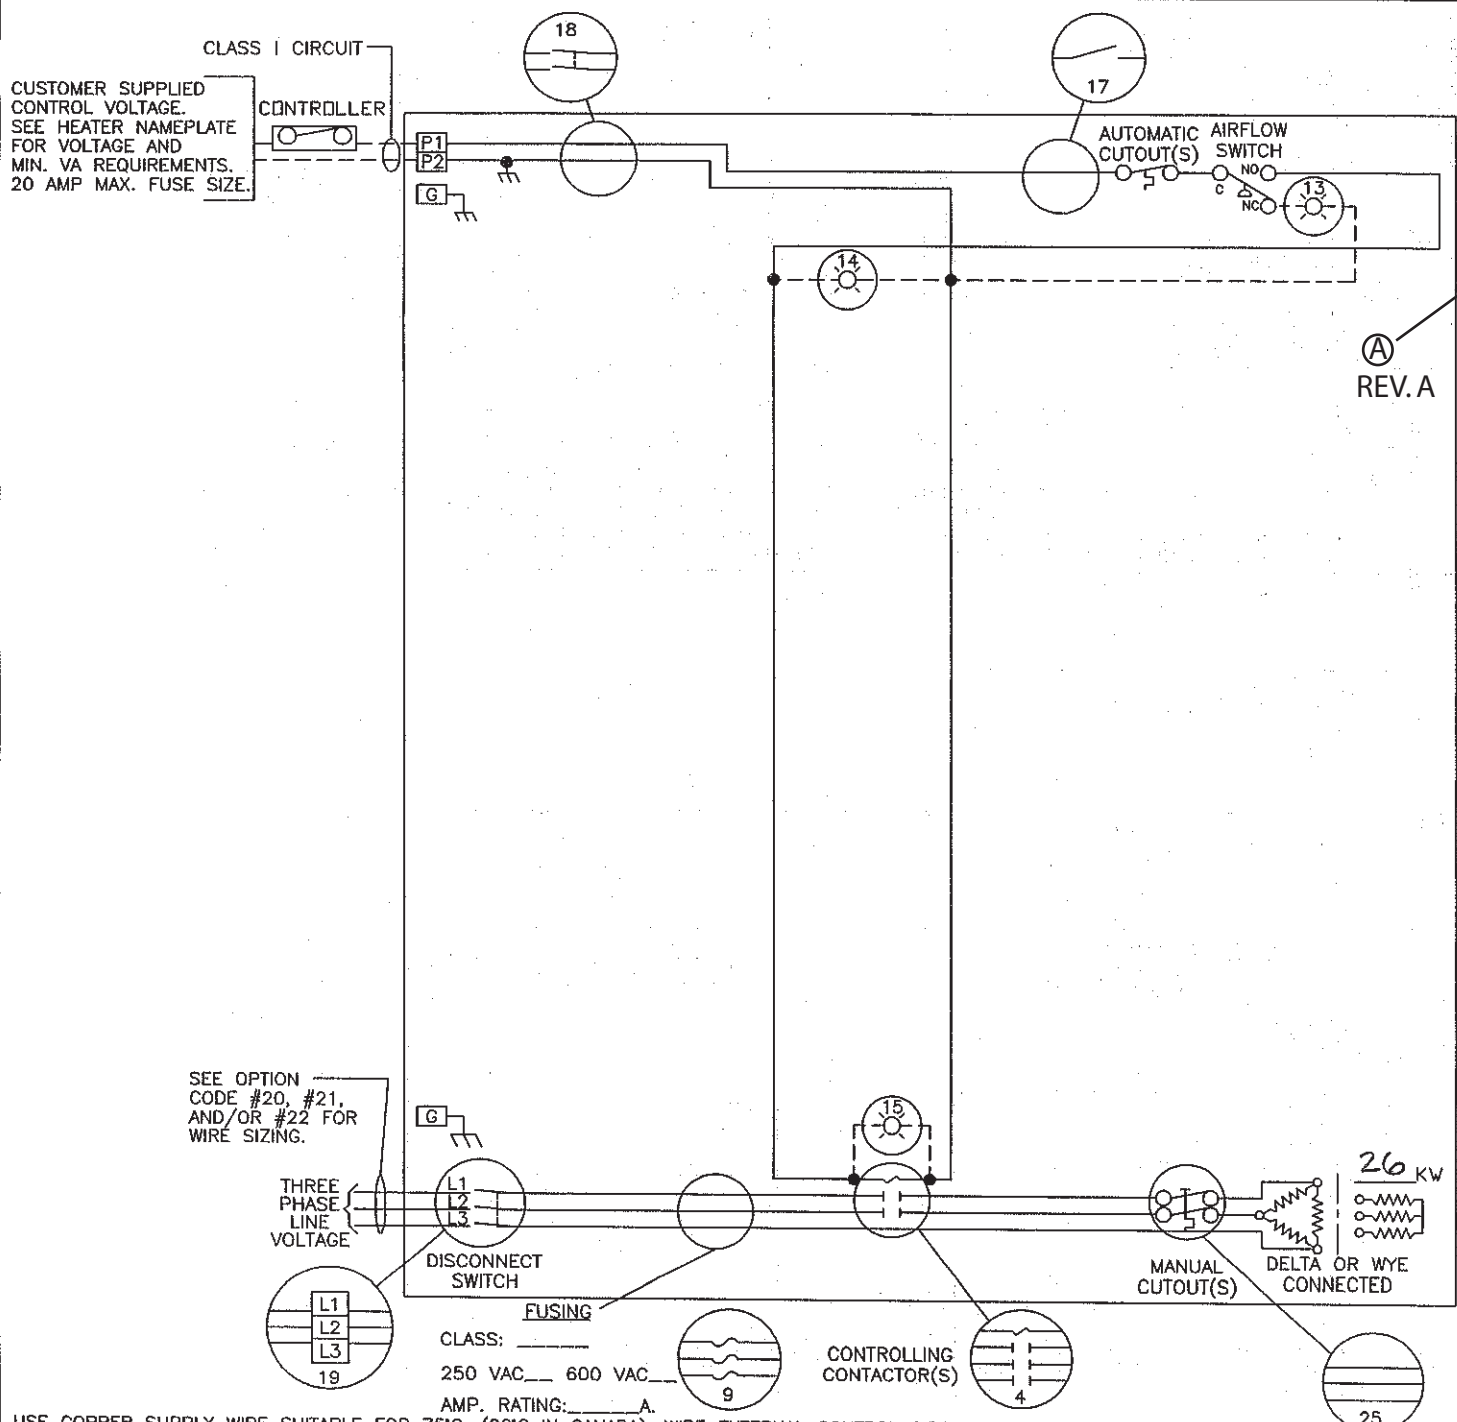

ITEMS WITHIN A CIRCLE MAY VARY OR MAY NOT BE SUPPLIED, SEE THE OPTION KEY BELOW WHICH INDICATES BY CHECK MARKS WHICH NUMBERED CIRCLES APPLY.

OPTION KEY — CHECK MARKS INDICATE WHICH CIRCLES APPLY.

<input type="checkbox"/>	01 CONTROLLING CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	02 SAFETY CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	03 BACK-UP CONTACTOR(S) - 2 POLE
<input checked="" type="checkbox"/>	04 CONTROLLING CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	05 SAFETY CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	06 BACK-UP CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	07 SINGLE PHASE LINE FUSING (L1 ONLY)
<input type="checkbox"/>	08 SINGLE PHASE LINE FUSING (L1 & L2)
<input type="checkbox"/>	09 THREE PHASE LINE FUSING
<input type="checkbox"/>	10 PRIMARY TRANSFORMER FUSING - 1 LINE
<input type="checkbox"/>	11 PRIMARY TRANSFORMER FUSING - 2 LINE
<input type="checkbox"/>	12 SECONDARY TRANSFORMER FUSING
<input type="checkbox"/>	13 PILOT LIGHT - LOW AIRFLOW
<input type="checkbox"/>	14 PILOT LIGHT - HEATER ON
<input type="checkbox"/>	15 PILOT LIGHT - STAGE(S) ON
<input type="checkbox"/>	16 PILOT LIGHT - FAN ON
<input type="checkbox"/>	17 PILOT SWITCH
<input checked="" type="checkbox"/>	18 CONTROL CIRCUIT DISCONNECT SWITCH
<input checked="" type="checkbox"/>	19 NO DISCONNECT SWITCH
<input type="checkbox"/>	20 IF CHECKED, HEATER MAY BE WIRED WITH _____ AWG MIN. SUPPLY WIRE PER 424.22(d)NEC. IF THE HEATER IS CONTROLLED IN ONE OF THE FOLLOWING 3 WAYS (1)TWO OR MORE THERMOSTAT(S) (2)THERMOSTAT WITH 2 OR MORE STAGES (3)PROPORTIONING TYPE THERMOSTAT(S)
<input checked="" type="checkbox"/>	21 USE <u>8</u> AWG MIN. SUPPLY WIRE. <u>1</u> WIRE(S) PER PHASE.
<input type="checkbox"/>	22 UTILISER UN CABLE D'ALIMENTATION D'AU MOINS _____ AUG. _____ CONDUCTEUR(S) PAR PHASE.
<input checked="" type="checkbox"/>	23 CLASS 1 CIRCUIT
<input type="checkbox"/>	24 CLASS 2 CIRCUIT
<input type="checkbox"/>	25 NO MANUAL CUT-OUT(S)

LEGEND: _____ POWER WIRING
 _____ CONTROL WIRING
 - - - - - WIRING SUPPLIED ONLY WHEN ASSOCIATED OPTION IS SUPPLIED


THIS DRAWING IS THE PROPERTY OF INDUSTRIAL ENGINEERING AND EQUIPMENT COMPANY INC. (INDEECO) AND IS LOANED UPON CONDITION THAT IT IS NOT TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART OR USED FURNISHING INFORMATION TO ANY PERSON WITHOUT WRITTEN CONSENT OF INDEECO, OR FOR ANY PURPOSE DETRIMENTAL TO THEIR INTEREST, AND TO BE RETURNED UPON REQUEST.



425 HANLEY INDUSTRIAL COURT
 ST. LOUIS, MO 63144 USA
 OFFICE: 314/644-4300
 FAX: 314/644-5332
 WWW.INDEECO.COM

USE COPPER SUPPLY WIRE SUITABLE FOR 75°C. (90°C IN CANADA). WIRE EXTERNAL CONTROL CIRCUIT PER CLASS 1, ARTICLE 725 OF NEC, AND/OR CLASS 1, SECTION 16 OF CEC, EXCEPT THE CLASS 2 CIRCUIT(S) SHOWN ABOVE.
 UTILISEZ DU CONDUIT CAPABLE DE SUPPORTER 75°C. (90°C AU CANADA). CONNECTEZ LE CIRCUIT DE CONTROL EXTERNE EN SUIVANT CLASSE 1, ARTICLE 725 DE LA NEC, OU/ET CLASSE 1, SECTION 16 DE LA CEC (EXCEPTION: LE CIRCUIT DE CLASSE 2 DE'JA MENTIONNE AU DESSUS)

NO. **L930N1:c24653-A-0**

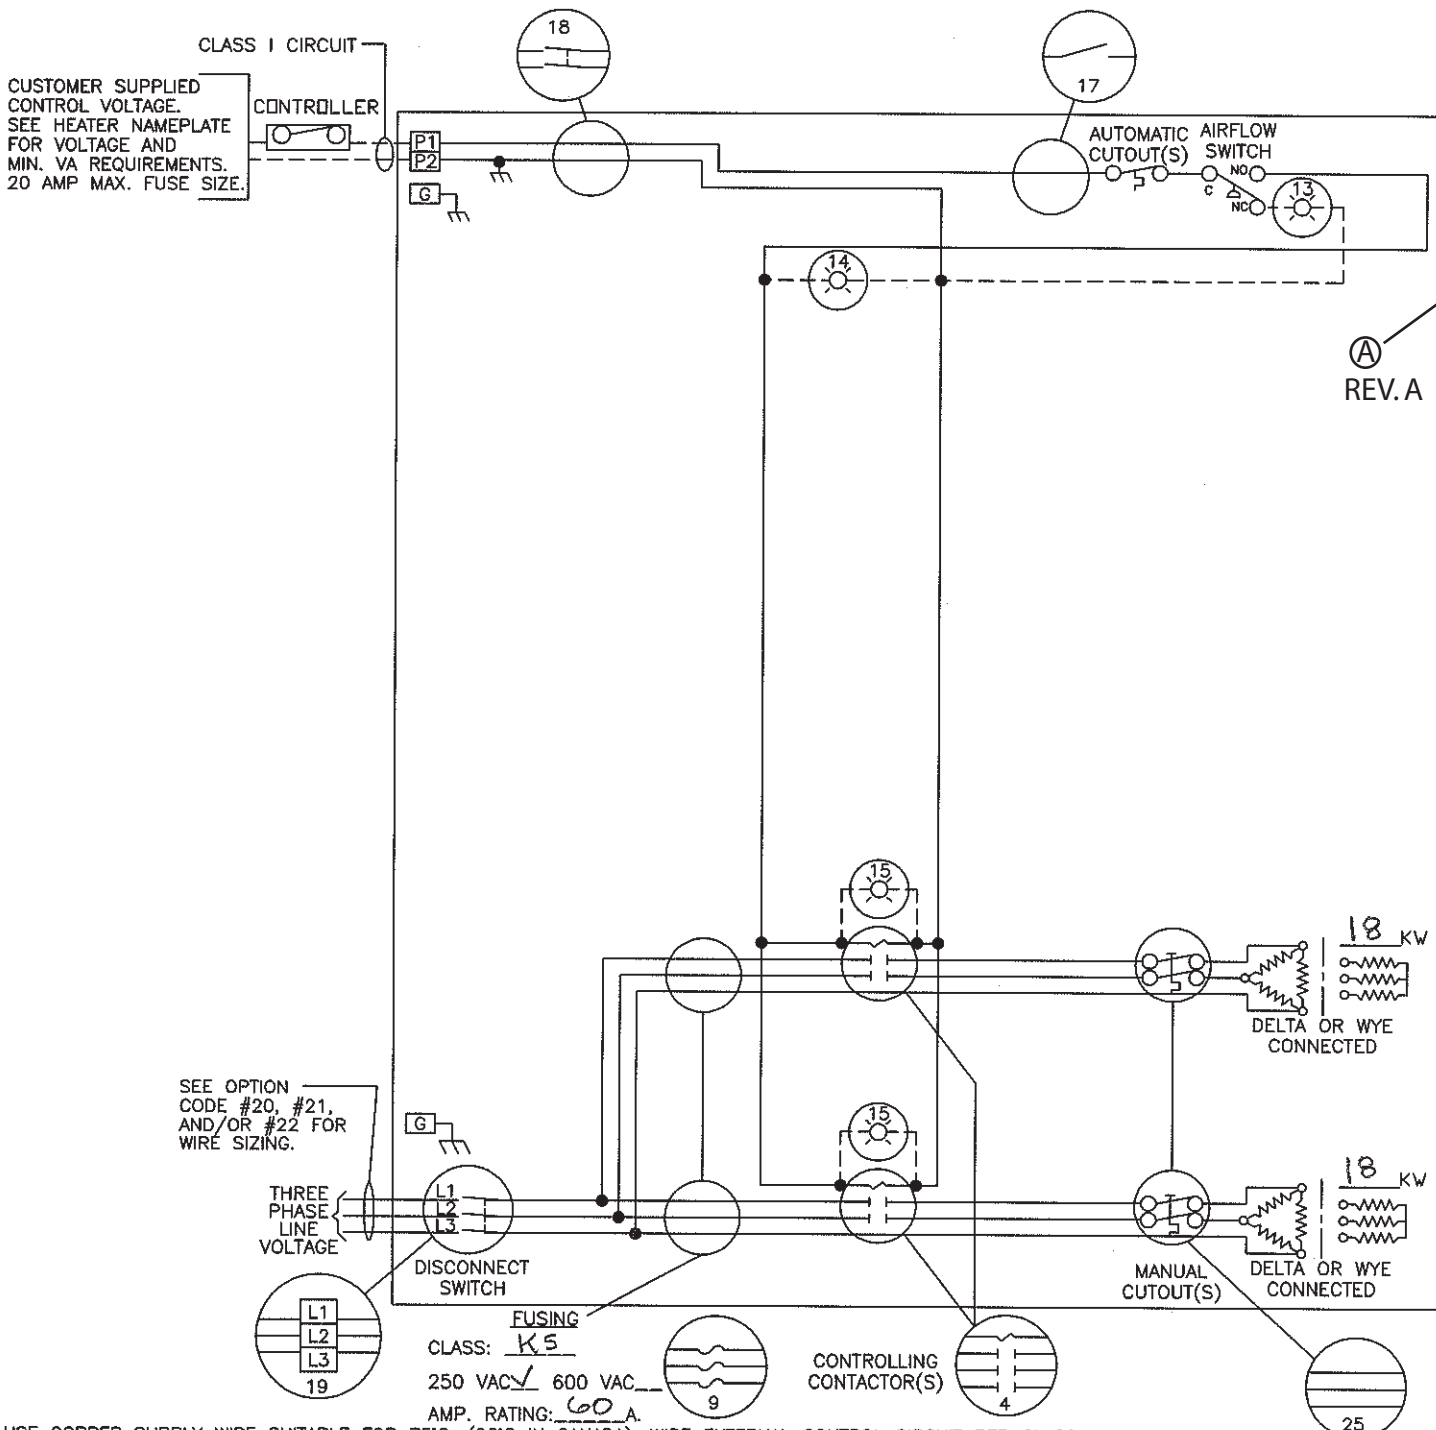

ITEMS WITHIN A CIRCLE MAY VARY OR MAY NOT BE SUPPLIED, SEE THE OPTION KEY BELOW WHICH INDICATES BY CHECK MARKS WHICH NUMBERED CIRCLES APPLY.

OPTION KEY — CHECK MARKS INDICATE WHICH CIRCLES APPLY

<input type="checkbox"/>	01	CONTROLLING CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	02	SAFETY CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	03	BACK-UP CONTACTOR(S) - 2 POLE
<input checked="" type="checkbox"/>	04	CONTROLLING CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	05	SAFETY CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	06	BACK-UP CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	07	SINGLE PHASE LINE FUSING (L1 ONLY)
<input type="checkbox"/>	08	SINGLE PHASE LINE FUSING (L1 & L2)
<input checked="" type="checkbox"/>	09	THREE PHASE LINE FUSING
<input type="checkbox"/>	10	PRIMARY TRANSFORMER FUSING - 1 LINE
<input type="checkbox"/>	11	PRIMARY TRANSFORMER FUSING - 2 LINE
<input type="checkbox"/>	12	SECONDARY TRANSFORMER FUSING
<input type="checkbox"/>	13	PILOT LIGHT - LOW AIRFLOW
<input type="checkbox"/>	14	PILOT LIGHT - HEATER ON
<input type="checkbox"/>	15	PILOT LIGHT - STAGE(S) ON
<input type="checkbox"/>	16	PILOT LIGHT - FAN ON
<input type="checkbox"/>	17	PILOT SWITCH
<input type="checkbox"/>	18	CONTROL CIRCUIT DISCONNECT SWITCH
<input checked="" type="checkbox"/>	19	NO DISCONNECT SWITCH
<input type="checkbox"/>	20	IF CHECKED, HEATER MAY BE WIRED WITH _____ AWG MIN. SUPPLY WIRE PER 424.22(d)NEC. IF THE HEATER IS CONTROLLED IN ONE OF THE FOLLOWING 3 WAYS (1)TWO OR MORE THERMOSTAT(S) (2)THERMOSTAT WITH 2 OR MORE STAGES (3)PROPORTIONING TYPE THERMOSTAT(S)
<input checked="" type="checkbox"/>	21	USE <u>2</u> AWG MIN. SUPPLY WIRE. <u>1</u> WIRE(S) PER PHASE.
<input type="checkbox"/>	22	UTILISER UN CABLE D'ALIMENTATION D'AU MOINS _____ AUG. _____ CONDUCTEUR(S) PAR PHASE.
<input checked="" type="checkbox"/>	23	CLASS 1 CIRCUIT
<input type="checkbox"/>	24	CLASS 2 CIRCUIT
<input type="checkbox"/>	25	NO MANUAL CUT-OUT(S)


LEGEND:
 ——— POWER WIRING
 - - - CONTROL WIRING
 - - - - - WIRING SUPPLIED ONLY WHEN ASSOCIATED OPTION IS SUPPLIED

THIS DRAWING IS THE PROPERTY OF INDUSTRIAL ENGINEERING AND EQUIPMENT COMPANY INC. (INDEECO) AND IS LOANED UPON CONDITION THAT IT IS NOT TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART OR USED FURNISHING INFORMATION TO ANY PERSON WITHOUT WRITTEN CONSENT OF INDEECO, OR FOR ANY PURPOSE DETRIMENTAL TO THEIR INTEREST, AND TO BE RETURNED UPON REQUEST.

INDEECO 425 HANLEY INDUSTRIAL COURT ST. LOUIS, MO 63144 USA
 OFFICE: 314/644-4300 FAX: 314/644-5332 WWW.INDEECO.COM

USE COPPER SUPPLY WIRE SUITABLE FOR 75°C. (90°C IN CANADA). WIRE EXTERNAL CONTROL CIRCUIT PER CLASS 1, ARTICLE 725 OF NEC, AND/OR CLASS 1, SECTION 16 OF CEC, EXCEPT THE CLASS 2 CIRCUIT(S) SHOWN ABOVE. UTILISEZ DU CONDUIT CAPABLE DE SUPPORTER 75°C. (90°C AU CANADA). CONNECTEZ LE CIRCUIT DE CONTROL EXTERNE EN SUIVANT CLASSE 1, ARTICLE 725 DE LA NEC, OU/ET CLASSE 1, SECTION 16 DE LA CEC (EXCEPTION: LE CIRCUIT DE CLASSE 2 DE'JA MENTIONNE AU DESSUS)

NO. L930N1:c24652-A-0

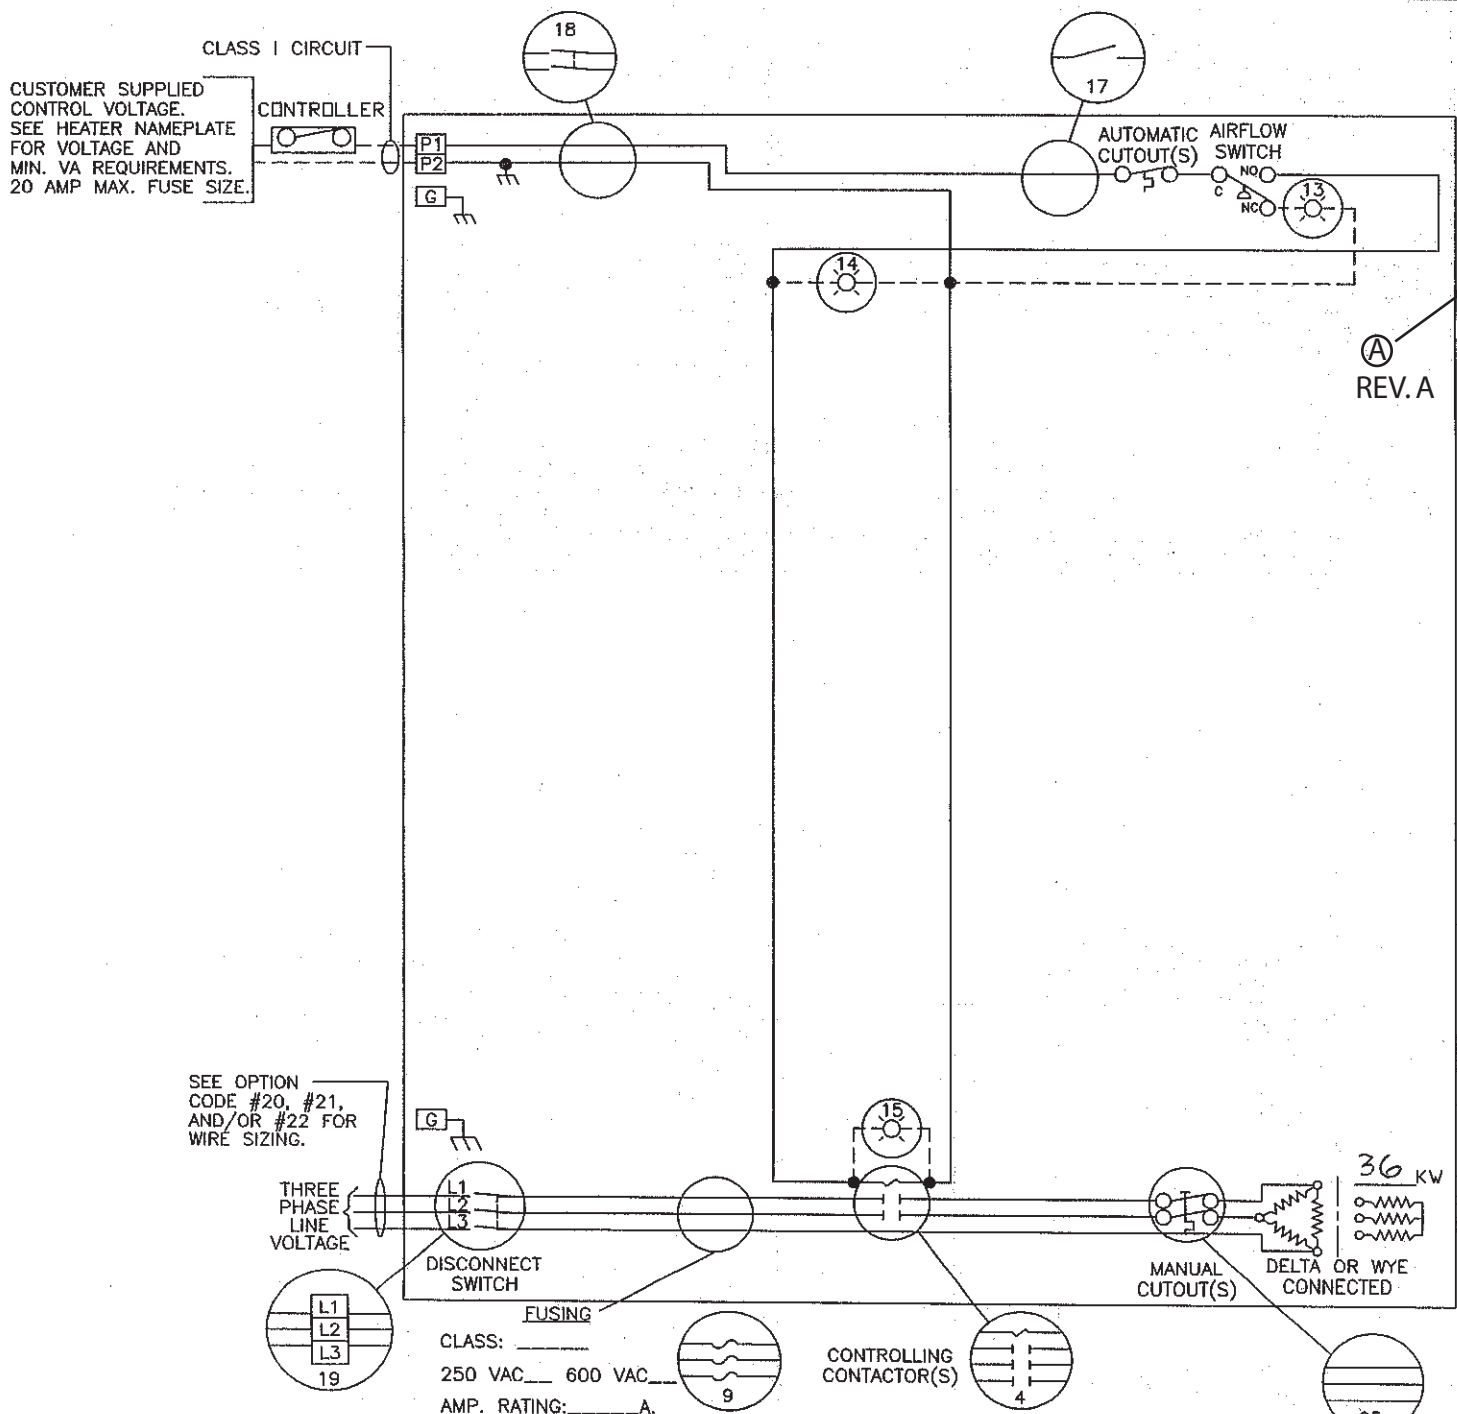

ITEMS WITHIN A CIRCLE MAY VARY OR MAY NOT BE SUPPLIED, SEE THE OPTION KEY BELOW WHICH INDICATES BY CHECK MARKS WHICH NUMBERED CIRCLES APPLY.

OPTION KEY — CHECK MARKS INDICATE WHICH CIRCLES APPLY

<input type="checkbox"/>	01 CONTROLLING CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	02 SAFETY CONTACTOR(S) - 2 POLE
<input type="checkbox"/>	03 BACK-UP CONTACTOR(S) - 2 POLE
<input checked="" type="checkbox"/>	04 CONTROLLING CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	05 SAFETY CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	06 BACK-UP CONTACTOR(S) - 3 POLE
<input type="checkbox"/>	07 SINGLE PHASE LINE FUSING (L1 ONLY)
<input type="checkbox"/>	08 SINGLE PHASE LINE FUSING (L1 & L2)
<input type="checkbox"/>	09 THREE PHASE LINE FUSING
<input type="checkbox"/>	10 PRIMARY TRANSFORMER FUSING - 1 LINE
<input type="checkbox"/>	11 PRIMARY TRANSFORMER FUSING - 2 LINE
<input type="checkbox"/>	12 SECONDARY TRANSFORMER FUSING
<input type="checkbox"/>	13 PILOT LIGHT - LOW AIRFLOW
<input type="checkbox"/>	14 PILOT LIGHT - HEATER ON
<input type="checkbox"/>	15 PILOT LIGHT - STAGE(S) ON
<input type="checkbox"/>	16 PILOT LIGHT - FAN ON
<input type="checkbox"/>	17 PILOT SWITCH
<input type="checkbox"/>	18 CONTROL CIRCUIT DISCONNECT SWITCH
<input checked="" type="checkbox"/>	19 NO DISCONNECT SWITCH
<input type="checkbox"/>	20 IF CHECKED, HEATER MAY BE WIRED WITH _____ AWG MIN. SUPPLY WIRE PER 424.22(d)NEC. IF THE HEATER IS CONTROLLED IN ONE OF THE FOLLOWING 3 WAYS (1)TWO OR MORE THERMOSTAT(S) (2)THERMOSTAT WITH 2 OR MORE STAGES (3)PROPORTIONING TYPE THERMOSTAT(S)
<input checked="" type="checkbox"/>	21 USE <u>6</u> AWG MIN. SUPPLY WIRE. <u>1</u> WIRE(S) PER PHASE.
<input type="checkbox"/>	22 UTILISER UN CABLE D'ALIMENTATION D'AU MOINS _____ AUG. _____ CONDUCTEUR(S) PAR PHASE.
<input checked="" type="checkbox"/>	23 CLASS 1 CIRCUIT
<input type="checkbox"/>	24 CLASS 2 CIRCUIT
<input type="checkbox"/>	25 NO MANUAL CUT-OUT(S)

LEGEND: _____ POWER WIRING
 _____ CONTROL WIRING
 - - - - - WIRING SUPPLIED ONLY WHEN ASSOCIATED OPTION IS SUPPLIED

THIS DRAWING IS THE PROPERTY OF INDUSTRIAL ENGINEERING AND EQUIPMENT COMPANY INC. (INDEECO) AND IS LOANED UPON CONDITION THAT IT IS NOT TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART OR USED FURNISHING INFORMATION TO ANY PERSON WITHOUT WRITTEN CONSENT OF INDEECO, OR FOR ANY PURPOSE DETRIMENTAL TO THEIR INTEREST, AND TO BE RETURNED UPON REQUEST.



425 HANLEY INDUSTRIAL COURT
 ST. LOUIS, MO 63144 USA
 OFFICE: 314/644-4300
 FAX: 314/644-5332
 WWW.INDEECO.COM

USE COPPER SUPPLY WIRE SUITABLE FOR 75°C. (90°C IN CANADA). WIRE EXTERNAL CONTROL CIRCUIT PER CLASS 1, ARTICLE 725 OF NEC, AND/OR CLASS 1, SECTION 16 OF CEC, EXCEPT THE CLASS 2 CIRCUIT(S) SHOWN ABOVE.
 UTILISEZ DU CONDUIT CAPABLE DE SUPPORTER 75°C. (90°C AU CANADA). CONNECTEZ LE CIRCUIT DE CONTROL EXTERNE EN SUIVANT CLASSE 1, ARTICLE 725 DE LA NEC, OU/ET CLASSE 1, SECTION 16 DE LA CEC (EXCEPTION: LE CIRCUIT DE CLASSE 2 DE'JA MENTIONNE AU DESSUS)

NO. L930N1:c24653-A-0